




https://rd1.sony.net/help/mdr/3004/h_zz/

A

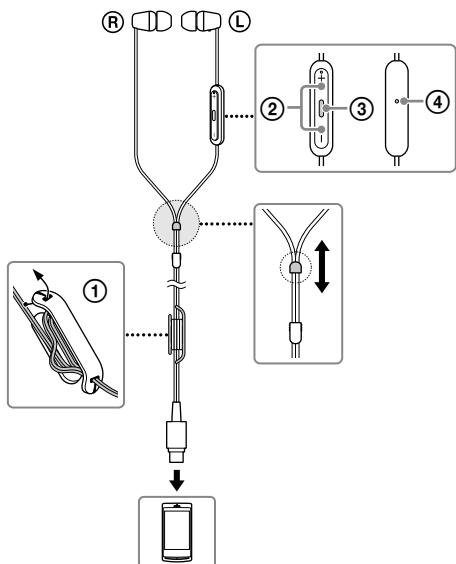

English

Stereo Headphones

Model: YY3004

The term "product" in this document refers to the unit or its accessories.

WARNING: Do not disassemble.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

Reduction in the Use of Hazardous Substances in Electrical & Electronic Equipment (Applicable in Republic of India)
This product and its components, consumables, parts or spares comply with the hazardous substances restriction of India's E-Waste (Management) Rules. The maximum allowable concentrations of the restricted substances are 0.1% by weight in homogenous materials for Lead, Mercury, Hexavalent Chromium, Polybrominated Biphenyls (PBB) and Polybrominated Diphenyl Ethers (PBDE), and 0.01% by weight in homogenous materials for Cadmium, except for the exemptions specified in Schedule II of the aforesaid Rules.

High volume may adversely affect your hearing.

Do not use the unit while walking, driving, or cycling. Doing so may cause traffic accidents.

Do not use in hazardous areas unless the surrounding sound can be heard.

If the earbud tips are not securely attached, they may fall off and remain inside the ear during use. Make sure that the earbud tips are securely attached before use.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

There is a danger that small parts may be swallowed. After use, store in a location out of reach of small children.

Note about static electricity

If you use the unit when the air is dry, you may experience discomfort due to static electricity accumulated on your body. This is not a malfunction of the unit. You can reduce the effect by wearing clothes made of natural materials that do not easily generate static electricity.



How to use (Fig. A)

- Cable adjuster**
Do not wind the plug and the split part of the cable around the cable adjuster.
- Volume +/-**
- Multi-function button**
- Microphone**

Operation / Operation details

You can use the multi-function button to perform the following operations.

Press once

During music playback: Play music/Pause

Incoming call: Respond to a call

During call: End a call

Press twice quickly

Skip to the beginning of the next track

Press 3 times quickly

Skip to the beginning of the previous track or the current track during playback

Press and hold

During music playback: Activate the voice assist function

Incoming call: Reject a call

During call:

Turn the microphone on/off, or turn the microphone off only while pressing and holding the button (Android™)*
Turn the microphones off only while pressing and holding the button (iPhone)

* Operation of the microphone on/off varies depending on the connected model.

Note

Depending on the connected device, OS, or the application software, the functions may not work properly or operations may differ. In that case, operate the connected device.

Precautions

The URL on the cover will help you access the help guide that describes useful notes or procedures in details.

- While connecting the USB cable, do not apply excessive force to the connection part.
- When connecting or disconnecting the USB cable, do not apply excessive force, such as by pulling the cable, and connect or disconnect the connector straight to the port to be connected.
- If the USB cable connector is deformed, such as by it being bent, stop use immediately.

Notes on wearing the unit

- After use, remove the headphones slowly.
- Because the earbud tips achieve a tight seal in the ears, forcibly pressing them in or quickly pulling them out can result in eardrum damage. When wearing the earbud tips, the speaker diaphragm may produce a click sound. This is not a malfunction.

Other notes

- If you experience discomfort while using the unit, stop using it immediately.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Specifications

Power source:

USB bus power compliant (5 V, 25 mA)

Operating temperature:

0 °C to 40 °C

Type:

Closed, dynamic

Driver unit:

5 mm

Cable:

Inline remote and microphone, approx. 1.2 m, USB Type-C® plug

Mass:

Approx. 3 g (without cable)

Included items:

Stereo Headphones (1)
Hybrid silicone rubber earbud tips (XS (2), M (2), XL (2))
Cable adjuster (1) (winds cable up to 50 cm)
Documents (1 set)

Design and specifications are subject to change without notice.

Trademarks

- Google and Android are trademarks of Google LLC.
- iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Licenses

- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

繁體中文

立體聲耳機

商品名稱：立體聲耳機

型號：YY3004

本文件中的用語“產品”是指裝置或其配件。

警語：請勿拆解

請勿將本產品安裝於密閉的空間內，例如書架或內建的櫥櫃內。

高音量可能會對您的聽力產生不良影響。

在走路、駕駛或騎單車時，請勿使用本裝置。否則可能發生交通意外。除非可以聽到周圍的聲音，否則請勿在有危險性的區域使用本裝置。

如果耳塞未牢固安裝，則在使用過程中可能會掉落並留在耳內。使用前，請確認已牢固安裝耳塞。

本產品有磁力，可能會干擾心律調節器、用於腦積水治療的可調式引流閥或其他醫療器材。請勿將本產品放在此類醫療器材使用者的附近。如果您使用任何此類醫療器材，請在使用本產品前諮詢您的醫生。

細小零件有遭到吞食的危險。使用本裝置後請存放在兒童無法觸及之處。

關於靜電的附註

如果在空氣乾燥的情況下使用本裝置，由於人體積聚靜電，您可能會感到不適。這並非本裝置故障。您可以穿著不易產生靜電的天然材質製成的衣服來降低這種效果。

使用方法 (圖 A)

- 連接線長度調節器
請勿將插頭和連接線的分隔部分繼續在連接線長度調節器上。
- 音量 +/-
- 多功能按鈕
- 麥克風

操作/操作詳情

可以使用多功能按鈕執行以下操作。

按一下

音樂播放期間：播放音樂/暫停

來電：接聽來電

通話期間：結束通話

快速按兩次

跳至下一首曲目的開頭

快速按3次

跳至上一首曲目或播放時為目前曲目的開頭

按住

音樂播放期間：啟動語音輔助功能

來電：拒絕來電

通話期間：

開啟/關閉麥克風，或僅在按住按鈕時關閉麥克風 (Android™)*

僅在按住按鈕時關閉麥克風 (iPhone)

* 麥克風開啟/關閉的操作視所連接的型號而定。

註

依據連接的裝置、OS或應用軟體而定，功能可能無法正常運作或操作可能不同。在此情況下，請操作連接的裝置。

預防措施

封面上的URL可幫助您存取有詳細介紹注意事項或操作程序的說明指南。

- 連接USB連接線時，請勿對連接部分施加過大的力。
- 連接USB連接線或中斷連接線時，請勿施加過大的力，如拉扯連接線，應直接將連接器連接到要連接的連接埠或直接中斷連線。
- 如果USB連接線連接器變形，如彎曲，請立即停止使用。

配戴本機的注意事項

- 使用後請慢慢取下耳機。
- 因為耳塞在耳朵內形成密封狀態，如果將它們用力壓入，或快速將它們拉出，可能會損傷耳膜。
- 戴耳塞時，揚聲器膜片可能會發出喀喀聲。這並不是故障。

其他注意事項

- 如果您在使用本機後發生不適，請立即停止使用本機。
- 如果您有任何關於本機的疑問或問題而本說明書中並未提及，請洽詢鄰近的Sony經銷商。

規格

電源：

相容USB匯流排電源 (5 V, 25 mA)

操作溫度：

0 °C至40 °C

型式：

封閉式，動態

激勵單元：

5 mm

©2025 Sony Corporation
Printed in Vietnam



* 5 0 6 9 5 0 0 3 2 * (1)

