

Excelair

By Excelsior



ETF45RI
115cm
Tower Fan

INSTRUCTIONS

Important: Retain these instructions for future use.

SAFETY INSTRUCTIONS

Thank you for purchasing this fan. This product has passed through extensive quality assurance process. Every care has been taken to ensure that it reaches you in perfect condition.

INDOOR USE ONLY

Warning! When using electric appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and personal injury, including the following:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Read all these instructions before attempting to operate this product and save these instructions.

 
- The mains supply must conform to the specification shown on the rating plate on the back of the fan.
- Do not use the appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
- Do not introduce your fingers through the front case. Do not let children introduce any foreign body into the front case.
- Do not let hair, net curtains, tablecloth, clothes or curtains next to the openings of the fan. They could be drawn into the fan, causing damaged or injuries.
- Do not use the fan if the cord or plug are damaged, or if the fan is dropped or has been damaged in any way.
- Periodically check the electric cable of this fan. If the electric cable is damaged, it must be replaced by the manufacturer, its after-sales service or by a similar qualified person in order to avoid a danger.
- Do not use this fan in a damp area such as bathroom.
- Do not use this fan on a window.
- Do not use this fan with any semi-conductors speed control.
- The fan should not be operated without a base nor used laying on its side.
- Do not place the electrical cord under a cover. Do not overlay the cord with little covers or such element. Place the cord in an area where there is not any risk to trip over it.
- The fan must always be unplugged when not operating. To unplug the fan, all the switches must be on the position "OFF"; and then the plug can be disconnected.
- Do not operate the fan in an area where gasoline is used or stocked, painting or such flammable liquids.
- Use this fan only as it is describe in this manual.
- Do not try to repair this fan yourself, there are no pieces that can be repaired by the user. If you need maintenance, please send back the fan to the agent.
- No part of this fan must be replaced by the user.
- The fan should not be opened by user.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The fan **MUST NOT** be earthed.
- **Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.**

NOTE: There are no serviceable parts in this unit. Do not attempt to disassemble.

WARNING: Never use this fan with any solid-state speed control device. Doing so will create fire and/or shock hazards.

PARTS OF THE FAN

1. Top control panel
2. Display
3. Front cover
4. Back cover
5. Grille
6. Column
7. Base
8. Remote control

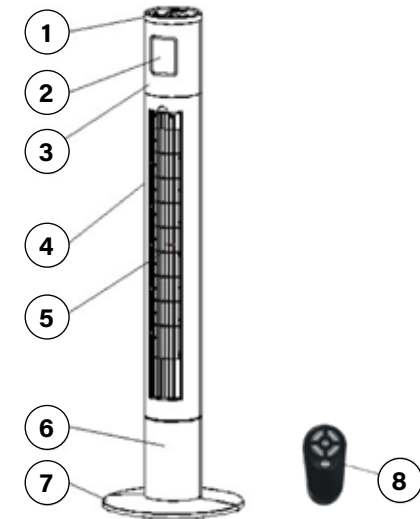


CAUTION: THIS FAN MUST OPERATE IN THE UPRIGHT POSITION ONLY. DO NOT LAY FAN ON ITS SIDE OR IN ANY OTHER POSITION. DOING SO MAY CAUSE DAMAGE TO THE FAN AND/OR PERSONAL PROPERTY. DO NOT USE THIS FAN WITHOUT ITS BASE.

ASSEMBLY INSTRUCTIONS

Remove all items of packing from the tower fan.

Assembling this Tower Fan is best with 2 people.

 1. Tip the Tower Fan upside down and have 1 person hold it securely. The second person will assemble the base.
2. Take the two pieces of the base and align them, ensuring that the four cylinders and four holes are properly positioned. Push the pieces together so that the base is even.
3. Keep the shiny side of the base facing down and push the power cable up through the hole in the centre of the base.
4. Screw the base assembly onto the tower fan with the supplied screws.
5. Position the power cord into the provided cord track in the rear base.
6. The tower fan is assembled, now gently turn the correct way up and position on a flat level surface.

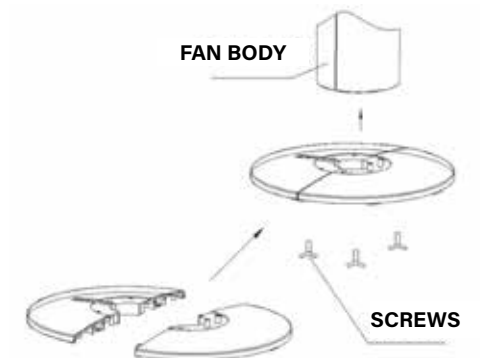

OPERATING INSTRUCTIONS

Use in a dry place, free of excessive humidity and water.

This unit can be operated by the control panel on the fan or by remote control in the same manner.

On/Off: Push the ON/OFF button to turn the fan to ON to an operating mode. Push again to turn the fan OFF to a standby mode.

 
Osc: Press the oscillation button to activate the oscillation function for widespread breeze distribution. Press again to turn the oscillation function off.

Timer: Press this button to activate the timer - off function. Each time the button is pressed the timer will be increased by 1 hour up to a maximum of 12 hours.

Speed: Choose from 3 comfort settings (HIGH, MED, LOW) by pressing this button until the speed you want is indicated on the display.

Mode: Choose from 3 different breeze patterns (Sleep, Nature, Normal) by pressing this button until the type of breeze desired is indicated on the display.

Ion: Press this button, product will clear and fresh the air. Press again to stop Ion function.

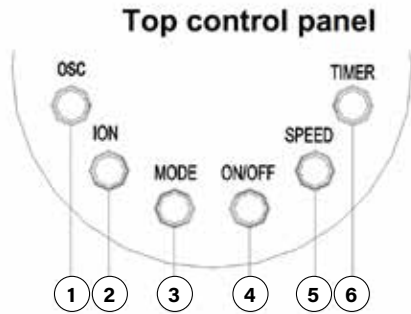

Display

1. ION
2. Sleep breeze
3. Natural breeze
4. Display room temperature or timer
5. Oscillation
6. Speed



GUIDELINES FOR USING THE REMOTE CONTROL

- The remote control function is the same as the control panel.
- The remote control must be pointed towards the receiver on the fan in order to work.
- The remote control may not operate in a room where heavy machine is operating.
- Do not block the line of sight between the remote control and the receiver.
- Handle the remote control with care. Do not drop the remote control on the floor or bang it against hard objects.

 
GUIDELINES FOR USE OF BATTERIES

- If the remote control will not be used for a long period of time, remove the batteries from the battery compartment.
- The remote control uses two AAA batteries, both of which should be new and replaced at the same time when they run out.
- Clean battery contacts and also those of the device prior to battery installation
- Ensure the batteries are installed correctly with regard to polarity, matching +/- sides of the battery to corresponding indications on the remote control.
- Remove used and dead/discharged batteries promptly.

CAUTION: TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

CLEANING INSTRUCTIONS

1. Always disconnect the cord from the electrical outlet before cleaning your fan.
2. Dust may be removed by using a vacuum cleaner along the back of the fan where the plastic grille covers the air intake.
3. Wipe the exterior surfaces of the fan occasionally with a damp cloth (not dripping wet) and dry thoroughly with a soft dry cloth before operating the fan.
4. Do not use harsh cleaners or materials to clean this unit, doing so will cause damage.
5. Unscrew the screw in front of fan grille, open the grille to clean the fan wheel softly. Please see below picture.
6. Ensure that the fan is switched off from the supply mains before removing the guard.

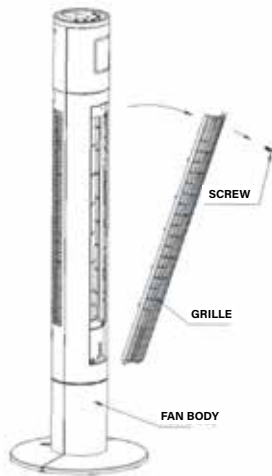

CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE FAN AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD. THE FAN MOTOR IS FACTORY LUBRICATED FOR LIFE AND WILL REQUIRE NO FURTHER LUBRICATION. NO OTHER USER MAINTENANCE IS REQUIRED OR RECOMMENDED. IF SERVICE IS REQUIRED, SEND YOUR FAN TO THE NEAREST AUTHORIZED SERVICE DEPOT.

To store:

1. Follow cleaning instructions 1-4 above.
2. Retain the original packaging to store your fan.
3. Always store in a dry place.
4. Never store while still plugged in.
5. Never wrap cord tightly around the fan or put any stress on the cord where it enters the fan as it could cause the cord to fray or break.

CARE AND MAINTENANCE

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the fan occasionally with a cloth moistened (Not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
4. Avoid the use of gasoline, benzene, thinner etc as they may result in damage to the fan.
5. Store the fan in a clean dry place when not in use.

CAUTION! DO NOT IMMERSE THE UNIT IN WATER OR ALLOW WATER TO DRIP INTO THE INTERIOR OF THE FAN HOUSING AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD.

WARNING! DO NOT ATTEMPT TO OPEN OR REPAIR THE UNIT YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

SPECIFICATIONS

MODEL No	ETF45RI
Voltage	220-240V / 50Hz
Watts	45W
Controls	Push Button and Remote Control
Dimensions (cm)	32 x 32 x 115
Settings	3 Modes (Normal, Natural, Sleep)
Oscillation	65° Oscillation
Warranty	1 Year
Certification	NSW29327

For any queries or assistance call



Customer Service
(Australia Only)

1300 174 876

Hours of operation:
Monday to Friday 8am - 5pm EST

Do not return to place of purchase.

Keep your purchase receipt, this will be required to
make any claims under the 12 month warranty.