

# **KitchenAid**

**CORDLESS BLADE COFFEE**

**GRINDER**

**5KBGR100A, 5KBGR111A**

**OWNER'S MANUAL**

# PRODUCT SAFETY

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put the Blade Coffee Grinder, USB Adapter, USB Cable, or Battery in water or other liquid.
- 3.** This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- 4.** Children should be supervised to ensure that they do not play with the appliance.
- 5.** Turn the appliance off (⏻), remove the Battery when not in use, before assembling or disassembling parts and before cleaning.
- 6.** Avoid contacting moving parts.
- 7.** Do not operate any appliance with a damaged Battery or charger or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair or adjustment.
- 8.** If the Battery is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 9.** The use of accessories/attachments not recommended or sold by the KitchenAid may cause fire, electric shock or injury to persons.
- 10.** Keep hands and utensils away from moving blade while grinding food to reduce the risk of severe injury to persons or damage to the Blade Coffee Grinder. A scraper may be used only when the Blade Coffee Grinder is not running.
- 11.** Blade is sharp. Care should be taken when emptying the Bowl and during cleaning.
- 12.** Be certain cover is securely locked in place before operating Blade Coffee Grinder.
- 13.** Do not attempt to defeat the cover interlock mechanism.

14. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
15. Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
16. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to Battery, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
17. Recharge only with the charger specified by KitchenAid. A charger that is suitable for one type of Battery may create a risk of fire when used with another Battery.
18. Use appliances only with KitchenAid 12 V Battery. Use of any other batteries may create a risk of injury and fire.
19. When the Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
20. Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
21. Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
22. Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.
23. Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.
24. Never service damaged Battery. Service of Battery should only be performed by the manufacturer or authorised service providers.

25. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
26. Check appliance for presence of foreign objects before using.
27. Do not use Coffee Grinder in rain or wet conditions. Do not expose to rain-store indoors.
28. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
29. Do not use the appliance for other than intended use.
30. Do not modify or attempt to repair the appliance or the Battery.
31. Do not operate Blade Grinder continuously for more than 30 seconds.
32. Remove empty batteries from the appliance and safely dispose.
33. Remove the Battery if the appliance is stored unused for a long period.
34. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
35. Remove rechargeable batteries from the appliance before charging.
36. **IMPORTANT:** Use only with approved USB Adapter by market.
37. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

## **SAVE THESE INSTRUCTIONS**

For complete details on product information, instructions and videos, including Guarantee information, visit

[www.kitchenaid.com.au](http://www.kitchenaid.com.au) or [www.KitchenAid.co.nz](http://www.KitchenAid.co.nz).

## ELECTRICAL REQUIREMENTS

### USB Adapter:

**Input:** 100–240 V~, 50–60 Hz, 0.5 A

**USB Output:** 5 VDC, 2 A

**Recommended ambient charging temperature:** 5–40°C

**External Battery (Lithium-ion):** 5KRB12A

**Nominal Voltage:** 10.8 VDC

**Maximum Voltage:** 12 VDC

**NOTE:** If the USB Adapter does not fit fully in the power source, contact a qualified electrician. Do not modify the USB Adapter in any way.

**NOTE:** Do not use or store batteries or products in locations where the temperature is less than 10°C or more than 40°C.

## LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

## GETTING STARTED

### BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

**NOTE:** Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

### BATTERY CHARGING

#### USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the USB Adapter into a power source.

## PRODUCT USAGE

### OPERATING BLADE COFFEE GRINDER

**NOTE:** Make sure the Battery is fully charged before using.

#### To Use Blade Coffee Grinder:

1. Make sure the inside of the Top Cover is free of coffee grinds or residue.
2. Place the Bowl in the grinder Base until it is seated properly.
3. Fill the Bowl to the desired amount of beans up to the MAX fill line.
4. Place the Top Cover onto the Bowl and twist clockwise (right) to lock. The Top Cover will click when locked into place.  
**NOTE:** Make sure both Top Cover and Bowl are in position; otherwise, the Coffee Grinder will not operate.
5. Insert the Battery on the Battery slot located at the back of the appliance, making sure it is aligned. The LED will light and display the Battery level for five seconds, then turn off.

6. Press down on the Button to start processing. For optimum grinding results, do not pulse the top Button. Continue grinding until all the beans are ground to the desired consistency.
7. To stop processing, release the Button.
8. Wait until the blade has stopped rotating and remove Top Cover.
9. Remove Bowl from the Motor Housing.
10. Pour out ground coffee. A scraper may be needed to remove residual coffee grounds from the Bowl.  
**NOTE:** If coffee grounds stick to sides of Bowl, use a utensil to remove grounds from Bowl when appliance is off and avoid fingers coming into contact with the blade.  
**NOTE:** The coffee grinder cup is not intended to grind spices.
11. Press and hold the Battery Unlock Button to remove the Battery.


## CARE AND CLEANING

**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.


1. Always remove the Battery from the Coffee Grinder before cleaning.
2. Remove the Bowl and Top Cover. Wash in hot, soapy water, rinse, and dry. Bowl and Top Cover can also be washed in the dishwasher (top rack only). After removing from the dishwasher, allow to cool before reassembling.
3. Wipe the Motor Housing clean with a damp, soft cloth.  
**NOTE:** Do not use abrasive cleaners. Do not immerse the Motor Housing in water.
4. Reassemble your Coffee Grinder after cleaning.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## CUSTOMER SERVICE

### In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

**NOTE:** All service should be handled locally by an Authorised KitchenAid Service Centre.

**Toll free number:** 1-800-990-990

**Phone number:** 02 49026500

### Address Australia:

KitchenAid Australia Pty Ltd

6-8 Billbrooke Close  
Cameron Park NSW 2285, Australia  
Phone: 1-800-990-990  
Mobile: 02 49026500  
Email: [enquiries@KitchenAid.com.au](mailto:enquiries@KitchenAid.com.au)

**In New Zealand:**

Website: [www.KitchenAid.co.nz](http://www.KitchenAid.co.nz)  
Email: [enquiries@KitchenAid.co.nz](mailto:enquiries@KitchenAid.co.nz)  
Phone: 0800 881 200

**In other countries:**

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For complete details on product information, instructions and videos, including Guarantee information, For more information, visit our website at: [www.KitchenAid.com.au](http://www.KitchenAid.com.au).

# **KitchenAid**

©2023 All rights reserved.