

Sound Bar

Reference Guide



https://rd1.sony.net/help/ht/2088/h_zz/

©2025 Sony Corporation
Printed in Vietnam
<https://www.sony.net/>



* 5 0 6 3 8 2 6 8 1 * (1)

BRAVIA Theatre Bar 6

Model: YY2088C/ YY2092C

Model: YY2088C/ YY2092C

The term "product" in this document refers to the unit or its accessories.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on the product.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.



CAUTION

Do not cover ventilation openings.

This unit is not intended to be used on soft surfaces (like bedding, blankets etc.).

For Remote Commander

CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to local rules and regulations.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are attached in the following locations:

- the bottom of the unit

This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

Reduction in the Use of Hazardous Substances in Electrical & Electronic Equipment (Applicable in Republic of India)

This product and its components, consumables, parts or spares comply with the hazardous substances restriction of India's E-Waste (Management) Rules. The maximum allowable concentrations of the restricted substances are 0.1% by weight in homogenous materials for Lead, Mercury, Hexavalent Chromium, Polybrominated Biphenyls (PBB) and Polybrominated Diphenyl Ethers (PBDE), and 0.01% by weight in homogenous materials for Cadmium, except for the exemptions specified in Schedule II of the aforesaid Rules.




How To Use

Installation, connection, and initial settings of the unit must be performed in accordance with the "Sony | BRAVIA Connect" app installed on your smartphone. For more information on how to use the unit, access the Help Guide from the URL on the cover of this document.

Mounting on a Wall

Refer to the Help Guide from the URL on the cover of this document for more details and other installation method.

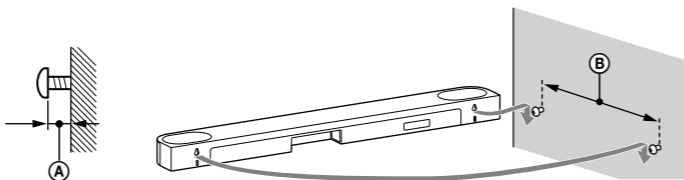

(A) Gap between the wall installation screw (not supplied) head and wall: 8.5 mm to 9.5 mm

(B) Distance between the screws for wall installation: 801 mm

Notes

- Hang the bar speaker horizontally on a reinforced wall.
- Ask a Sony dealer or licensed contractor to install the speakers securely and with full consideration of safety.
- Sony shall not be held responsible for any accidents or damage caused by improper installation, lack of installation stability, misuse, or natural disaster.
- For safety, at least two persons should work together to mount the bar speaker.
- Prepare screws (not supplied) suitable for the wall material and hardness. Depending on the wall material, screws that are not suitable may damage the wall.
- Fasten the screws securely into the wall beam.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
<https://rd1.sony.net/help/ht/sl/25/>
- The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL. You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL.
This offer is valid to anyone in receipt of this information.
<https://oss.sony.net/Products/Linux/>
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Precautions

On the power cord

- The supplied AC power cord (mains lead) is designed exclusively for this unit. It should not be used in combination with any other devices.
- Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
- AC power cord (mains lead) must be changed only at a qualified service shop.

On placement

- Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
- The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit or near it.
- Do not place metal objects other than a TV around the unit. Wireless functions may be unstable.

How to care for the unit

- You can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.
- Clean the unit with a soft, dry cloth. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine.

On BLUETOOTH® communications

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident:
 - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.

Other notes

- Place the unit in a location with adequate ventilation to prevent heat buildup and prolong the life of the unit.
- Do not splash water onto this product and the supplied accessories. Those are not waterproof.
- Do not insert foreign objects from the opening of the speaker unit.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Trademarks

- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- The terms HDMI™, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Specifications

Bar speaker (YY2088C1/ YY2092C1)

Amplifier section

POWER OUTPUT (rated)

Front L + Front R speaker blocks: 40 W + 40 W (at 6 Ω, 1 kHz 1% THD)
Center speaker block: 40 W (at 6 Ω, 1 kHz 1% THD)

Top L + Top R speaker blocks: 40 W + 40 W (at 6 Ω, 1 kHz 1% THD)

POWER OUTPUT (reference)

Front L/Front R speaker blocks: 50 W (per channel at 6 Ω, 1 kHz)

Center speaker block: 50 W (at 6 Ω, 1 kHz)

Top L/Top R speaker blocks: 50 W (per channel at 6 Ω, 1 kHz)

BLUETOOTH section

Frequency band

2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

USB section

↔ (USB) port

Type A (For software update only)

HDMI section

Connector

Type A (19pin)

General

Power

220 V - 240 V AC, 50 Hz/60 Hz

Power consumption

On: 35 W

Network standby mode ([Bluetooth Standby] is set to ON): 2.0 W or less

Standby mode ([Bluetooth Standby] is set to OFF): 0.5 W or less

When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the bar speaker automatically enters the network standby mode or standby mode.

Disabling the [Auto Standby] function will increase the power consumption of this product.

Dimensions (W x H x D)

Not including projection portion

Bar speaker: Approx. 950 mm × 64 mm × 110 mm

Bar speaker with the Foot: Approx. 950 mm × 77 mm × 110 mm

Mass

Bar speaker: Approx. 3.1 kg

Bar speaker with the Foot: Approx. 3.1 kg

Subwoofer (YY2088C2/ YY2092C2)

Amplifier section

POWER OUTPUT (reference)

100 W (at 4 Ω, 100 Hz)

General

Power

220 V - 240 V AC, 50 Hz/60 Hz

Power consumption

On: 20 W

Network standby mode (power indicator is lit in red): 2.0 W or less

Turned off (power indicator is off): 0.3 W or less

When you press and hold the LINK for 2 seconds or more and then release your finger, the speaker shifts to the power off mode and the power indicator is turned off. Press the LINK to use the speaker again.

When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the subwoofer automatically enters the network standby mode. Disabling the [Auto Standby] function will increase the power consumption of this product.

Dimensions (W x H x D)

Not including projection portion

Approx. 210 mm × 388 mm × 388 mm

Mass

Approx. 7.7 kg

Wireless transmitter/receiver section

Frequency band

2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

Included items

Bar speaker (1)

Subwoofer (1)

Remote control (1)

Battery (2)

WALL MOUNT TEMPLATE (Paper) (1)

Foot (2)

Screw (2)

HDMI cable (1)

AC power cord (mains lead) (2)

Documents (1 set)

Design and specifications are subject to change without notice.

