

VS
SASSOON



Curl Secret[®]

CORDLESS
ceramic auto curler

INSTRUCTION BOOKLET

Please ensure you read & follow the styling instructions
before using for the first time.

VSC1040A

NEVER UNDERESTIMATE THE POWER OF A WOMAN WITH GOOD HAIR

SEE AMAZING, BE AMAZING

Before using your Curl Secret® Cordless for the first time, scan the QR code to watch the how to use product video:





IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully & keep for future reference.

DANGER:

- Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water - keep the appliance dry.
- When this appliance is being recharged in a bathroom, immediately unplug it after charging given the proximity of water hazards are present even when the appliance is switched off.
- Do not immerse the appliance into water or other liquids.
- If this appliance falls into water whilst charging, unplug it immediately



DO NOT REACH INTO THE WATER.

- Do not use or leave the USB charging cable or adaptor in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water.
- This appliance is a burn hazard. Keep appliance out of reach from young children particularly during use & cool down.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

WARNING: Before & During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- It is suggested to recharge this appliance with the USB charging cable supplied. If using another charging cable, please use one that can be charged with a charging current of 2A or more.
- For adaptor, the appliance is only to be used with the power supply unit provided.
- When preparing the appliance for charging, be sure the USB-C input is plugged into the charging port on the bottom of the appliance before

plugging the USB charging cord into the charging adaptor and power outlet.

- When the appliance is charging, do not leave it unattended. Be sure to remove the charging adaptor from the power supply when the appliance is fully charged.
- Do not operate this appliance or disconnect the USB charging cable from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surfaces or near flammable materials or objects.
- Keep the USB charging cable away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch where the air openings may be blocked - keep the air openings free of lint & other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.
- This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face & neck. **THE CURL CHAMBER MAY BE HOT TO THE TOUCH.**
- Do not use extension cord with this appliance.
- Do not pull the USB charging cable directly.

NOTE:

- When using the appliance for the first time, a little smoke may appear with a distinct odour. This is common & will disappear by the next use.
- Each time you use the appliance, you may see some steam. Do not be concerned, this could be because of evaporation of the natural oils of the hair, residual hair products (leave-in hair products, etc.) or excess moisture evaporating from your hair.
- A heat-protection spray can be used to provide optimal protection of the hair.

WARNING: Storage & Maintenance

Always unplug the appliance immediately after it is recharged & before cleaning or maintenance.

Do not wrap the USB charging cable tightly around the appliance when storing. This causes undue strain on the charging cable & protective guard. Over time, this will damage the charging cable resulting in an unsafe condition to the user.

- If the USB charging cable is damaged, use another charging cable with a charging current of 2A or more.
- Do not leave the appliance unattended when charging.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer Service if you have any issues operating your appliance.

CAUTION:

- This appliance is not intended for use by infirm persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience & knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use & as described in this instruction booklet. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- When using with the charging adaptor, for additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom - ask your installer for advice.

- This appliance contains a lithium-ion battery that is non-replaceable.
- Avoid charging the battery at temperatures below 5°C or above 40°C.
- Avoid charging the battery in direct sunlight or near a radiating heat source.

BATTERY DISPOSAL:



Li-ion


- This appliance contains a Lithium Ion (Li-ion) rechargeable battery that must be removed before discarding the appliance.
 - To protect the environment, the appliance must be disposed of safely at the end of its useful life.
 - Please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about the recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.



WARNING: Battery can not be replaced. Do not attempt to take the appliance apart.

CURL SECRET® CORDLESS CERAMIC AUTO CURLER

AMAZING CHOICE!

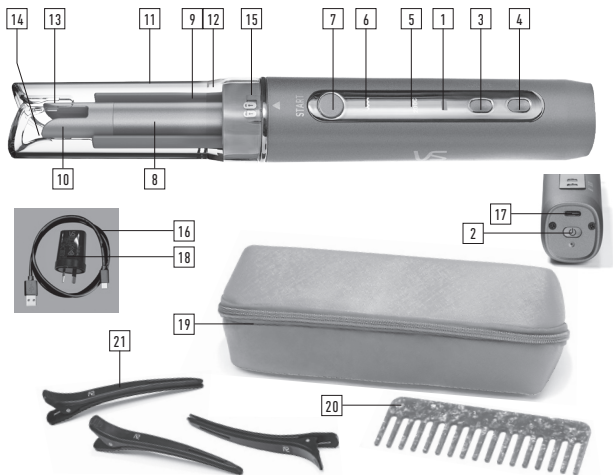The perfect curl or wave. Everytime. Hair goes in. Curl comes out. Just like magic! From the experts who revolutionized hair curling with the ORIGINAL auto curler in 2013, we proudly introduce the completely reimagined Curl Secret® - the dream tool for those seeking flawless, effortless curls & waves, every time. This game-changing technology takes the guesswork out of styling, allowing you to customize your curls & waves any way you like, for total foolproof styling. And with rechargeable, cordless technology you can experience for on-the-go styling, wherever you roam*.



1. Battery LED indicator
2.  button
3. **CURL TYPE** button
4.  button
5. LED control with 2 heat settings (180°C or 200°C)
6. LED control with 3 preset curl types (defined, loose, wavy)
7. **START** - curl activation button
8. Ceramic-coated barrel
9. Hair guide
10. Cool tip
11. Curl chamber
12. Detachable barrel cover
13. Short slot
14. Long slot
15. 2 cover locking positions so you can choose the most comfortable styling position with either your left or right hand
16. USB charging cable
17. USB-C charging port
18. Charging adaptor
19. Travel case
20. Wide-tooth comb
21. 3x firm grip sectioning clips





* In-use time will vary depending on the heat and curl type settings selected, as well as hair type. Always use USB charging cable & adaptor supplied.
Contains 1 rechargeable lithium-ion battery. Airline restrictions may apply.
Please check directly with the airline carrier before you travel.

CERAMIC TECHNOLOGY

Ceramic Technology helps keep your hair looking healthy & shiny by maintaining even heat during the curling process. Static is reduced by quickly sealing the hair cuticle layer ensuring minimal frizz making your hair easier to manage.

WORLDWIDE VOLTAGE

The Curl Secret® Cordless can be recharged with the USB charging cable via any USB powered port - laptop, desktop charger, car charger or with the charging adaptor supplied. If you choose to recharge overseas with the charging adaptor, a suitable plug adaptor will be required (refer to chart below), depending on the country you are in.

Plug adaptor required	Voltage and plug adaptors	Country
	British plug: 230V	Ireland, Great Britain, Singapore, South America, Hong Kong (parts only), Africa (parts only)
	European plug: 220V - 240V	Asia, Europe, Middle East Noumea, Scandinavia, South America, Hong Kong (parts only)
	Australian and New Zealand plug: 230-240V	Australia, New Zealand
	American plugs: 100-120V	North America, Japan, (parts of)

HOW TO USE THE CURL SECRET® CORDLESS CERAMIC AUTO CURLER

The Curl Secret® Cordless is a different type of styling tool & works differently to any other curling stylers you may have used in the past.

It is essential you read these instructions before use.

HOW-TO VIDEO

Before using your Curl Secret® Cordless for the first time, scan the QR code to watch the how to use product video:



IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low heat setting on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

CAUTION:

This is a high heat appliance. Care must be taken to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face & neck. **THE CURL CHAMBER MAY BE HOT TO THE TOUCH.**

Keep appliance out of reach from young children particularly during use & cool down. Never leave this appliance in a place where young children could access it.

BEFORE USING

- Remove all packaging & point of sale labels before use.

DO NOT USE THIS STYLER ON HAIR EXTENSIONS.

GETTING STARTED: CHARGING

The Curl Secret® Cordless is so easy to use. But before you start using your new styler you must take the time to **CHARGE FULLY OVERNIGHT BEFORE FIRST USE.**

1. Before use, plug the USB-C end of the charging cable into the charging port on the bottom of the styler. Then plug the USB cable into the USB port of the adaptor.
2. Plug your adaptor into a suitable household power outlet (100-240V - refer to WORLDWIDE VOLTAGE) & place on a heat protective, flat level surface.
3. Charge fully overnight before first use. The battery LED indicator will flash when charging. Once LED indicator turns solid, the styler is fully charged and ready to use.

NOTE - When the styler is charging, other functions are disabled. It is designed for cordless use only.

NOTE - The styler may become a little warm when charging or during use. This is normal.

CORDLESS USE - After the first overnight charge, the styler will take approximately 2.5 hours to fully charge before each use. This can provide up to 40mins cord-free usage time. In-use time will vary depending on the heat and curl type settings selected, as well as hair type.

NOTE - Charge time may vary depending on type of adaptor and power source being used.

PRESERVING THE BATTERY - In order to maintain the optimum capacity of the lithium-ion rechargeable battery, the styler should be recharged for 3 hours approximately every 3 months.

Even though the styler may not be used for an extended period of time if in storage, it should be recharged every 3 months for approximately 3 hours to preserve the battery life.

Do not leave lithium-ion battery unused for extended periods of time.

CHARGING TIPS

- Make sure the USB connector is pushed all the way into the USB-C input on the bottom of the styler.
- Make sure styler is completely cool before charging.

TANGLE-FREE TECHNOLOGY

Curl Secret® Cordless is safe & easy to use when used properly. However, should improper use occur, the tangle-free feature has been designed to immediately stop the appliance from drawing hair into the curl chamber & reverse to a neutral position.

IMPORTANT: If hair does get tangled, you will hear one long beep. Press the **START** button to stop the current curling operation.

Then work the hair out of the unit carefully. Using your fingers, slowly remove a few strands of hair at a time from the chamber. Make sure fingers do not come in contact with heated curl chamber.

MEMORY FUNCTION

The Curl Secret® Cordless features a memory function, which will automatically default to your previous heat & curl type settings from when it was powered off last time, saving time & hassle.

AUTOMATIC SHUT-OFF


The Curl Secret® Cordless has an automatic shut off feature for added safety and to preserve battery life.

If the styler is switched on and idle for more than 5 minutes, it will automatically shut off. This does not mean the battery is dead. If you want to continue using the styler after this time, simply press the **⏻** button to turn the power on again. The styler will default to the last settings used.

AIR TRAVEL

Please note that this styler contains a rechargeable lithium-ion battery and may be carried as part of your carry-on baggage. This is subject to the individual airline's discretion. We advise to check directly with the airline before you travel.

HEAT SETTINGS GUIDE




Press the  button repeatedly until desired temperature setting is reached. Choose from 200°C for thick hair or 180°C for medium/fine hair. The heat setting will blink until desired temperature is reached.

NOTE - Styler will power off if desired temperature is not selected within 5 seconds.

IMPORTANT: This is a high heat appliance at 200°C. If your hair has been heavily bleached or is chemically treated or you are concerned with the condition of your hair, please consult your hairdresser before using this appliance.

CURL TYPES GUIDE

Press the **CURL TYPE** button repeatedly to select the desired curl type. There are 3 preset curl types with rapid audio beeps to indicate when the curl is ready. Use the following as a guide:

CURL TYPE	RAPID AUDIO BEEPS
Defined 	Beeps after 12 seconds
Loose 	Beeps after 9 seconds
Wavy 	Beeps after 6 seconds

DETERMING THE CORRECT HAIR SECTION SIZE





The Curl Secret® Cordless is a different type of styling tool & works differently to any other curling stylers you may have used in the past. So before you start using it, familiarize yourself with the right size hair section depending on your length.

IMPORTANT: Do not start the curl any closer than 2cm to 4cm from the scalp, depending on how long your hair length is.

Comb through to remove any tangles & divide hair into sections no wider than 2.5cm (the smaller the section, the tighter the curls).

The short & long hair slots should help you to determine the optimum hair section. DO NOT try to jam larger sections into the hair slots, as this is improper use.

MIX & MATCH

style	temp	curl type	finishing
defined curls	200°C		let hair cool before gently shaking curls
classic curls	200°C		let hair cool before combing through with a wide-tooth comb
glam curls	180°C		let hair cool before using a paddle brush
soft, natural curls/waves	180°C		let hair cool before combing with a wide-tooth comb

OPERATING INSTRUCTIONS

Ensure your hair is clean, completely dry & free from hairspray. Hairspray may cause the hair to heat up to astronomical temperatures & stick like glue, in-turn creating difficulty to remove hair from the styler.



- 1. IMPORTANT - You must section your hair & comb through until its completely tangle-free before use.**

The secret to nailing your look is to create 3 sections.

This will ensure your style always looks consistent.

- a) Use the wide-tooth comb or fingers & create the top section, from temple to temple and clip away on top of the head with a sectioning clip.
- b) Create the middle section from ear to ear & clip away with a sectioning clip.
- c) The hair left down is your bottom section.
- d) Always start with the bottom section first & once completely styled as desired, unclip the middle section, style & then unclip the top section. When using the Curl Secret® Cordless you will need to divide the hair into smaller sections. Refer to **DETERMINING THE CORRECT HAIR SECTION SIZE** for more detail.

For more information on sectioning hair go to **vssassoon.com.au**.

2. Press the  button on the bottom of the styler to turn on styler & LED display. The battery LED indicator will illuminate.
3. Select your desired temperature setting by pressing the  button repeatedly until desired heat setting is selected. The heat setting will blink until desired temperature is reached.

 
NOTE - Styler will power off if desired temperature is not selected within 5 seconds.

4. Select your desired curl type by pressing the **CURL TYPE** button repeatedly to select desired curl.

5. Hold the styler vertically/upright with the short slot opening facing towards your head.
6. Place a section of hair in the short slot opening at the top of the styler making sure that all the hair is placed inside the top of the split barrel. (Fig. 1)
7. Guide the remaining section of hair down the long slot until it's below the * symbol & gently hold in place to ensure proper position for curling. Make sure 100% of the hair section is aligned along the slot and that there are no fray hair strands.



Fig. 1



IMPORTANT - Your hair may become tangled if these instructions are not followed or if any hair is held loosely & falls away without 100% of it entering the curl chamber at the same time.

8. Press the **START** button & watch the magic happen as your hair gently wraps around the barrel. (Fig. 2)
9. Hold the styler in place until you hear the rapid beeps (Fig. 3).
10. Pull the styler down & away to reveal the curl. (Fig. 4)
11. Allow your hair to cool before handling or combing.
12. Repeat all desired sections until you have the number of curls you would like. Use light hair spray to set the curls and maximize curl longevity.
13. After use, turn the styler off by pressing the **⏻** button. Allow to cool before storing away.



Fig. 2



Fig. 3



Fig. 4

CLEANING & MAINTENANCE

In order to prevent build-up of residue from hair products which could prevent the styler from working properly, it is important to clean the curl chamber regularly.

- Ensure the styler is switched off, unplugged from the power supply & completely cooled down.
- Twist off the detachable cover. Wipe curl chamber & cover with a soft, damp cloth.
- Allow cover & chamber to dry.
- Replace cover back on styler. Twist cover until it locks in place on styler.

LIMITED 2 YEAR WARRANTY

Retain this section of the warranty card with your receipt/proof of purchase. You must present it to obtain replacement or service under the warranty.

The warranty may only be claimed where proof of original purchase is presented, i.e. original purchase receipt or invoice.

Attach a copy of your purchase receipt and store in a safe place.

To make a warranty claim, call Customer Service on the phone number or email below. Or you can return the defective product back to the place it was purchased where it will be replaced (see point 12 of paragraph C. Conditions).

Please provide the following details:

1. Date of purchase
2. Retailer name & location:
3. Product name/model number:
4. Confirm you have your purchase receipt:
5. Detail the problem with your product:

Conair Australia Pty Ltd

PO Box 146
Terrey Hills
NSW 2084

Customer Service

Australia
1800 650 263
email: aus_info@conair.com

Conair New Zealand Ltd

PO Box 251159
Pakuranga, Auckland
New Zealand 2140

Customer Service

New Zealand
0800 266 247
email: aus_info@conair.com

WARRANTY AGAINST DEFECTS

A. AUSTRALIAN CONSUMER LAW

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The guarantees under the Australian Consumer Law (“ACL”) are provided in sections 51 to 59 inclusive of the ACL (“Statutory Guarantees”) and the remedies are provided in sections 259 to 266 inclusive of the ACL (Statutory Remedies).

B. VS SASSOON EXTENDED WARRANTY

1. In addition and subject to the Statutory Guarantees and Statutory Remedies, the following express warranty (“Warranty”) commences from the date of purchase and continues for a period of 24 months (“Warranty Period”) after which it expires. Subject to the conditions in Section C below, Conair warrants to the original purchaser (“Purchaser”) of the VS Sassoon product that is the subject of this warranty (“Product”) that if during the Warranty Period, the Product suffers from any defect caused by faults in materials or workmanship, Conair will a) replace the Product, or b) exchange defective parts in the Product or c) repair the Product, as Conair may choose in its discretion (“Warranty”). In this Warranty “Conair” means Conair Australia Pty Limited (ABN 64 068 492 044) of The Equinox Centre, Suite 101, 18 Rodborough Rd, Frenchs Forest, NSW, 2086. in relation to Products purchased in Australia and Conair New Zealand Ltd in relation to Products purchased in New Zealand.
2. To honour the Warranty, Conair must replace, or exchange parts in, or repair, the Product, as Conair determines, in accordance with paragraph B1 above, subject always to the conditions in Section C below.
3. If any of the conditions in Section C below are inconsistent with any provisions of the ACL or regulations made thereunder, those provisions of the ACL or regulations shall prevail to the extent of the inconsistency.

C. CONDITIONS

1. The Product must be used in accordance with manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Product be attributable to misuse, abuse, accident, act of God such as lightning, or nonobservance of manufacturer's instructions on the part of the user. This Warranty does not cover ordinary wear and tear in the Product or its parts.
2. Conair does not accept liability for a) any loss or damage however suffered, caused by or arising out of any failure to use the Product in accordance with the manufacturer's instructions, and b) any indirect, consequential or economic loss or damage however caused.
3. This Warranty is immediately void if - a) any serial number or appliance plate is removed or defaced, b) the Product has been serviced or otherwise repaired by a person not authorized to do so by Conair or where non approved replacement parts are used.
4. The Product is designed for domestic use only. The Product must be connected to the electrical voltage supply as specified in the ratings label located on the Product. This Warranty does not cover defects arising from non-domestic use or incorrect voltage supply.
5. This Warranty may only be claimed against where proof of original purchase is presented, for example, original receipt or invoice.
6. Any parts of the Product that need to be replaced, or if the whole Product needs to be replaced, the replaced Product, becomes the property of Conair. The Warranty on any replacement Product or parts will expire on the same date that the Warranty Period on the original Product expires.
7. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Product which the Purchaser has under the ACL, and applicable laws in New Zealand, which rights and remedies by law may not be excluded. All other warranties and representations express and implied are hereby excluded.
8. The defect must have occurred during the Warranty Period and Purchaser bears the onus of proving that fact, and that the defect was not caused by any of the causes excluded from this Warranty.

9. This Warranty does not cover Products purchased from any person who is not a retailer serviced by Conair's authorised distributors or purchased second hand.
10. The Purchaser is responsible for all postage and freight charges and any other expenses incidental to claiming against this Warranty.
11. The Warranty excludes consumable items (such as blades or brushes) and normal wear and tear.
12. If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this warranty you will need to present this portion of the warranty card and the purchase receipt as proof of purchase so please make sure you keep both this card and your receipt on hand for the duration of the warranty period.

SPARE PARTS

Replacement parts may be available for your product. Contact us on the phone or email address provided for more details. Please provide your product name/model number details, date of purchase and part you require.



Certain trademarks used under
license from The Procter & Gamble
Company or its affiliates.

©2024 Conair Australia Pty Ltd
Suite 101, 18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Conair New Zealand Limited
PO BOX 251159
Pakuranga, Auckland 1706
New Zealand

CONTACT US:

For advice, tips on your new VS
product
E-mail us on: aus_info@conair.com

CUSTOMER SERVICE:

Australia: 1800 650 263
New Zealand: 0800 266 247

vssassoon.com.au

VSC1040A

SEE
AMAZING
BE
AMAZING