


CALDO PLUS

10 WIFI

15 WIFI

20 WIFI



24 WIFI



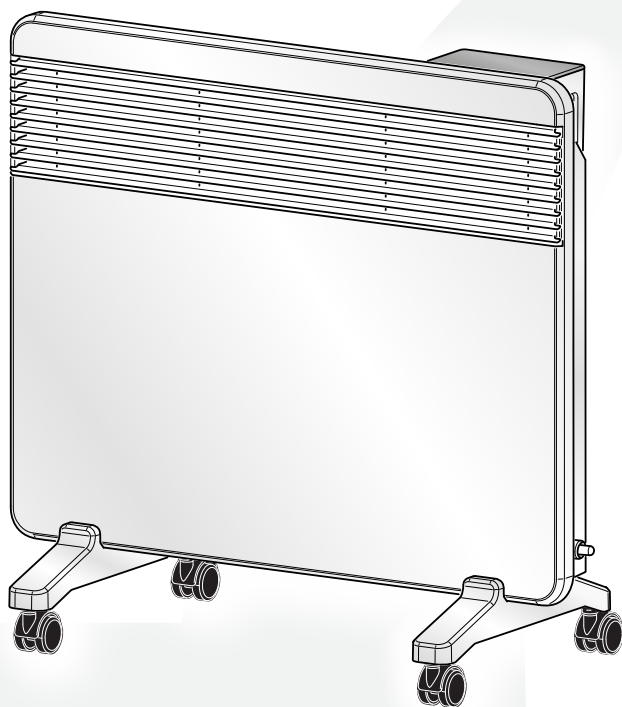


INSTRUCTION FOR USE AND MAINTENANCE **EN**














 **OLIMPIA
SPLENDID**
HOME OF COMFORT

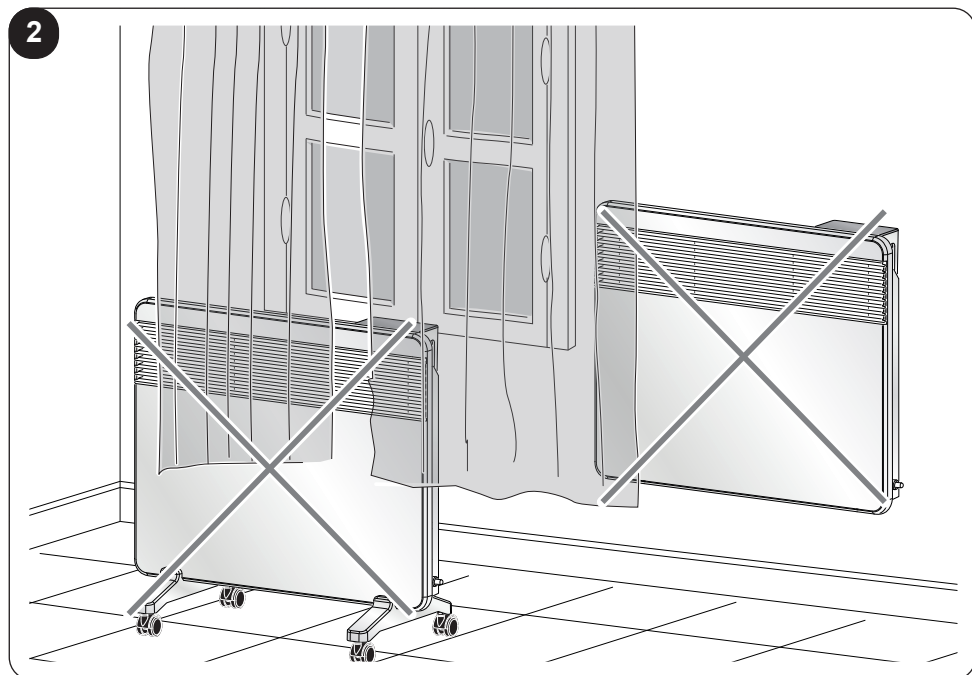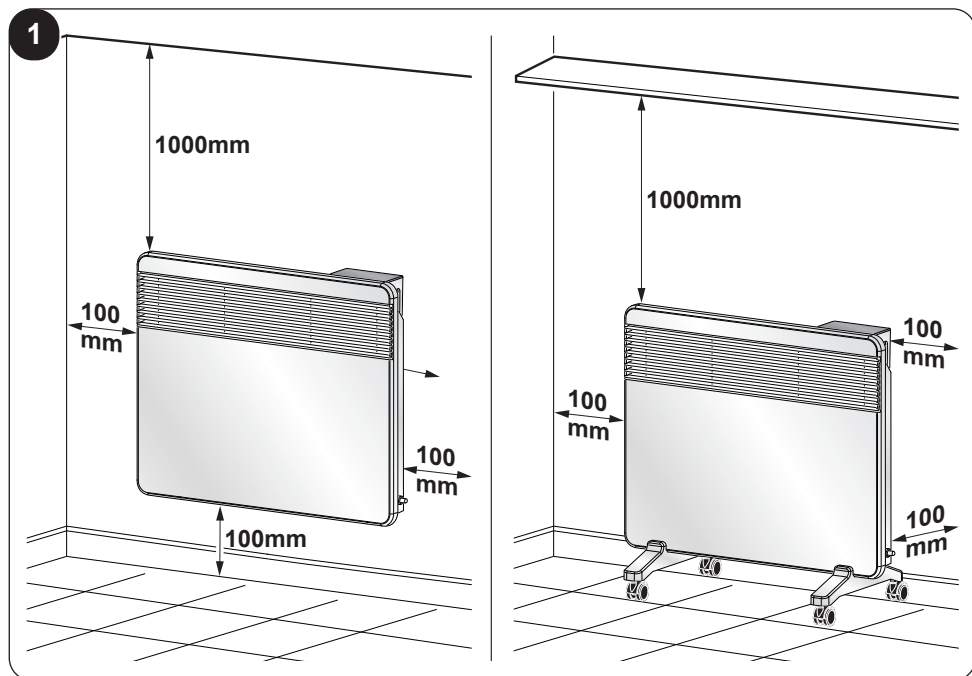

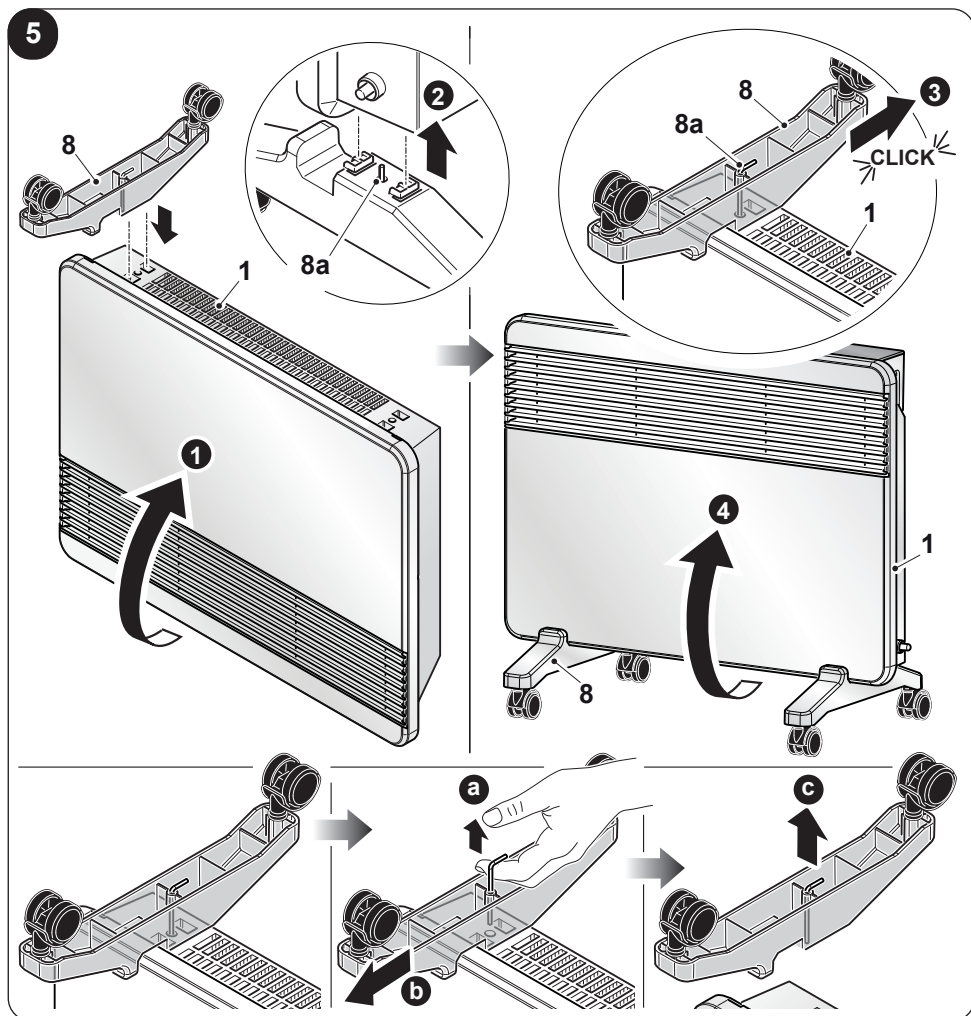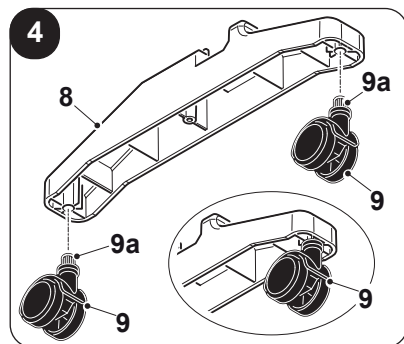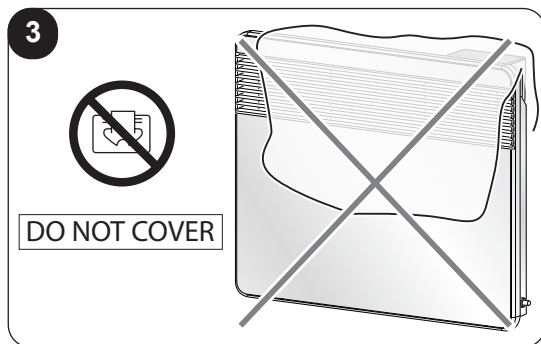

6

  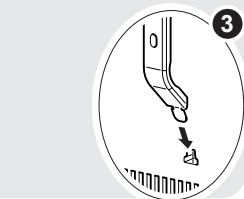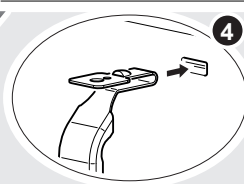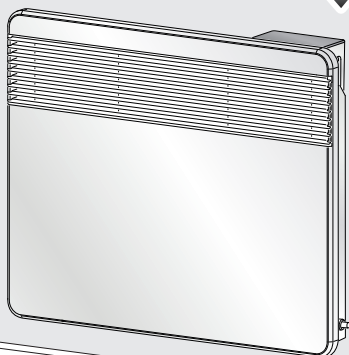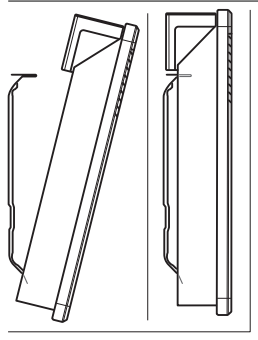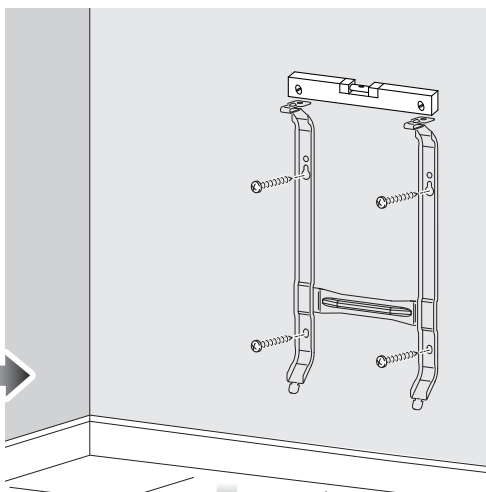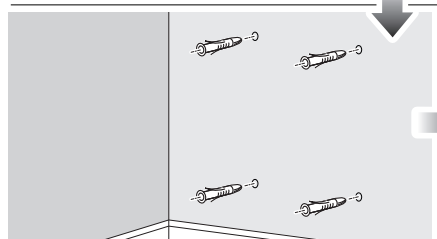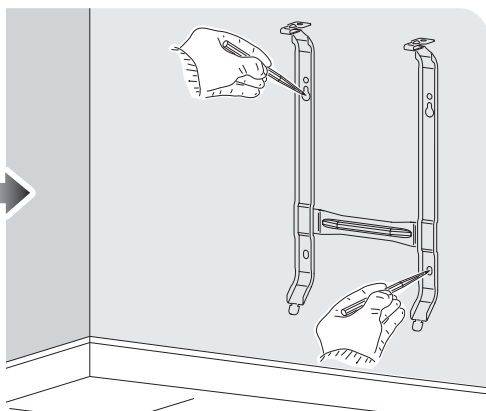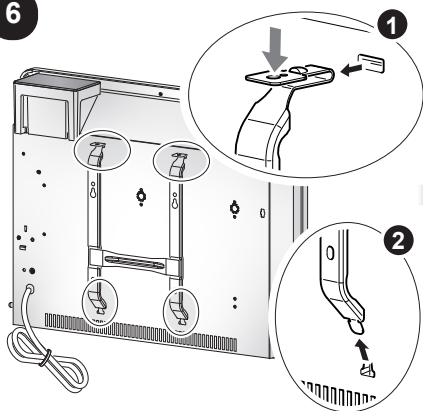

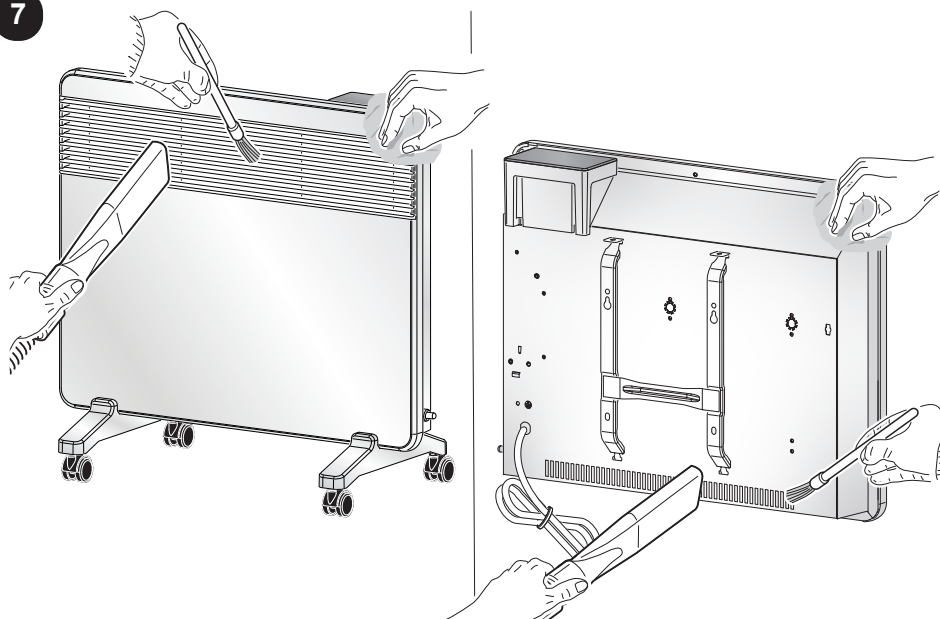

MAIN INDEX



0 - WARNINGS.....	1	4.3 - INSTRUCTIONS FOR OPERATION.....	9
0.1 - GENERAL INFORMATION.....	1	4.3.a - Switching on.....	9
0.2 - SYMBOLS.....	1	4.3.b - Selecting the operating mode.....	9
0.2.1 - Editorial pictograms.....	1	4.3.c - Heating power.....	10
0.3 - GENERAL WARNINGS.....	1	4.3.d - Temperature setting.....	10
0.4 - PROPER USE.....	5	4.3.e - "TIMER" mode.....	10
0.5 - UNINTENDED AND POTENTIALLY DANGEROUS USE.....	5	4.3.f - "Open window" mode.....	11
1 - DESCRIPTION OF THE APPLIANCE AND OF THE COMMANDS.....	6	4.3.g - Child-Lock.....	11
2 - SPECIFICATIONS.....	6	4.4 - WI-FI.....	11
2.1 - CIRCUIT DIAGRAM.....	6	4.4.a - Appliance connection.....	11
3 - INSTALLATION.....	7	4.4.b - App installation.....	11
3.1 - MOBILE INSTALLATION.....	7	4.4.b - Using the app.....	12
3.2 - WALL-MOUNTED.....	7	5 - OVERHEAT PROTECTION.....	13
4 - USE OF THE APPLIANCE.....	9	6 - SAFETY CONTROL	
4.1 - CONTROL PANEL.....	9	(anti-overturning switch).....	13
4.2 - USE OF THE APPLIANCE.....	9	7 - MAINTENANCE AND CLEANING.....	13
4.2.a - Preliminary operations.....	9	8 - PRESERVATION OF THE APPLIANCE.....	14
		9 - TROUBLESHOOTING.....	14

This product must be used exclusively according to the specifications indicated in this manual. Use different to that specified, could cause serious injuries. THE MANUFACTURER IS NOT LIABLE FOR INJURY/DAMAGE TO PERSONS/OBJECTS DERIVING FROM FAILURE TO COMPLY WITH THE REGULATIONS CONTAINED IN THIS MANUAL.

ILLUSTRATIONS

The illustrations are grouped on the initial pages of the manual



0 - WARNINGS

0.1 - GENERAL INFORMATION

First of all, we would like to thank you for choosing our appliance.

0.2 - SYMBOLS

The pictograms in the next chapter provide the necessary information for correct, safe use of the machine in a rapid, unmistakable way.

0.2.1 - Editorial pictograms

	Indicates that this document must be read carefully before installing and/or using the appliance.
	Indicates that this document must be read carefully before any maintenance and/or cleaning operation.
	Indicates that there may be additional information in attached manuals.
	Indicates that information is available in the user manual or in the installation manual.
	Indicates that the assistance personnel must handle the appliance following the installation manual.
	Signals to the personnel that the operation described could cause electrocution if not performed according to the safety rules.
	It informs the personnel concerned that if the operation is not carried out in compliance with the safety regulations, it presents the risk of suffering physical damage.
	It informs the personnel concerned that if the operation is not carried out in compliance with the safety regulations, it presents the risk of burns due to contact with components at very high temperatures.

0.3 - GENERAL WARNINGS

WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS MUST ALWAYS BE FOLLOWED IN ORDER TO REDUCE RISKS OF FIRE, ELECTRIC SHOCKS AND INJURY, INCLUDING THE FOLLOWING:



1. This document is restricted in use to the terms of the law and may not be copied or transferred to third parties without the express authorization of the manufacturer, OLIMPIA SPLENDID.

Our appliances are subject to change and some parts may appear different from the ones shown here, without this affecting the text of the manual in any way.



2. Read this manual carefully before performing any operation (installation, maintenance, use) and follow the instructions contained in each chapter.



3. Keep the manual carefully for future reference.
4. After removing the packaging, check that the appliance is in perfect condition. The packaging materials must not be left within reach of children as they can be dangerous.
5. **THE MANUFACTURER IS NOT RESPONSIBLE FOR DAMAGES TO PERSONS OR PROPERTY CAUSED BY FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL.**
6. The manufacturer reserves the right to make any changes it deems advisable to its models, although the essential features described in this manual remain the same.



7. Before connecting, make sure that the plate data corresponds with the mains electrical supply. The data plate is located on the appliance.



8. Install it according to the manufacturer's instructions. An incorrect installation can cause damage to people, animals or property for which the manufacturer accepts no responsibility.



9. Select whether to install the device in the fixed or mobile configuration and follow the procedure indicated by the manufacturer.

9a. To install the device in wall-mounted mode, position it vertically in a suitable environment, taking care to respect the minimum distances indicated in this manual (fig.1).

9b. To install the device without wall-mounting it, position it horizontally, in a suitable environment on a stable, level surface.

10. Always unreel the cable completely during use.

11. The appliance is equipped with a power cord with plug (Y-type connection). If the power cord is damaged, it must be replaced by the manufacturer, his technical service or a similarly qualified person in order to eliminate all possible risks.



12. Install it in such a way that the switches and other controls cannot be reached by persons using the bath or shower.

13. Do not use extensions, if not with particular care.

14. Keep the appliance at a distance of at least 1m from other objects (fig. 1).

14a. To avoid the risk of fire, keep the outlets and air intakes of the appliance at a distance of at least 1 m from any object, curtains, tissues or flammable materials.

15. Do not place appliance close to a radiant heat source.



16. Do not use the appliance to dry clothes.
17. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
18. Do not allow cord to come in contact with heated surfaces during operation.
19. Do not run cord under carpeting, throw rugs or runners etc. Arrange cord away from traffic areas so that it will not be tripped over.
20. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split.



21. Do not store appliance while it is still hot.
22. Do not use this appliance outdoors, or on wet surfaces.
23. Do not use this heater with programmer, timer or any other device that switches the heater on automatically since a fire risk exists if the heater is covered or positioned incorrectly.
24. The device has been designed to be operated either free-standing or wall-mounted; in either case it is important to follow the instructions provided in this manual.
25. Do not operate the heater near curtains, as the material could be sucked into the air vents (fig. 3).



26. Avoid spilling liquid on the appliance.
27. Children must not play with equipment.



28. The appliance may be used by children over 8 years of age and by persons with reduced physical, sensory or mental capacities, or without the required experience or knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the hazards involved.



29. Children must not be allowed to clean the appliance or perform user maintenance without proper supervision.



30. Children of less than 3 years should be kept away unless continuously supervised.



31. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.



32. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
33. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.



- 34. Some parts of this product may become very hot and could cause burns. Be very careful when children or vulnerable adults are nearby.
- 35. Always remove plug from the mains supply before cleaning.
- 36. For correct use of the appliance NEVER:
 - a. Place it immediately underneath a mains wall socket.
 - b. Pull the power cable or the appliance itself to remove the plug from the mains socket.
 - c. Leave it expose to atmospheric agents (rain, sun, etc.).
 - d. Leave it plugged in when not in use.
 - e. Touch it with wet or damp hands.
- 37. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.



- 38. The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning air vents and grilles.
- 39. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only.
- 40. Do not connect the appliance to the mains voltage until completely assembled and adjusted.
- 41. Switch the device off and allow it to cool down for a few minutes before moving it.
- 42. Do not immerse the appliance in water or in other liquids. Short circuits or fires may occur.



- 43. Do not let the appliance work in enclosed areas such as a cabinet since it could cause a fire.
- 44. If the appliance's plug is incompatible with the socket, have the socket replaced with a suitable one by a qualified technician, who must ascertain that the section of the socket cables is compatible with the power absorbed by the appliance. We do not recommend using adaptors and/or extension cables. If they cannot be avoided, however, they must comply with current safety regulations and their ampacity (A) must not be below the maximum ampacity of the appliance.
- 45. Do not use the appliance in case of malfunctioning or faults, if the cord or plug are damaged, or if it has been dropped or damaged in any manner. Turn the appliance off, disconnect the plug from the socket and let it be checked by professionally qualified personnel.
- 46. Disassembly, repair or reconversion performed by an unauthorized person could cause heavy damages and will cancel the manufacturer warranty.
- 47. Neither disassemble nor modify the appliance.
- 48. Repairing the appliance by yourself is extremely dangerous.



49. In the presence of gas leaks from other equipment, ventilate the room well before activating the appliance.
50. Do not remove plug from power socket until the appliance has been switched off.
51. If you no longer wish to use this appliance, it must be made inoperative by cutting the power supply cable after removing the plug from the power socket.
52.  **WARNING** - In order to avoid overheating, do not cover the heater (fig. 3).
53. Hazardous parts of the appliance must be rendered harmless, especially as there is a risk of children playing with it.
54. At first use and after a long period of inactivity of the appliance, a slight noise may be heard and a slight odour may be smelled. It is a normal phenomenon which will disappear after a few minutes of operation.
55. Always operate upright.
56. All covers on this appliance are intended to prevent direct access to the heating elements and must be in place when the appliance is in use.

0.4 - PROPER USE


1. The appliance should be used for the exclusive purpose of producing hot air for the sole purpose of obtaining a comfortable temperature in the room.
2. This appliance is only designed for domestic use or similar, not for commercial or industrial use.
3. An improper use of the appliance with possible damages caused to people, things or animals releases OLIMPIA SPLENDID from any responsibility.
4. The appliance is equipped with a special function, activated by the user as required, which allows to detect the possible opening of a window and force the functioning in Anti frost mode to limit waste of energy.

0.5 - UNINTENDED AND POTENTIALLY DANGEROUS USE

1. Do not use the appliance in areas in which are used or stored petrol, varnishes or other flammable liquids or in environments with the presence of flammable or explosive gases.
2. Do not use the appliance if insecticide gas has just been sprayed in the room or in the presence of burning incenses, chemical vapours or oily residues.
3. Do not use this appliance in small rooms occupied by persons which are not able to leave it autonomously unless constant supervision is supplied.

1 - DESCRIPTION OF THE APPLIANCE AND OF THE COMMANDS

- 1. Appliance body
- 2. Air outlet grid
- 3. Screws and dowels
- 4. Air inlet grid
- 5. Power cord
- 6. Wall-mounting bracket
- 7. Control panel
- 8. Feet
- 9. Wheels
- 10. Use and maintenance booklet

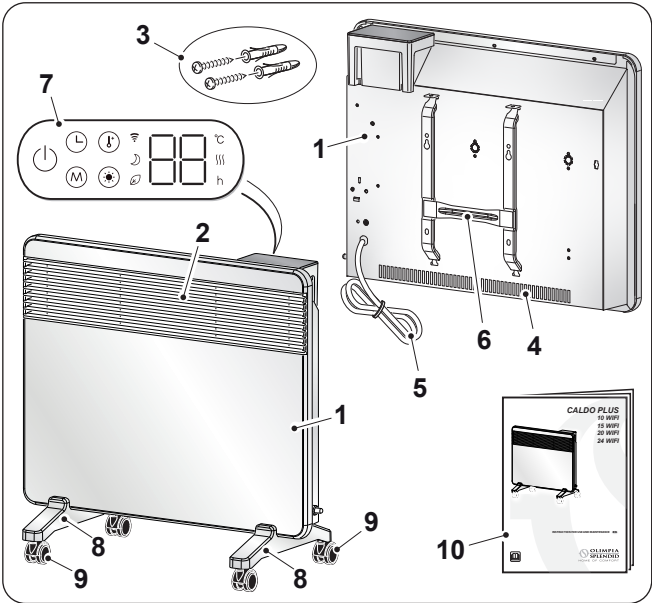


2 - SPECIFICATIONS

	10 Wi-Fi	15 Wi-Fi	20 Wi-Fi	24 Wi-Fi
Rated power (W)	1000	1500	2000	2400
Rated Voltage	220V - 240V ~ 50Hz			
Dimensions (mm)	534x260x452	604x260x452	807x260x452	981x260x452

Dimensions to be considered without wheels

2.1 - CIRCUIT DIAGRAM

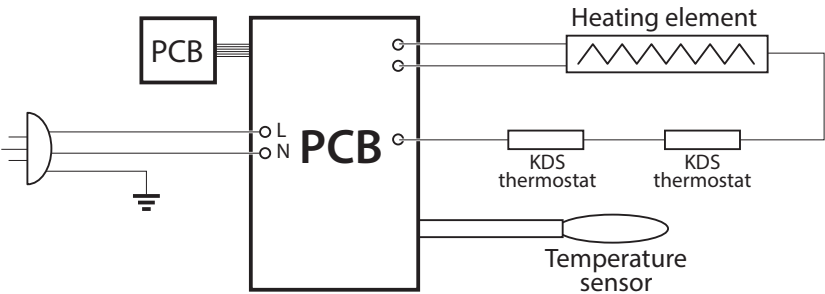

3 - INSTALLATION

- After removing the packaging, check that the appliance is in perfect condition; in case of doubts do not use it and refer to professionally qualified personnel.
- Entirely straighten the power cord.
- The unit may be wall-mounted or used as a mobile device.

3.1 - MOBILE INSTALLATION

Before install the appliance on the floor, proceed as described (figure 4-5):

- a. Screw the wheels (9) onto the feet (8) using the pins (9a).
- b. Rotate the appliance (1) upside down.



Position the appliance on a flat and stable surface, making sure it does not spoil or fall. Position a soft cloth between the bearing surface and the appliance to protect the surfaces.

- c. Mount the feet (8) onto the pins (8a) and lock them in place by moving the feet until a “click”.



Make sure the feet are mounted correctly.

- d. Rotate the appliance (1) upside down.
- e. Entirely straighten the power cord.

- Place the appliance in an appropriate environment and on a stable and flat surface.
- Make sure that curtains or other objects do not obstruct the air flow (fig. 3).
- Leave at least 1m of free space on the sides, behind the appliance and above it (fig. 1).



Arrange cord away from traffic areas so that it will not be tripped over.

3.2 - WALL-MOUNTED


- The appliance must be installed on a masonry or made of heat resistant material wall (not wooden or made of easily overheatable synthetic material).



The appliance must be installed:

- **At a distance of at least 100 mm from walls.**
- **At a distance of at least 1000 mm from flammable materials (curtains, textiles etc.) (figure 2).**
- **DO NOT install the appliance beneath power outlets.**
- **Prepare a power outlet in the vicinity of the appliance making sure it's not too far in relation to the power cord length.**
- **To install the appliance in a high position, keep a distance of at least 100 mm from the floor.**

	10 Wi-Fi	15 Wi-Fi	20 Wi-Fi	24 Wi-Fi
L1	155mm	250mm	250mm	250mm
H1	283mm	283mm	283mm	283mm

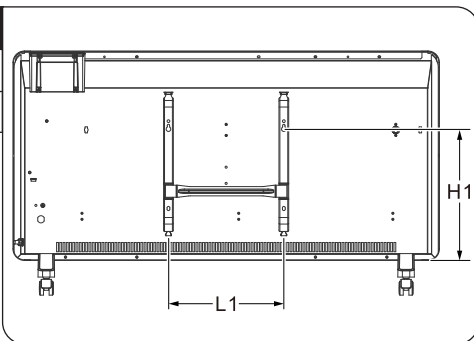

- Before proceeding with the wall installation, make sure that:
 - The appliance is not exposed to sources of heat or steam.
 - Make sure the space between the roof and the appliance is not lower than 1m (figure 1).
 - The wall on which it is intended to fix the internal heater unit must be stable, solid and suitable to bear its weight.
 - There must be no obstacles for free circulation of air both from the intake side and especially from the air outlet side.
 - The appliance must not be installed directly onto a household appliance (TV, radio, fridge, etc.) or on a source of heat.
- After checking what has been previously described, proceed as described (figure 6):
 - a. Locate the area where the appliance is going to be installed.
 - b. Remove the bracket (6) from the appliance as shown in figure.
 - c. Position the bracket (6) against the wall.
 - d. Mark the drilling points making sure drilling is levelled.
 - e Create four 8mm holes (check whether the spacing of the 'L1' value is correct).



Drill the necessary holes using a tip suitable for the wall to be drilled.



- The holes must be at least 100mm away from the floor 1000mm from the ceiling (figure 1).
- Make sure that in the drilling area there are no pipelines or electrical conduits.

- f. Insert the dowels in the holes and fix the bracket (6) to the wall using the screws.



Make sure that the screws are well steady in the wall.



Using a spirit level, make sure the fixing bracket (6) is levelled.

- g. Check stability of the bracket (6) moving it laterally and vertically.
- h. Position the appliance (1) in correspondence of the hooks (6a) of the bracket (6).
- i. Lock the appliance (1) to the bracket (6) by making the hooks (6a) trigger.




Try to move the appliance vertically and laterally to make sure it is hooked safely.

4 - USE OF THE APPLIANCE

4.1 - CONTROL PANEL

- T1: Running / Stand-by;
T2: Working mode selection
T3: Heating power;
T4: Temperature setting;
T5: "TIMER" mode;
D1: Temperature/parameter settings display
S1: "Wi-Fi" mode LED;
S2: "Sleep" mode LED;
S3: "ECO" mode LED;
S4: Temperature indicator LED;
S5: Heating indicator LED;
S6: Timer indicator LED;

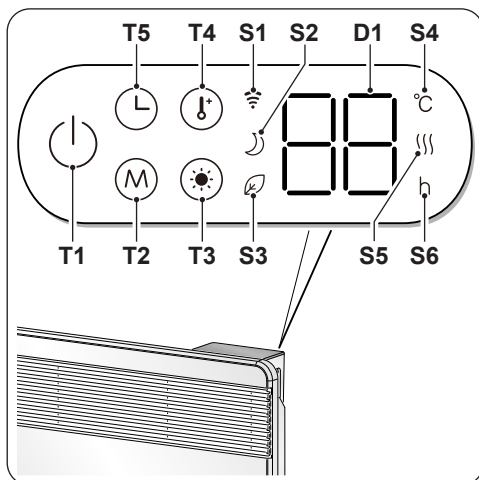

4.2 - USE OF THE APPLIANCE

4.2.a - Preliminary operations



- *After installing the appliance as described in the previous paragraphs, make sure the mains data correspond to what is indicated on the appliance nameplate.*
- *Insert the plug into the power socket, the appliance turns on and enters standby mode.*

4.3 - INSTRUCTIONS FOR OPERATION

4.3.a - Switching on

Press the ON/OFF key (T1) the appliance turns on and start heating mode (P1) 23°C.
Press the ON/OFF key (T1) again to switch off the appliance.

4.3.b - Selecting the operating mode

Press the Mode button (T2) until the LED corresponding to the desired operating mode lights up.
Press the (T2) button to select the desired operating mode according to the following sequence:

Normal mode (no icon displayed) ---> **ECO mode** (S3 icon on) --->
SLEEP mode (S2 icon on) ---> **Normal mode** ...

Normal mode

When the user selects this operating mode and set a temperature the appliance operating in continuous heating according to set temperature.

ECO mode

When the user selects this operating mode, the LED (S3) lights up on the display and the appliance operates depending on the selected temperature:

- Below 23°C: high power (**P2**).
- Above 23°C: low power (**P1**).

SLEEP mode

When the user selects this operating mode, the display reduces brightness; the LED (S2) and heating LED (S5) lights up on the display.

If no button is pressed for 10 seconds, the display goes to sleep mode again.

4.3.c - Heating power

Press the (T3) button to select the desired heating power according to the following sequence:

P1 (low power) ---> **P2** (high power) ---> **P1** ...

On the display, in the D1 field, **P1** or **P2** lights up the corresponding to the desired heating power.

4.3.d - Temperature setting

Press the (T4) button to select the desired temperature setting, the LED (S4) blinking on the display and the appliance operates at the default temperature (23°C).

Press the (T4) button again to select desired temperature (5°C - 30°C), setting temperature should be higher than room temperature.

Waiting for 5 seconds, appliance saves the settings automatically and starts heating, the LED (S4) lights up on the display.

On the display, in the D1 field, alternately displays the heating power and the current room temperature.

4.3.e - "TIMER" mode

Press the (T5) button to select the "TIMER" mode, the LED (S6) blinking on the display.

Press the (T5) button again to select desired working hours (0 - 24 h).

Waiting for 5 seconds, appliance saves the settings automatically, the LED (S6) lights up on the display.

On the display, in the D1 field, alternately displays the heating power, the current room temperature, and the timer.

4.3.f - “Open window” mode

When the user selects this mode, the device detects when a window is opened and switches to “Anti-frost” mode to limit wasted energy.

Press at the same time the (T1) and (T5) buttons: the appliance enabled “Open Window” mode and the display shows **OP**.

Press at the same time the (T1) and (T5) buttons again to disabled “Open Window” mode and the display shows **CL**.

4.3.g - Child-Lock

Press the (T2) button for approx. 5 seconds and the “[]” lights up on the display, no setting could be done.

After 3 seconds on the display, in the D1 field, alternately displays the heating power, the current room temperature, and the timer (if enable).

Press the (T2) button for approx. 5 seconds again for unlocked the appliance.

4.4 - WI-FI

4.4.a - Appliance connection



Make sure the heater is turned on (press the power button T1 if needed).

Press the (T3) button for approx. 5 seconds and the LED (S1) blinking rapidly on the display; the appliance is ready to be connected to the app in “EZ” mode.

To connect the device in “AP” mode, press the (T3) button for another 5 seconds.



- ***The appliance supports only 2.4 GHz Wi-Fi networks; it does not work with 5 GHz.***
- ***If the Wi-Fi LED does not blink, repeat the procedure or perform a Wi-Fi reset by pressing and holding button T3 again for 5 seconds.***

4.4.b - App installation

- Open “App Store” or “Google Play” respectively.
- Search for the “OS Home” app or scan the QR code.
- Download the app.



The APP is subject to updates without prior notice. Check for compatibility with the operating system before installing on the latter.

iOS



Android



4.4.b - Using the app



The instructions for connection to the WiFi network and the pairing process are available on www.olimpiasplendid.com.au in the download area.

Once your appliance is connected to the app, you can access all its main functions directly from your phone:

- **Turn the heater on/off**

Easily turn the heater on or off with a single tap.

- **Adjust temperature, mode, and timer**

Temperature:

Set your desired value (from 5°C to 30°C) using a buttons.

Mode Options:

Normal Mode: Heats continuously based on the set temperature.

ECO Mode: Smart energy-saving function that adjusts power automatically.

Sleep Mode: Dim display, low consumption.

Timer: Set a countdown timer after which the appliance will switch off (0 - 24 h).

- **Child Lock**


Locks all controls on both the appliance and the app, preventing accidental changes.

- **Create custom daily schedules**

To program daily or weekly schedules for automating appliance based on your routine without manual control.

- **Monitor the room temperature remotely**

The app shows the real-time room temperature detected by the appliance.

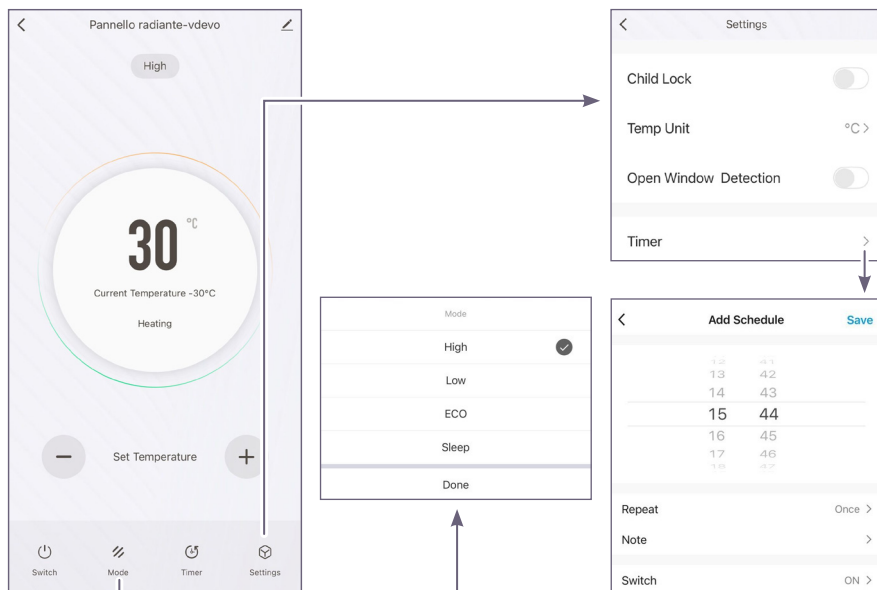

5 - OVERHEAT PROTECTION

- This heater is protected with overheat protection that switches off the appliance automatically in case of severe overheating. In this case:
 - unplug the appliance;
 - wait about 30 minutes for it to cool;
 - remove any possible cause of overheating, eg. something covering the heater;
 - check for damage to the appliance, the cord and the plug.
- If there is no damage:
 - plug the unit back in;
 - switch it on as described above.

If the heater still does not turn on, please contact Customer Service for assistance.

6 - SAFETY CONTROL (anti-overturning switch)

- If the appliance falls or overturns, the anti-overturning switch is activated and automatically turns it off.
- It is necessary to place the appliance in vertical position to resume normal operation.

7 - MAINTENANCE AND CLEANING



Before carrying out any cleaning or maintenance operation on the appliance, switch it off.

Disconnect the plug from the socket and wait for the fan to stop.

- Use a dry cloth to clean the appliance.
- If the appliance is very dirty, it is possible to use a cloth dampened with warm water (max 50°C) and a mild detergent to clean its external parts. Dry with a dry cloth.
- Use a vacuum cleaner to remove dust from the air inlet/outlet grids (fig. 7).



- **Make sure the appliance is completely dry before reconnecting the plug to the power socket.**
- **Do not use a chemically treated or antistatic cloth to clean the appliance.**
- **Do not use petrol, solvents, polishing pastes or similar. These products could break or deform the plastic surface.**
- **Do not use oils, chemical substances or abrasive products to clean the appliance.**
- **Neither wash nor immerse the appliance with/in water.**



- **In case of an appliance malfunction, do not try to disassemble it but instead refer to the retailer or to the technical assistance service.**

8 - PRESERVATION OF THE APPLIANCE

If you do not intend to use the appliance for a particularly long period of time or if operations which could produce a lot of dust must be performed, it is advised to store the appliance as follows:

- **Switch the appliance off and disconnect the plug from the power socket.**
- Store in a fresh and dry place away from humidity.

9 - TROUBLESHOOTING

PROBLEM	QUICK FIXES
The appliance won't turn on	Make sure it's properly plugged into a working outlet.
	Check that the safety switch hasn't tripped.
	Try another socket or check the circuit breaker.
Wi-Fi won't connect	Ensure the Wi-Fi network is 2.4 GHz (not 5 GHz).
	Reset Wi-Fi on the appliance by holding button 3 for 5 seconds.
Buttons are unresponsive	Check if Child Lock is active.
Appliance doesn't warm the room properly	Ensure the set temperature is higher than the current room temperature.
	Make sure the appliance is in the correct mode (e.g., ECO or High Power).
Appliance emits odor or overheats	Clean the air vents regularly using a vacuum cleaner to remove dust.
	Make sure the appliance is not covered or blocked.

The appliance is equipped with a self-diagnosis system, which displays error codes on the screen.

CODE	MEANING	RECOMMENDED ACTION
E1	Temperature sensor disconnected or faulty	Contact customer service; the appliance requires repair.
E3	High temperature alarm	Move the appliance away from other heat sources.
E4	Open window detected	Close the windows and restart the heater.
E5	Appliance tipped over or not upright	Place it on a flat surface and restart the device.

OLIMPIA SPLENDID AUNZ

14 Americain Way

Dandenong South VIC 3175

www.olimpiasilendid.com.au

www.olimpiaspplendid.co.nz

The technical data and aesthetic characteristics of the products may undergo changes. Olimpia Splendid reserves the right to modify them at any time without prior notice.