


morphy richards®

Smart Ideas for Your Life

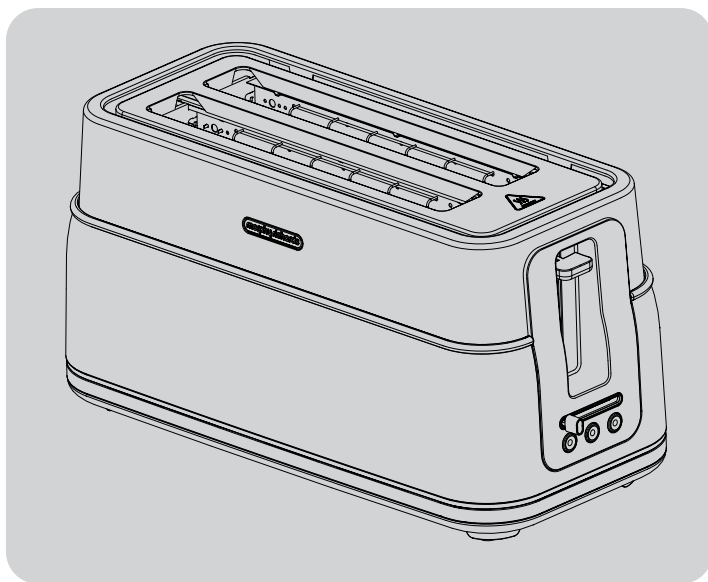

Signature 4 Slice Toaster



Models: MRST24BK / MRST24WT

**Read these instructions carefully before
using this appliance for the first time**

For product hints and tips plus more join us at

www.morphyrichards.com.au



facebook.com/MorphyRichardsAUS



instagram.com/morphyrichardsau

IMPORTANT SAFETY INSTRUCTIONS

WARNING: The use of any electrical appliance requires the following common sense safety rules.

WARNING: Misuse of the appliance could cause personal injury.

WARNING: Do not touch the top of the appliance or other hot parts during or after use, use handles or knobs. The temperature of accessible surfaces may be high when the appliance is operating.

WARNING: Do not wrap the cord around the main body of the appliance during or immediately after use.

WARNING: Do not use under cupboards.

WARNING: Do not insert oversize foods, metal, foil packages or utensils into the toaster.

WARNING: Do not attempt to dislodge food when the appliance is plugged in and never insert cooking utensils into the slots.

WARNING: Do not place bread or other items on top of the slots as this may damage the appliance and creates a fire hazard.

WARNING: If toasting small bread slices less than 85mm length, pay attention to the potential risk of burning when taking out the slices.

- Make sure that the outlet voltage corresponds to the voltage stated on the rating label of the toaster (underside of Toaster).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFETY INSTRUCTIONS

- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and its cord out of reach of children.
- This appliance is intended to be used in household and similar applications such as: farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not let the cord run across a cooker or hot area which might damage the cable.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Watch the appliance during use.
- The bread may burn, therefore, do not use the appliance near or below combustible material such as curtains.
- Never use the appliance when it is empty (when there is no bread inside) except on first use.
- Do not use very thin or broken slices of bread.
- Do not insert other foods that may drip grease or oil during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires.

IMPORTANT SAFETY INSTRUCTIONS


- Clean the crumb tray regularly, crumbs can smoke or burn.
- Do not insert (by force) foods that are too big for the slots.
- Allow the unit to cool completely before cleaning or storing.
- Do not insert forks or other utensils into the toaster in order to remove bread. As well as damaging the toaster, there is a high risk of electric shock.
- Be sure to take the bread out carefully after toasting so as to avoid injuries
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Should some toast remain blocked in the toaster, remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.
- This appliance must be used in accordance with the instructions and must not be used for other purposes.
- Use the appliance on a level and stable work surface.
- If toaster starts to smoke, press the cancel button to stop toasting immediately.
- Remove all protective wrapping prior to using the toaster.
- Avoid toasting bread with extremely runny ingredients already applied, such as butter.
- **WARNING:** This appliance is NOT recommended to be used with extension leads and/or power boards.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

SPECIFICATIONS

Model:	MRST24BK	MRST24WT
Colour:	Matte Black	Matte White
Rated Power:	1500-1800W	
Rated Voltage & Frequency:	220-240V~ 50-60Hz	
Capacity:	2 Slot 4 Slice Toaster	
Toasting Slot Dimensions (L x W):	250 x 30mm	
External Dimensions (L x W x H):	395 x 180 x 203mm	
Net Weight:	2.33kg	

PRODUCT OVERVIEW

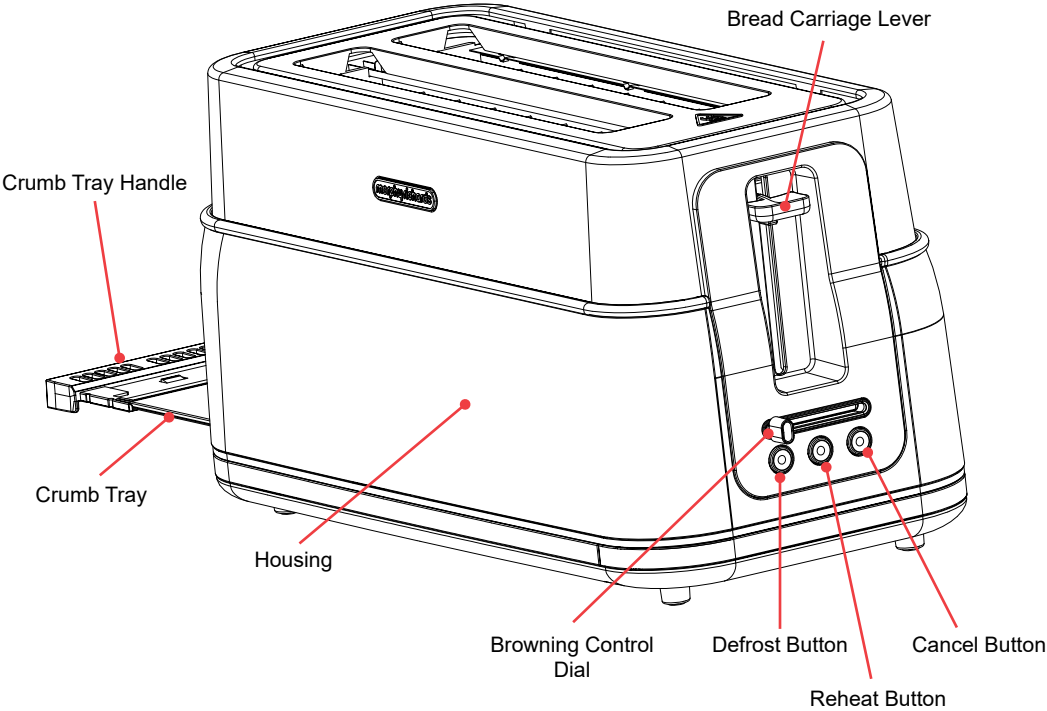

OPERATING INSTRUCTIONS

As there is manufacturing residue or oil remaining in the toaster and on the heat element, it usually emits a 'new' odour when first used. This is normal and will not occur after the first few uses.

NOTE: Before toasting the first slice of bread, it is strongly suggested to operate the appliance following below instructions, except without bread, then let the toaster cool down and begin toasting the first slice.

1. Make sure the crumb tray is positioned in place and ensure the power plug is in the outlet and is switched on.
2. Place the sliced bread into the bread slots.
3. Adjust the browning control to the desired setting. There are 7 browning positions, the lowest "1" is for light toasting and "7" is for darker toasting. The bread slice can be toasted to a golden colour in a centre position.

NOTE: The toasting colour for one slice of bread will be darker than for two bread slices at the same level. If toasting continuously, the toasting colour for the most recently toasted bread will be darker than that for the first toasting at the same level.

4. Depress the bread carriage lever. The toaster will begin toasting the bread and the cancel button will illuminate.

NOTE: The carriage handle will only depress and lock in place when the appliance is connected to the power supply.

5. When the bread is toasted to the required browning level, the bread carriage lever will automatically rise and lift the toast from the toaster.
6. During the toasting process, you can use the high lift lever to check on the progress and can cancel it at any time by pressing the cancel button.

OPERATING INSTRUCTIONS

7. To toast frozen bread, do not adjust the browning control from your normal setting. Place the frozen bread in the bread slots, depress the bread carriage lever and press the defrost button. The button will illuminate and the toaster will operate for a longer period defrosting and toasting the bread.

8. If you want to reheat bread that was previously toasted but gone cold. Press the bread carriage lever down vertically until it is positioned in place, then press reheat button. The reheat button will be illuminated and the toaster will operate for a short period reheating the bread.

CLEANING

WARNING: Crumbs will accumulate in the crumb tray and could catch fire if not emptied regularly.

1. Disconnect the power supply before cleaning.

2. When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toaster. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.

NOTE: Never operate the appliance without the crumb tray fitted.

3. Wipe the outside with soft dry cloth after the toaster cools down.

4. When not in use or when being stored for extended periods, the power cord may be wound under the bottom of toaster.

MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate.

Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

REGISTER YOUR PRODUCT

By having your product registered on the Morphy Richards customer portal, your details can be accessed quickly in the event that there is an issue with your product. Make it quick and easy to get the help you need, if you ever need it.



WARRANTY

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd
8 Lakeview Drive,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd
1 Ron Driver Place, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824

NOTES

[illegible]

NOTES

[illegible]

NOTES

[illegible]



Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and wellbeing.
Expanded Polystyrene Disposal: The websites listed below can assist in the responsible disposal of EPS (Expanded Polystyrene) packaging products.

Australia: <https://recyclingnearyou.com.au/polystyrene> and/or <http://epsa.org.au>

New Zealand: <https://greenbusinesshq.com/epsrecycling> and/or
<https://www.plastics.org.nz/environment/recycling-disposal/eps-recycling>

morphyrichards®

Glen Dimplex Australia Pty Ltd
8 Lakeview Drive
Scoresby VIC 3179
Phone: 1300 556 816
Email: seasonal.support@glendimplex.com.au
Web: www.morphyrichards.com.au

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.