



IT	GRUPPO COMANDI
EN	USER INTERFACE
FR	GROUPE DE COMMANDES
DE	STEUEREINHEIT
DA	KONTROLPANEL
ES	GRUPO DE MANDOS
PL	GRUPA STEROWANIA
PT	GRUPO DE COMANDOS
NL	GROEP MET COMMANDO'S
NO	KONTROLLENHET
RU	ПОЛЬЗОВАТЕЛЬСКИЙ ИНТЕРФЕЙС
SV	ANVÄNDARGRÄNSSNITT
FI	KÄYTTÖLIITTYMÄ

واجهة المستخدم AR

USER INTERFACE

For optimum and efficient use of the product, we recommended that you switch on the hood a few minutes before you start cooking and leave it on for at least 15 minutes after you have finished or until the steam and odours have been eliminated.

6-button SOFT TOUCH control panel



A) Motor ON/OFF / Speed 1 / Filter reset button

B) Selection speed 2 and 3 + Boost

C) Timer

D) Lights ON/OFF button

Button functions



ON/OFF hood and speed 1: press button ON/OFF to switch the hood on. The icon LED will light up. To switch off the hood, go back to the minimum speed by pressing button ON/OFF and then press button ON/OFF again to switch it off.



Speed 2: can be selected only after the hood has been switched on



Speed 3: can be selected only after the hood has been switched on



Intensive speed (boost): this speed is timed. The operating time is 5 minutes, after which the suction speed returns to speed 3. To switch off the function before the time elapses, press button ON/OFF, 2 or 3, the hood will go to the selected speed.



Timer operation: Programs automatic hood switch off. With the hood operating at any speed, press button C, the relative LED will start to flash, indicating that this function is timed for 15 minutes. The speed can be changed during this time.

To turn off the timer, press button C again or switch off the hood by pressing ON/OFF, the LED switches off and the function is disabled. The hood will switch automatically to OFF, with all the LEDs turned off when the function ends.



Lights ON/OFF

Grease filter signal

After 100 hours of operation, the LED on button A switches on steadily. When this signal appears, the grease filter needs to be cleaned.

The signal can be seen when the hood is in the Extractor OFF mode.

To cancel the grease filter signal, press and hold button A for about 3 seconds until it turns off.

Maintenance

WARNING! Before carrying out cleaning or maintenance, disconnect the hood from the mains power supply by removing the plug or switching off the main circuit breaker.

Cleaning

The hood should be cleaned, both internally and externally, regularly (at least as often as you service the grease filters). Use a cleaning cloth moistened with neutral liquid detergents.

Do not use abrasive products. **DO NOT USE ALCOHOL!**

Warning: Failure to follow the instructions for cleaning the appliance and replacing the filter can lead to the risk of fire. Follow the instructions carefully.

The manufacturer will not be held liable for any damage to the motor or fires caused by incorrect maintenance or failure to follow the above instructions.

