

# Sunbeam

## PROSTEAM® BREEZE IRON

### User Guide

SRC4800



# Contents

<b>Sunbeam's Safety Precautions</b>	<b>1</b>
<b>Features of your ProSteam® Iron</b>	<b>2</b>
<b>Using your ProSteam® Iron</b>	<b>4</b>
<b>Care and Cleaning of your ProSteam® Iron</b>	<b>6</b>
<b>Ironing Chart</b>	<b>8</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید که احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## **SAFETY PRECAUTIONS FOR YOUR IRON**

- Do not leave a hot iron within reach of children. If they come into contact with a hot iron it could lead to serious burns.
- Iron only on an ironing board.
- An iron takes approximately 30 minutes to cool down. Allow the iron to cool completely before storing.
- Do not wind the cord around the soleplate while the iron is still hot.
- Do not leave the iron unattended while it is plugged into the power outlet.
- Always unplug the iron from the power outlet before filling or emptying the water tank.
- The iron must be used and rested on a stable surface.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- When placing the iron on its heel rest, ensure the surface on which it is placed is stable.

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.




**Hot Surface  
Do Not Touch**

This symbol indicates, temperature of accessible surfaces may be high when the appliance is operating and for some time after use.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or [www.sunbeam.co.nz](http://www.sunbeam.co.nz) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Features of your Sunbeam ProSteam® Iron

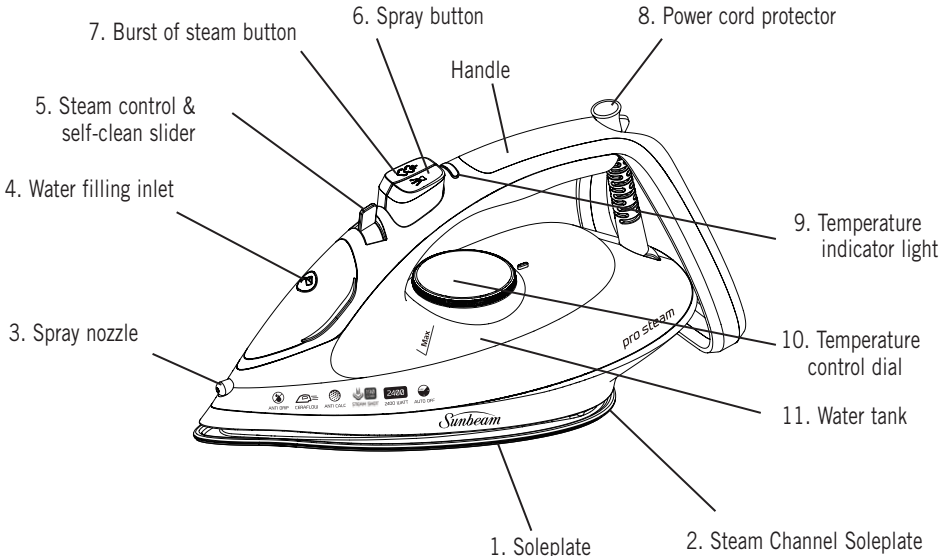

# Features of your Sunbeam ProSteam® Iron

2400 watts for fast heat up

Provides faster initial heat up and rapid heat recovery during ironing. The 2400W element helps to maintain your selected temperature, and provides superior shot of steam output.

## 1 CeraFlow™ Soleplate

Up to 7x more scratch resistant vs. other coatings (comparing vs stainless steel)\*. Extra tough ceramic soleplate for speed, agility and durability.

## 2 Steam Channel Soleplate

Designed for superior performance, the Steam Channel Soleplate features a unique channel design in which steam is evenly spread across the entire surface offering maximum coverage. This allows for a smoother glide, reducing ironing time and delivering faster, more efficient results.

## 3 Spray nozzle

## 4 Easy-fill water inlet

Holds 280 ml of water for high steam performance without having to refill the tank regularly.

## 5 Steam control & self-clean slider

Allows you to select the desired steam output for each garment.

## 6 Spray button

Pressing the spray button provides a fine mist spray to dampen hard-to-iron fabrics.

## 7 Burst of steam button

Powerful shot of steam: Pressing the shot of steam button instantly produces a powerful shot of steam to remove stubborn wrinkles.

Vertical shot of steam: Pressing the shot of steam button with the iron in an upright position produces a vertical shot of steam, which is ideal for steaming curtains and suits, and removing creases from delicate fabrics.

## 8 Power cord protector

## 9 Temperature indicator light

## 10 Temperature control dial

Allows you to select the desired temperature for each garment.

## 11 Water tank

# Using your ProSteam® Iron

## Before first use

Remove any adhesive stickers, plastic covers or cardboard sleeves from the soleplate. Ensure that all adhesive is removed by rubbing the soleplate with a cloth dampened with methylated spirits. Fill the water tank and then empty the water. This will rinse out any foreign particles remaining in the water tank from the manufacturing process.

**NOTE:** When turned on for the first time, your new iron may give off vapours for up to 10 minutes. This is due to the initial heating of the materials used. It is safe, not detrimental to the performance of the iron, and will not reoccur.

## Filling the iron with water

Before filling the iron with water ensure the power is turned off and the plug is removed from the power outlet. The iron can be filled with water while it is hot.

Place the iron on its heel and open the water inlet cover.

Slowly pour water into the water inlet until the maximum water level is reached. Do not exceed the maximum water level indicator.

Push the water inlet cover firmly to close.

**NOTE:** The special soleplate design allows you to use tap water with your iron without affecting the steam performance. However in very hard water areas, Sunbeam recommends the use of distilled water, or water which has been demineralised.

Do not fill the iron with fabric conditioner, starches or any other solution as these will damage the steam mechanism. Do not use contaminated water.

## Ironing Tips

- Start by ironing those items of laundry that require the lowest temperature (e.g. synthetics). Finish by ironing fabrics which respond best to higher temperatures and steam—such as cotton and linen.
- If you iron a fabric made of a blend of fibres set the temperature of your iron to the most delicate fibre.
- Never use the burst of steam button on silks or synthetics.
- When using starch, it should be sprayed onto the reverse side of the fabric and the soleplate cleaned more frequently.
- Do not iron over sharp or hard objects such as buttons, studs or zippers as they will scratch the soleplate of your iron.

## Using your iron

1. Insert the plug into a 230/240 volt power outlet and turn the power on. The Temperature Indicator Light will flash to indicate that the iron is switched on and heating.
2. Turn the temperature dial to the desired setting. The Temperature Indicator light will flash to indicate that the iron is heating to the selected temperature. When the light solid on the iron has reached the selected temperature and is ready to use.

**NOTE:** When the temperature dial is changed from a high setting to a lower temperature wait until the Temperature Indicator Light comes on and goes out again before ironing. This will ensure that your iron has reached the lower temperature and is not too hot for the fabric being ironed.

# Using your ProSteam® Iron

For example, you have been ironing using the ●●● setting and want to change to the ●● setting:

1. Move the temperature control dial to the ●● setting. Initially, the temperature indicator light will not be lit because your iron is still at a higher temperature.
2. Wait until the temperature indicator light comes on then goes out again. Your iron has now cooled to the correct temperature.

## Ironing without steam

If you intend to dry-iron fabrics there is no need to fill the water tank. However, if water is already in the water tank, you don't need to empty it.

1. Set the steam control to the no steam position (☒).
2. Plug your iron into the power outlet and switch on.
3. Rotate the temperature control until the desired setting is aligned with the dial pointer.
4. The temperature indicator light will flash, indicating that the iron is heating up. When the light solid on, the set temperature has been reached and your iron is ready to use.

## Steam ironing

**▲** During steam ironing, if you do not allow your iron to reach the selected temperature water may drip from the soleplate.

It is recommended that for harder to iron fabrics such as cotton and linen, steam should be used when ironing.

When ironing cotton and linen, always select the highest temperature. Steam should never be used on delicate fabrics like nylons, acrylics and synthetics.

1. Fill your iron with water.
2. Plug your iron into the power outlet and switch on.

3. Set the temperature control to the ●●● setting. The hotter your iron, the more steam is generated.
4. The temperature indicator light will flash, indicating that the iron is heating up. When the temperature indicator light solid on, the set temperature has been reached and your iron is ready to use. The temperature indicator light will flash and solid on during ironing as your iron maintains the correct temperature.
5. Adjust the steam control to select the desired steam output.
6. Move the steam control to the high steam (☒) setting to increase the amount of steam, or towards the off (☒) setting to decrease the amount of steam.
7. The steam can be shut off at any time by setting the steam control to the off (☒) position.

## Using the shot of steam

The temperature control dial must be set within the ●● and ●●● setting. Wait several seconds between each press of the steam button.

Press the shot of steam button whenever you have a stubborn crease that needs extra steam. Steam will burst from the holes in the soleplate of your iron into the fabric.

# Using your ProSteam® Iron

## Vertical steam ironing

**▲** Never iron garments when they are being worn.

1. Prepare your iron as for steam ironing.
2. Hold your iron 15cm from the fabric.
3. Press the shot of steam button as required. Wait several seconds between each press of the button.

## Spraying

The water spray can be used to help iron heavy fabrics or difficult areas (collars, pockets, sleeves, creases, etc). It can also be used when ironing delicate fabrics which cannot be steam ironed.

Make sure there is water in the tank. Press the spray button to produce a spray of water.

## Anti-drip feature

When the temperature of your iron is insufficient to create steam, the supply of water is cut off automatically to avoid any drips from the soleplate.

## Anti-Calc filter

Your iron is fitted with a permanent anti-calc filter. This filter is fixed and cannot be removed for cleaning.

The filter is designed to reduce the build-up of limescale inside your iron. Limescale occurs during steam ironing due to water hardness.

Water hardness varies from one area to another. The effectiveness of the filter will depend on how 'hard' your water is.

## Auto shut off feature

ALWAYS disconnect your iron from the power outlet after use. NEVER leave the iron unattended with the auto shut off function in operation.

An electronic safety device will automatically switch the heating element off if the iron has not been moved more than 30 seconds when resting on its soleplate in a horizontal position. If resting on its heel in a vertical position, this will happen after 15 minutes. The temperature indicator will red color blink repeatedly whilst your iron is in auto shut off mode. To restart your iron, gently move it until the light stops flashing.

# Care & Cleaning

## After each use

1. Turn the power off and remove the plug from the power outlet.
2. Allow the iron to cool before winding the cord around the built-in cord wrap.

## To clean after use

Always turn the power off and remove the plug from the power outlet before cleaning. Allow the Iron to cool before cleaning.

## Storage

Always store the iron on its heel rest. Do not store the iron with the soleplate facing down, or in the carton.

## Cleaning

To clean the exterior of your iron, wipe over with a damp soft cloth and wipe dry.

**Caution:** Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your iron as these will damage the surface.

# Care & Cleaning

## Self-cleaning

**▲ Only press the self-clean slider when you want to activate the self cleaning system. Never press the self-clean dial when ironing.**

The self-clean function removes scale and impurities. Use the self-clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.

1. Ensure your iron is switched off and unplugged from the power outlet.
2. Set the steam control to the no steam position.
3. Fill your iron with water to the MAX level.
4. Stand your iron on its heel rest, plug in and switch on at the mains supply.
5. Set the temperature control to the highest (MAX) setting. Allow your iron to heat up until the temperature indicator light solid on.
6. Unplug your iron and hold it over a sink with the soleplate facing downwards.  
**▲ Warning:** Be careful not to touch the iron's hot surfaces.
7. Push and hold the steam control slider to the self-clean position. Hot water and steam will be ejected from the holes in the soleplate along with any impurities.
8. Slowly rock the iron side-to-side and front to back for 30 seconds. When rocking the iron, dip the nose of the iron slightly below the rear to make certain the water circulates completely.

9. Release the self-clean slider after 30 seconds and pour out the remaining water out of the fill hole.
10. Rest the iron soleplate horizontally on an old piece of cloth (cotton or towelling is ideal) to dry.
11. Plug in the iron and turn the temperature control to the ●●● setting.
12. When the temperate indicator light solid on, iron an old piece of cloth to allow any remaining water to escape.
13. Stand your iron on its heel rest and let the iron heat for two minutes to ensure that the iron is dried out completely.
14. After use, switch off and unplug your iron from the mains supply and allow it to fully cool before storing.

## Cleaning the steam holes and steam channels

To remove build up from the steam holes and steam channels which may affect steam performance, use a cotton wool tip moistened in methylated spirits.

## Cleaning the CeraFlow™ soleplate

Wipe the soleplate with a damp soft cloth after each use. If polyester has burnt to the soleplate, iron a damp cotton cloth while hot.

**Caution:** Do not use scouring pads, abrasives or harsh cleaners to clean your CeraFlow™ soleplate, as these will scratch and damage the surface.

# Ironing Chart

Fabric	Temp setting Ironing	Ironing recommendation
Acrylic	MIN •	Dry iron on reverse side of fabric
Acetate	MIN •	Dry iron on reverse side of fabric while still damp
Nylon	MIN •	Dry iron on reverse side of fabric
Polyester	SYNTH •	Dry iron on reverse side of fabric
Rayon	SYNTH •	Dry iron on reverse side of fabric
Viscose	SYNTH •	Dry iron on reverse side of fabric
Silk	SILK ••	Iron on reverse side of fabric. Use an ironing cloth to prevent shine marks and use regular shots of steam
Cotton Blends	WOOL ••	Check label and follow manufacturer's instructions. Use setting for the fibre requiring the lowest setting
Wool	WOOL ••	Steam iron on reverse side of fabric or use an ironing cloth. Brush gently to raise the fibres
Wool Blends	WOOL ••	Steam iron on reverse side of fabric or use an ironing cloth. Brush gently to raise the fibres
Corduroy	COTTON •••	Steam iron on reverse side of fabric or use an ironing cloth. Brush gently to raise the fibres
Cotton	COTTON •••	Steam iron while still damp or use spray to dampen. Use medium to high steam
Linen	LINEN •••	Iron on reverse side of fabric or use an ironing cloth to prevent shine marks, especially with dark colours. Iron while still damp or use spray to dampen. Use medium to high steam
Denim	LINEN •••	Iron while still damp or use spray to dampen. Use maximum steam



This Sunbeam product is covered by a 2 year replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase, on our Sunbeam website and uploading a copy of your original receipt. View the Support section of the Sunbeam website.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Under our warranty, should your product develop any defect within 2 years of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Our warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Our warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or applications (other than for internal or own use in an office environment).

**The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.**

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

---

### Australia

[www.sunbeam.com.au](http://www.sunbeam.com.au)  
1300 881 861

### New Zealand

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
0800 786 232

---

## Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia | visit [www.sunbeam.com.au](http://www.sunbeam.com.au)  
phone 1300 881 861

New Zealand | visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
phone 0800 786 232

Newell Australia Pty Ltd | ABN 68 075 071 233

Sunbeam is a registered trade mark.

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise, the product you buy may differ slightly from the one shown here.

Approved by the appropriate electrical regulatory authorities.

© Copyright Sunbeam 2025.

05/25