




6

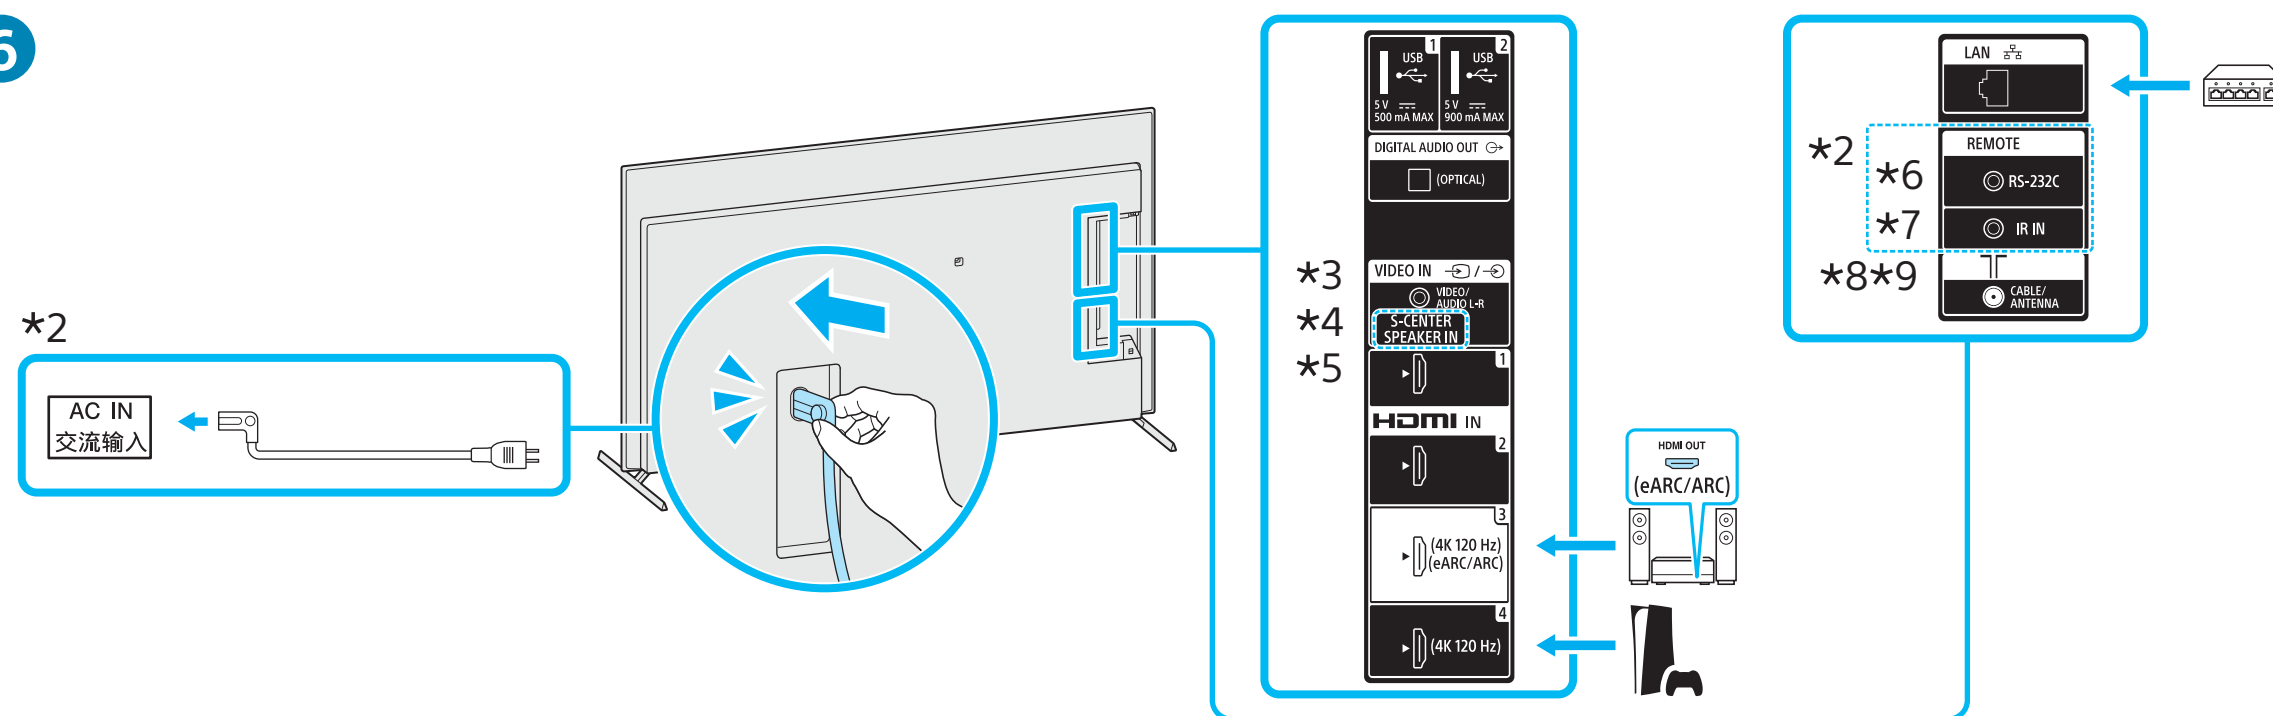


7 *2

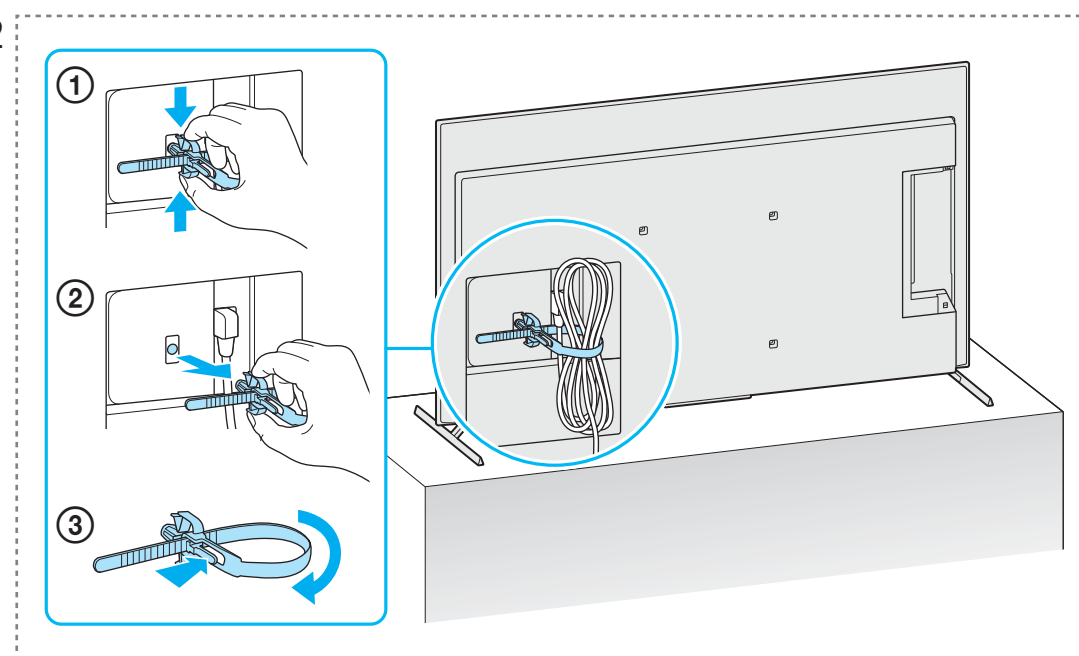




8

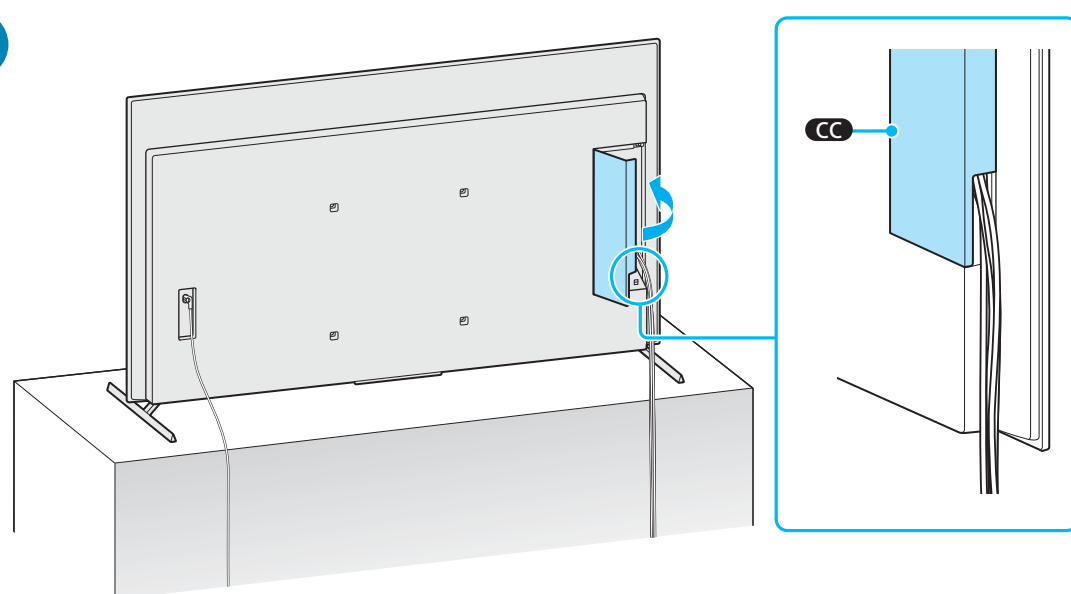

9

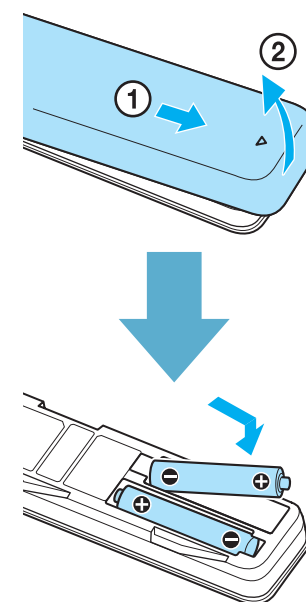


10

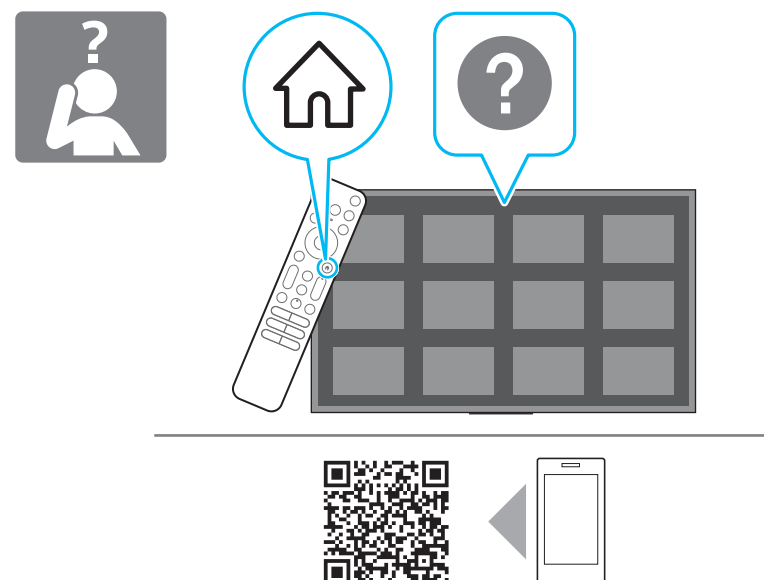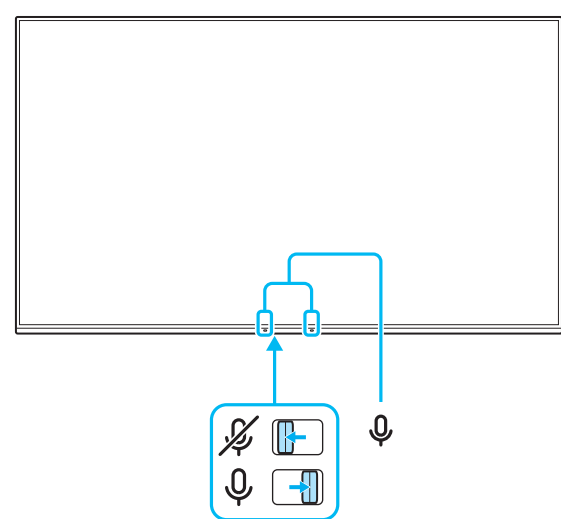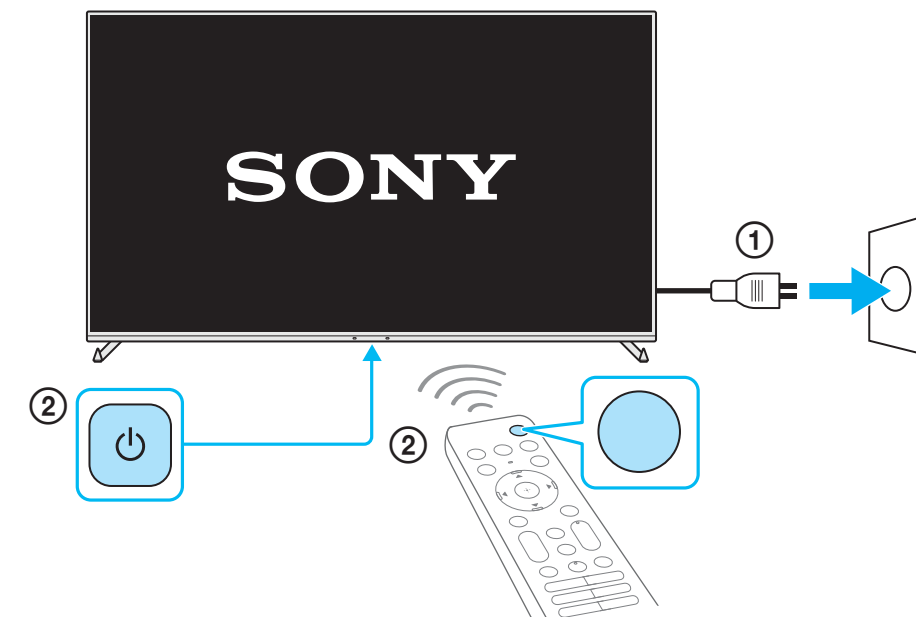
<https://www.sony.com/tvsupport>
<https://www.sony.ca/support>
<https://esupport.sony.com/ES/LA/>

*3 3.5/3.5 mm

1: L / G / L (Lzq.) / L (E)
2: Video / Vidéo / Vídeo
3: GND / Tierra
4: R / D / R (Der.) / R (D)

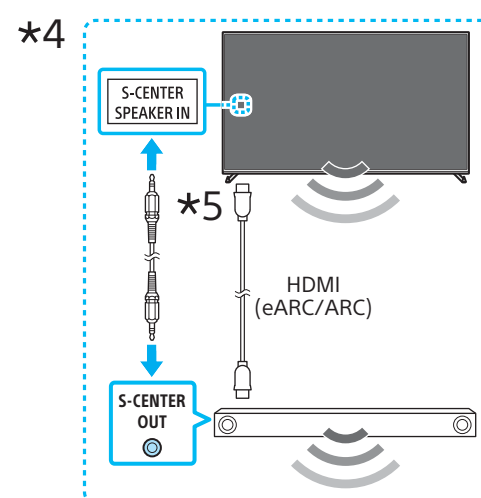

*5 < 21 mm

< 12 mm

*6 3.5/3.5 mm

1: Tx D
2: Rx D
3: GND / Tierra

*7 3.5/3.5 mm

1: IR
2: GND / Tierra

*8

CABLE / ANTENNA

*9 < 7 mm

< 1.5/1.5 mm