

USER MANUAL

INALTO?

INALTO.HOUSE

93 Litre Beverage Chiller

MODEL CODE

IBC115B



AUSTRALIAN OWNED

V1.0 | 0726

Welcome

Congratulations on purchasing your new Beverage Chiller!

Residentia Group Pty Ltd
ACN. 600 546 656
165 Barkly Avenue
Burnley, Victoria 3121
Australia

—
Applico Ltd
635 Great South Road
Penrose, Auckland 1061
New Zealand

—
InAlto
www.inalto.house
 /inalto.house
 /inalto.house

The InAlto brand is proudly distributed within Australia by Residentia Group Pty Ltd and within New Zealand by Applico Ltd.

Please refer to the warranty card at the rear of this manual for information regarding your product's parts and labour warranty, or visit online at:

→ www.residentia.group
→ www.applico.co.nz
→ www.inalto.house

Both Residentia Group & Applico are customer obsessed and our Support Teams are there to ensure you get the most out of your appliance. Should you want to learn more about recommended usage, the various features of your appliance, and importantly taking care of the unit when cleaning, our Support Teams are here to help.

Telephone Contacts:

→ AU: 1300 11 4357
→ NZ: 0800 763 448

It is important that you read through the following use and care manual thoroughly to familiarise yourself with the installation and operation requirements of your appliance to ensure optimum performance.

Again, thank you for choosing an InAlto appliance and we look forward to being of service to you.

SCAN ME



Scan to Register your InAlto Appliance or go to:

→ AU: www.inalto.house/en-au/registration
→ NZ: www.inalto.house/en-nz/registration

By registering your product, you will receive advanced support, stay updated with the latest from InAlto and find out about new products and promotions.

Contents

2 Welcome

4 Safety Instructions

8 Your Beverage Chiller

9 Getting Started

10 Installation

12 Storage Arrangement

13 Cleaning & Maintenance

14 FAQ's & Troubleshooting

15 Technical Specifications

16 Purchase Details

18 Warranty Information

Customer Care

InAlto recommends the use of original spare parts.

When contacting our customer service team on 1300 11 4357, please ensure that you have the following information at hand (which can be found on your appliances' rating plate).

- Model Number
- Serial Number

Safety Instructions

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use and installation guidelines within this manual is extremely important for both your health and safety. Failure to strictly adhere to the requirements within this manual may result in personal injury, property damage and affect your ability to make a claim under the Sôlt manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Sôlt manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings.

Keep the manual in a safe place for future reference, along with the completed warranty card and purchase receipt. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

IMPORTANT: Pay particular attention to messages that contain the words **DANGER**, **WARNING** or **CAUTION**. These words are used to alert you to a potential hazard that can seriously injure you and others. The instructions will tell you how to reduce the chance of injury and let you know what can happen if the instructions are not followed.



This symbol alerts you to take care as this appliance contains a flammable refrigerant (isobutane) and insulation blowing gas (cyclopentane). Do not expose it to high heat, sparks and open flames.

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit become damaged.

WARNING: Do not damage the refrigerant circuit! Never use an appliance with a damaged refrigerant circuit! If the refrigerant circuit becomes damaged, avoid proximity to open fires and all types of heat and ignition sources. Thoroughly ventilate the room in which the appliance is located.

DANGER: It is hazardous for anyone other than an authorised service person to service this appliance.

In Queensland, the authorised service person **MUST** hold a Gas Work Authorisation for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.

The room for installing the appliance must be at least 1m. per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found in the Technical Specifications section of this user manual and on the rating plate, found on the rear of the appliance.

The information in this user manual is subject to modification without any prior notice. Updated manuals will be made available online via the Sôlt website.

Sôlt offers no guarantee for our Beverage Chiller if it is being used for any purpose other than that for which it was specifically designed.

Sôlt cannot be held responsible for any error in this manual.

USAGE CONDITIONS AND RESTRICTIONS

- **Domestic use only:** This appliance is intended for indoor household use only. It is not intended for commercial, industrial or outdoor use. It is not intended for use in a recreational vehicle.
- **Purpose:** Do not use this appliance for anything other than its intended purpose. Other uses are not recommended and may cause fire, electric shock or personal injury.
- **Attachments:** The use of attachments is not recommended by the appliance manufacturer and distributor as they may be hazardous.
- **Improper use:** Damage due to improper use, or repairs made by unqualified personnel will void your warranty. We assume no liability for any eventual damages caused by misuse of the product or noncompliance with these instructions.

- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Usage restriction: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children: Supervise young children to ensure they do not play with the appliance. Never allow children to operate, play with or crawl inside the appliance.
- **WARNING:** Do not use electrical appliances inside the appliance, unless they are of the type recommended by the manufacturer.
- Explosive or flammable substances: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Do not store or use petrol or any other flammable vapours and liquids in the vicinity of this or any other appliance. Do not use such substances for cleaning the appliance. The fumes can create a fire hazard or an explosion.
- Damage: Do not use the appliance if the power cord, plug or the appliance itself is damaged. If the cord is damaged, contact the after sales support line and have the cord replaced by qualified personnel in order to avoid a hazard.
- **WARNING:** Do not damage the refrigerant circuit.
- Do not modify: Do not attempt to alter or modify this appliance in any way.
- Repair: Do not attempt to repair or replace any part of this appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician. Contact the after sales support line for advice.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Usage: The gaps between cooler door and cooler body are small, because not to jam your fingers in these areas. Please be gentle when close or open the cooler door to avoid falling objects.
- Care: Do not use cooler body, cooler door, etc. as pedal or support

ELECTRICAL SAFETY

- **Voltage:** Before connecting and turning on the appliance, ensure the electrical voltage and circuit frequency correspond to that indicated on the appliance rating label.
- **Earthing:** This appliance should be properly earthed for your safety. The power cord of this appliance is equipped with a three-prong plug for use in standard wall outlets to minimise the possibility of electrical shock. Do not modify the cord and/or plug provided with the appliance. Improper use of the earthed plug can result in the risk of electric shock.
- **Connection:** This appliance requires a standard 220-240 V AC 50Hz electrical outlet. Do not overload the electrical circuit.
- **Power cord:** Do not kink or damage the power cord; do not leave it exposed or dangling. Secure it at the back of the appliance so no one steps on or places anything on the cord or against it. Keep the cord out of reach of children. When moving the appliance, make sure not to damage the power cord. When removing the power cord, firmly grasp the plug and pull out it from the socket directly.
- **Auxiliary Items:** Do not use an inverter, adaptor or extension cord with this appliance. If the cord is too short, have a qualified electrician install an outlet near the appliance. Use of an extension cord and an inverter can negatively affect the performance of the unit.
- **Protect from moisture:** To protect against the risk of electric shock, do not immerse the unit, cord or plug in water or spray it with any other liquid. Do not connect or disconnect the electric plug when your hands are wet. Turn the power switch off before removing the plug from the socket.
- **WARNING: Disconnect!** To reduce the risk of fire, electric shock or personal injury, always unplug the appliance from the socket when not in use, when moving and before cleaning or servicing. Never unplug the unit by pulling the power cord. Always grip the plug firmly and pull straight out from the power point.
- **Electrical work:** Any electrical work required for the installation of this appliance should be carried out by a qualified electrician.
- Never use this appliance with a damaged refrigerant circuit! If the coolant circuit becomes damaged, avoid proximity to open fires and all types of heat sources. The room in which the appliance is located should be ventilated for a few minutes.
- **WARNING: Leaking Gas:** In the case of leaking gas, turn off the valve of the leaking gas, open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the cooler and other electrical appliances considering that spark may cause a fire.

Safety Instructions (Cont.)

INSTALLATION

Damage: When unpacking, check the appliance carefully for damage. If it is damaged, do not install the appliance. Contact our after sales support centre on 1300 11 4357 for advice on examination or return of the damaged appliance.

Protect from moisture: Install the appliance in an indoor area protected from wind, rain, water spray or drips.

Protect from heat: Do not install the appliance next to an oven, grill or other source of high heat, or where it will be exposed to direct sunlight.

WARNING: Ventilation: To ensure proper ventilation, keep any ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstructions. Ensure adequate air circulation around the appliance to prevent overheating. This is a freestanding model which can be built-in providing the ventilation requirements are followed within this manual.

Level: Install the appliance level in order to ensure proper operation.

Location: To ensure safety, the location of your Beverage Chiller should:

- be unencumbered and well ventilated;
- be well away from any heat source and direct sunlight;
- be well ventilated and not too damp (i.e. avoid laundries, bathrooms, etc);
- be indoors (avoid outdoor environments such as garages, even where they are roofed);
- have a flat, solid and level floor;
- have a standard and reliable electricity supply (including normal power outlet which is earthed);

Note! It's not recommended connecting your beverage centre to a power-board or extension lead.

- have a surge protector fitted to the electrical outlet;
- be away from any microwave ovens. Certain microwave ovens do not have wave interference shields and when placed within 1 meter of your beverage chiller, they may affect its operation.
- be located where the ambient temperature is between 5° C and 35° C. If the ambient temperature is outside (above or below) this range, the performance of your appliance may be affected.

Children: Do not give packaging and other components to children to play with. The bending board and plastic film may lead to suffocation! Children should be supervised to ensure that they do not play with the appliance.

CLEANING AND MAINTENANCE

Disconnect: Unplug the appliance before cleaning or servicing. Failure to do so can result in electric shock, injury or death. Do not connect or disconnect the plug when your hands are wet.

Flames: Do not let open flames or ignition sources enter the appliance.

Flammable/explosive substances: Never clean this appliance with flammable fluids. Do not store or use volatile, flammable or explosive propellants or liquids in or close to this or any other appliance. The fumes can create a fire hazard or explosion.

Washing: Do not spray or wash the appliance; do not put the beverage chiller in moist places that could allow the appliance to be easily splashed with water so as not to affect the electrical insulation properties of the cooler.

Solvents: Do not use solvent based cleaning agents or abrasives on the interior as these may damage or discolour the surfaces of the appliances.

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process. Never use a sharp or metal instrument to remove frost or clean the appliance. Use a plastic scraper, if necessary.

Service: Do not attempt to repair, modify or replace any part of the appliance unless specifically recommended in this manual. Refer all other servicing to a qualified technician, or contact the after sales support line for advice on examination or repair of the appliance.

WARNINGS RELATED TO PLACING ITEMS

- **Objects:** Do not place heavy objects on the top of the beverage chiller considering that objects may fall when opening or closing the door, and accidental injuries might be caused.
- To ensure safety, do not store electrical appliances (such as toasters, rice cookers, microwave ovens on the top of the beverage cooler.
- Do not use electrical appliances in the food pantry.
- Items in the cooler: Do not put flammable, explosive, volatile and highly corrosive items in the cooler to prevent damages to the product or fire accidents.
- **Flammable items:** Do not place flammable items near the cooler to avoid fires.
- **Usage:** This product is a household beverage chiller and this equipment can only be used for the storage of beverages (such as canned or bottled drinks). According to the standard requirements, household beverage chillers shall not be used for other purposes, such as storage of blood, drugs, food or biological products.
- For those models with door locks fitted, please ensure the keys are kept out of the reach of children and not in the vicinity of the appliance, in order to prevent children from accidentally accessing.

ENERGY WARNINGS

- Your beverage chiller might not operate consistently when used for an extended period of time below the cold end of the range of temperatures for which the appliance is designed.
- Do not exceed the recommended storage period recommended by the beverage manufacturers for any kind of product.
- Take necessary precautions to prevent an undue rise in the temperature of the beverage while defrosting the beverage cooler.
- A rise in temperature of a beverage during manual defrosting, maintenance or cleaning could shorten the storage life.

RESPONSIBLE DISPOSAL

Note: At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant and blowing agent. Contact your local council for advice on recycling facilities in your area. When the beverage chiller is scrapped, disassemble the doors, and remove gasket of door and shelves; put the doors and shelves in a proper place, so as to prevent entrapment.

WARNING! This refrigeration appliance contains flammable refrigerants and insulation blowing gases, which must be removed before disposal. Contact your municipal authorities for any codes or regulations concerning the disposal of such materials.


For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

UNPACKING

- **Packaging materials:** This appliance has been packaged to protect it against transportation damage. Remove all packaging materials from around and inside the appliance including the bottom cushions, foam pads, tapes inside the cooler, tear off the protective film on the door and the cooler body. Keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event the carton is to be disposed of, please recycle all packaging materials where possible.
- **Check:** to see if all items are present.
- **Inspect:** the equipment and accessories for transport damage. In case of complaints, the supplier is to be informed immediately.
- **Suffocation risk:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Power cord:** Unwind the power cord to its full length and inspect it for damage. Do not use the appliance if it or its cord have been damaged or are not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- **Read the manual:** Read this manual to familiarise yourself with the appliance. Pay particular attention to the safety instructions in this section.
- **Clean:** To remove any dust from transit and storage, clean the interior and exterior surfaces of the appliance with lukewarm water and a soft cloth. Dry thoroughly. Important! Do not use harsh or abrasive detergents or powders as these will damage the finish.

Your Beverage Chiller

PRODUCT OVERVIEW

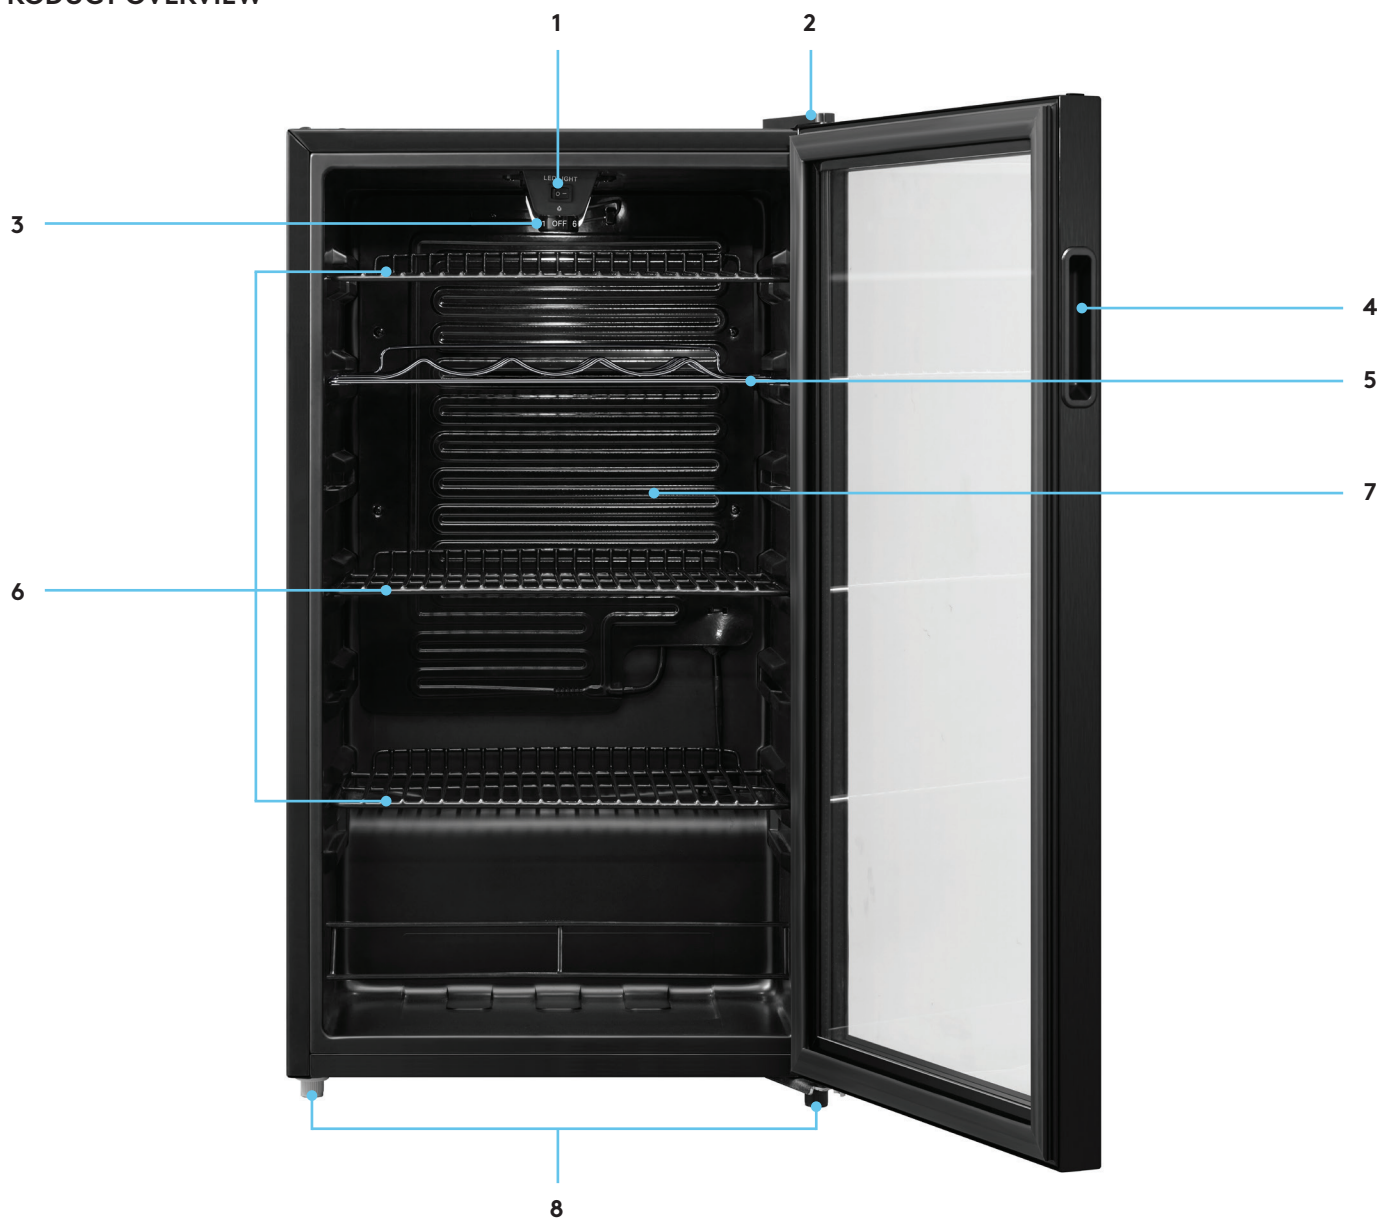

Key

1. LED Light switch
2. Reversible door hinge
3. Temperature thermostat knob
4. Door handle
5. Wine rack shelf
6. Wire shelves (x3)
7. Internal cooling evaporator
8. Levelling feet (x2)

Note:

- The images in this user manual are for demonstration purposes only. Your beverage chiller may appear differently.
- **Important!** Never place food within the beverage chiller, in order to prevent bacterial contamination.

Getting Started

FIRST USE


Before turning on your Beverage Chiller for the first time:

- The Beverage Chiller must be rested for at least 2 hours in its location, before connecting to power and switching on. Fail to do so can lead to a decrease in cooling capacity or a damage to the Beverage Chiller.
- Clean the inner chamber and leave the door open during this 2 hour resting period to allow any residual odours to clear.
- Run the Beverage Chiller for half an hour without any contents when connecting power for the first time.
- Do not connect Beverage Chiller to electronic energy saving plug or converter that can convert DC into AC (E.g.: solar energy system, ship grid).
- Water drop or frost will be generated on back side of Beverage Chiller when compressor is running. This is a normal function of Beverage Chillers, wiping out frost or water drop is not required as they will evaporate automatically. The defrosted water will be collected into a drain tank and then inflow into water disposal pan above the compressor and vaporised.

TEMPERATURE CONTROL

Figure 1 – Temperature thermostat knob.

Note: Figure 1 above is for general reference only and your physical appliance may differ.

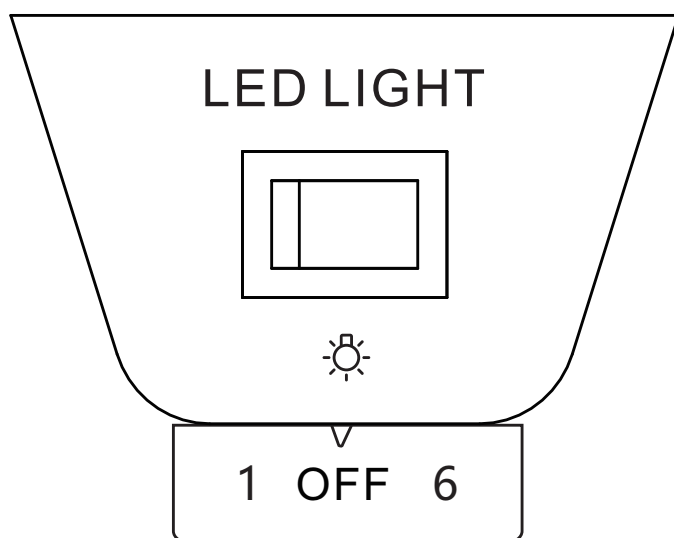

FIRST OPERATION

The temperature inside the Beverage Chiller is adjusted using the temperature control knob.

The settings — "1, 2, 3, 4, 5, 6, OFF" — do not correspond to specific temperature values.

- Lower numbers (e.g., 1 or 2) result in higher internal temperatures.
- Higher numbers (e.g., 5 or 6) result in lower internal temperatures.
- "OFF" indicates that the compressor has stopped operating and cooling has ceased.

The Beverage Chiller's temperature range is approximately 1°C–10°C (33°F–50°F), depending on the ambient environment and selected setting.

Recommended setting: For general use, a midrange setting (around 3 or 4) is ideal.

The interior light can be adjusted using the light control switch.

Installation

Floor surface: This appliance must be properly positioned on a dry, sturdy, level surface that is strong enough to support it when it is fully loaded. Rotate left or right to adjust the levelling feet if unstable. If it is to be placed on carpet, support it with a wooden board underneath. Please use a spirit level to ensure your beverage chiller is level on both the side and front.

Clearances: Ensure that air can circulate freely around the back of the cabinet, which is necessary to cool the compressor and condenser. Allow at least 10cm clear space at the back and the sides of the appliance and 30cm clear space at the top. Failure to do so will increase compressor's power and further increase power consumption. It is also necessary to maintain distance for doors to open at least 90 degrees.

Important! Failure to allow for these clearances with the positioning of your beverage chiller will void your Manufacturer's Warranty.

DO NOT install/use the appliance in the following locations/situations:

- In moist areas or areas of high humidity (i.e. laundries, bathrooms, etc).
- In a recreational vehicle, or for use with an inverter.
- In direct sunlight, near heat sources, next to an open flame, cooking or heating appliance, or near any other source of high heat.
- Direct sunlight may affect the acrylic coating and heat sources may increase the unit's power consumption. For best energy efficiency install the appliance in the coolest area of the room.
- In an area with extreme cold ambient temperatures. Never install your beverage chiller in enclosed outdoor environments including garages.
- In an area with excessive moisture and high humidity. Make sure it is protected from elements such as wind, rain, water spray or drips.
- In an area where petrol or other explosive and/or flammable liquids or fumes are used or stored. The fumes can create a fire hazard or explosion.

ENERGY SAVING TIPS

The appliance should be placed in the coolest area of the room, away from heat producing appliances or heating ducts. A suitable insulation board shall be applied if necessary.


Please avoid placement in direct sunlight.

Try to shorten opening time of cooler's door. Regular opening of your Beverage Chiller door may lead to condensation on the glass door, particularly if the external air is humid. This is completely normal with all beverage chillers.


REVERSING THE DOOR

Your beverage chiller is supplied with the door hinged to the right hand side. If you would like to reverse the hinging of your Beverage Chiller door (i.e. hinge it on the left hand side), please follow the steps below.


1. Close the glass door of the beverage cooler. Then carefully remove the axle sleeve (1) and rivet (2) using a flat blade or similar tool. Loosen and remove the mounting cover (3) and the three positioning bolts (4). Remove the upper hinge (5) and the axle sleeve (6).
2. Open the door and carefully detach the glass

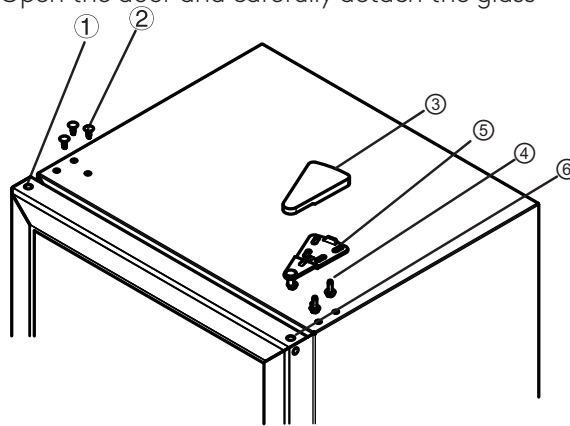

door from the cabinet. Handle with extreme care to avoid damage.


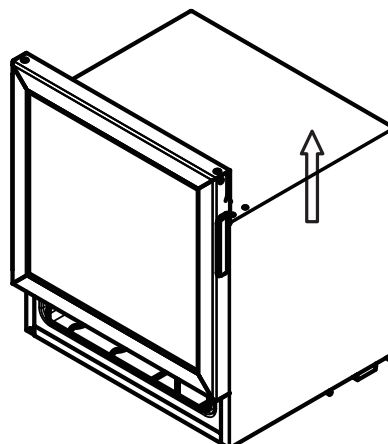


- Remove the door axle sleeve (6) at the lower part of the glass door, the door stopper block screws (8), and the door stopper (7). Then, reinstall them on the left side.

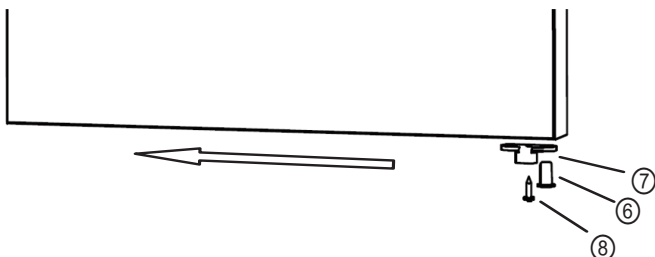


Note: The diagrams in this user manual are for instructional purposes only. The configuration of your appliance may differ.

- Remove the levelling foot (10), positioning bolts (4), and lower hinge (9). Swap the parts from the right side to the left side, and vice versa. Then reinstall the levelling foot and positioning bolts using the reverse method.

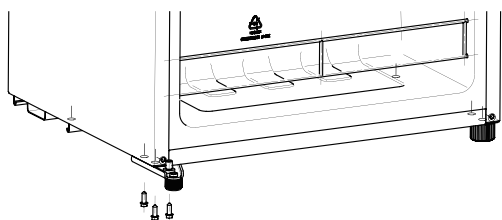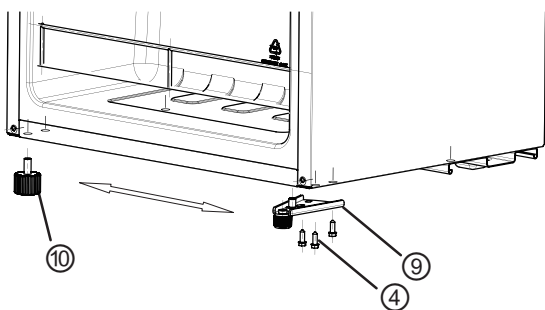

- Place the previously removed glass door onto the lower hinge. Reinstall the door axle sleeve (6) and secure the upper hinge (5). Ensure the door is properly aligned with the cabinet and check that the gasket seals tightly. Finally, reinstall all decorative parts (1) & (2).

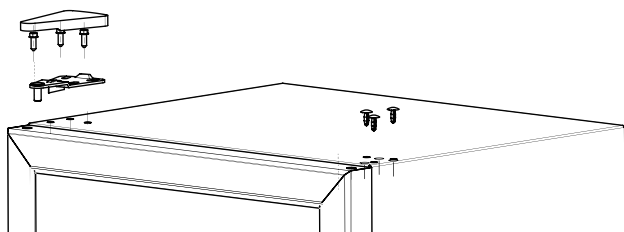

Storage Arrangement


RECOMMENDED CAN AND BOTTLE ARRANGEMENT

- Your beverage chiller is designed to store 96 × 355ml beverage cans and 5 × 750ml (Bordeaux) wine bottles.
- Do not let the beverages touch the back side of cooler in order to maintain good air circulation in the cabinet.
- The capacity of beverage can storage is calculated based on the can size 355ml (65mm × 125mm, 12oz), larger beverage can sizes may impact on the number of can storage in the cabinet.

Total beverage

- Cans: 96
- Wine Bottles: 5

Top Shelf: 8 (4+4) cans
 Second Shelf: 5 bottles
 Third Shelf: 30 (15+15) cans
 Forth Shelf: 34 (17+17) cans
 Base: 24 (9+15) cans

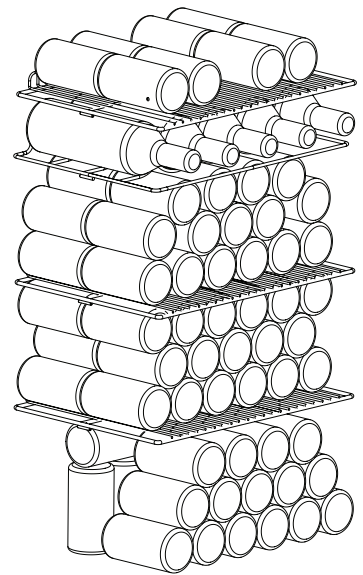



BEVERAGE STORAGE CAPACITY

Back Row

- Top Shelf: 4 cans
- Second Wine Rack Shelf: N/A
- Third Shelf: 15 cans
- Forth Shelf: 17 cans
- Base: 9 cans

Front Row

- Top Shelf: 5 cans
- Second Wine Rack Shelf: 5 bottles
- Third Shelf: 15 cans
- Forth Shelf: 17 cans
- Base: 15 cans

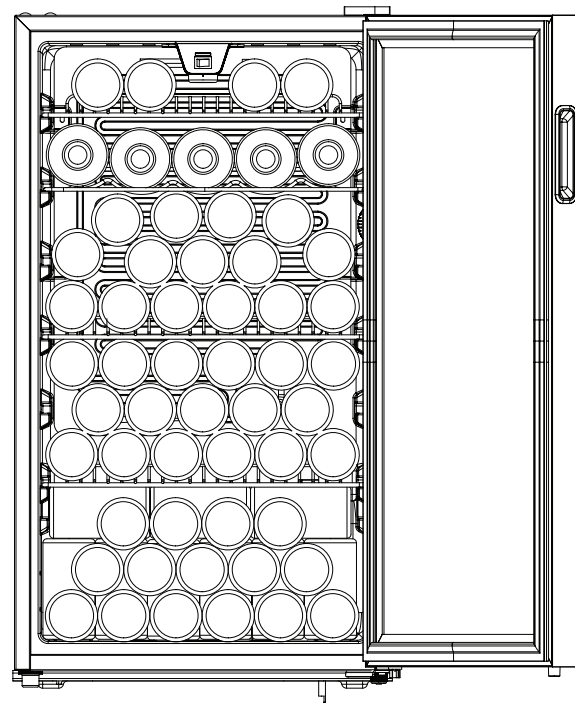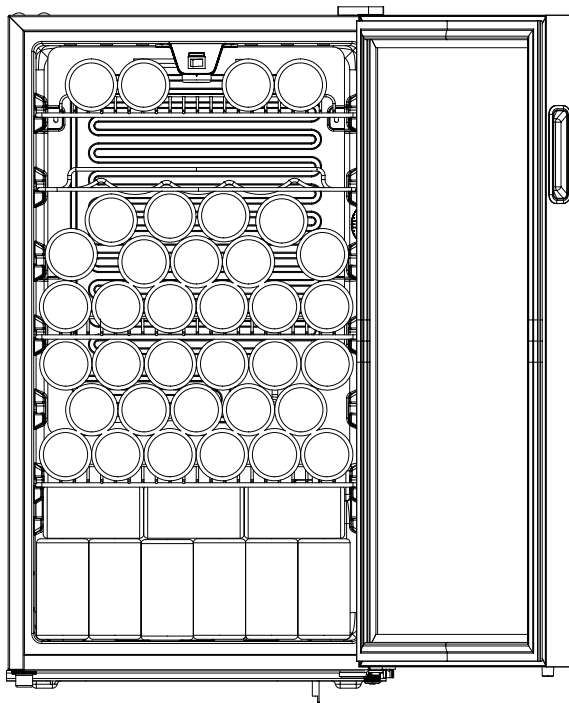

Cleaning & Maintenance

DISCONNECTING THE BEVERAGE CHILLER

- Unplug power plug to disconnect the appliance.

WHEN NOT USING YOUR BEVERAGE CHILLER FOR A SHORT PERIOD OF TIME (14 DAYS)

- Simply unplug the unit.

WHEN NOT USING YOUR BEVERAGE CHILLER FOR A LONG PERIOD OF TIME (IE. IN STORAGE)

- Unplug the appliance.
- Clean the appliance with warm soapy water and thoroughly dry.
- Keep the appliance door open.

CLEANING

WARNING: Before cleaning the appliance, make sure it is switched off and disconnected from the power supply. Failure to do so can result in electric shock or injury.

- We recommend to clean dust behind the cooler and on the ground regularly to improve the cooling effect and save energy. The interior of the appliance should be cleaned regularly to avoid odour. Cleaning procedure is below:
- Unplug power plug.
- Clean door seal with only clear water and give thorough wipe.
- Remove the wire shelf.
- Use slightly warm water and a little dish soap to clean cooler and chrome shelf. Do not let water spill onto any operation control elements or illuminator on glazed door.
- Reconnect and power cooler when cleaning is completed.

WARNING

- Do not use hard brushes, steel wool, wire brushes, abrasives such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items to clean the cooler considering that this may damage the cooler surface and interior.
- Do not rinse with water so as not to affect the electrical insulation properties.
- Do not use detergent and solvent with sand or acid properties.

FAQ's & Troubleshooting

If your Beverage Chiller is not operating as expected, please refer to the guide below before contacting customer service. These common issues and solutions may help you quickly identify and resolve the problem.

For further assistance, please contact our Customer Support Team:

Phone: 1300 11 4357

Email: support@residentiagroup.com.au

Issue	Possible Cause	Solution/Explanation
Beverage Chiller does not work	• Not plugged in • Low voltage • Temperature control knob not in working range • Power failure or tripped circuit	Ensure the chiller is properly plugged into a working power outlet. Check your home's voltage and confirm that the temperature knob is correctly set. Inspect for any tripped circuit breakers.
Compressor runs continuously	• High ambient temperature (e.g. in summer) • Chiller is overfilled • Door opened frequently	This is normal during warm weather. Avoid overloading the chiller and limit the frequency of door openings to maintain efficiency.
Interior light does not work	• Power not connected • Damaged indicator light	Confirm the unit is receiving power. If the issue persists, the indicator light may need to be replaced.
Loud noises	• Chiller is placed on an uneven surface • Accessories not properly positioned	Ensure the chiller is placed on a flat, stable surface. Check that all internal components and accessories are properly secured.
Sidewall feels hot/condensation appears	• Heat emission from condenser (normal in summer) • High ambient humidity causing condensation	It is normal for the sidewalls to emit heat during operation, especially in warm conditions. If condensation appears on external surfaces or door seals, wipe it dry and consider adjusting the temperature setting.
Buzzing, airflow sound, or clattering noises	• Normal operation of compressor and valves	These sounds are part of regular operation. The refrigerant may produce soft grunts or bubbling sounds, and the solenoid or electric switch valves may clatter when the compressor starts or stops. These do not affect performance.

Technical Specifications

Model Code	IBC115B
Capacity	93L
Dimensions (W x D x H)	470 x 440 x 845mm
Weight (Net)	27kg
Climate Classes	SN/N/ST/T
Features	40dB Max Noise Level 1-10°C Temperature Range Double Glazed Doors

CLIMATE CLASSES TABLE

Class	Symbol	Ambient Temperature Rating (°C)
Extended Temperature	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

Extended temperate

This refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C

Temperate

This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C

Subtropical

This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C

Tropical

This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C

If the Beverage Chiller operates outside the climate class (ambient temperature range) for which it is rated then it may not be able to maintain satisfactory internal temperatures.

Purchase Details



For future reference, please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice.

STORE DETAILS

STORE NAME |

ADDRESS |

TELEPHONE | PURCHASE DATE |

PRODUCT DETAILS

MODEL NO. |

SERIAL NO.* |

Attach your receipt
to this page



Warranty Information

WARRANTY TERMS & CONDITIONS BEVERAGE CHILLERS

This document sets out the terms and conditions of the product warranties for Residentia Group Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. IN THIS WARRANTY

- (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
 - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
 - (c) 'Appliance' means any Residentia Group product purchased by you accompanied by this document;
 - (d) 'ASR' means Residentia Group authorised service representative;
 - (e) 'Residentia Group' means Residentia Group Pty Ltd of 165 Barkly Ave, Burnley VIC 3121, ACN 600 546 656 in respect of Appliances purchased in Australia;
 - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Residentia Group, at its discretion, to repair an Appliance during the Warranty Period;
 - (g) 'Warranty Period' means:
 - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects for 24 months, following the date of original purchase of the Appliance;
 - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
- 2. This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.
 - 3. During the Warranty Period Residentia Group or its ASR will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Residentia Group or its ASR may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Residentia Group. This warranty does not apply to light globes, batteries, filters, seals or similar perishable parts.
 - 4. Parts and Appliances not supplied by Residentia Group are not covered by this warranty.

5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Residentia Group or its ASR. If you reside outside of the service area, you will bear the cost of:
 - (a) travel of an authorised representative;
 - (b) transportation and delivery of the Appliance to and from Residentia Group or its ASR, in all instances, unless the Appliance is transported by Residentia Group or its ASR, the Appliance is transported at the owner's cost and risk while in transit to and from Residentia Group or its ASR.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship.
Residentia Group is not liable in the following situations (which are not exhaustive):
 - (a) the Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation
 - (viii) failure to comply with any additional instructions supplied with the Appliance;
 - (b) the Appliance is modified without authority from Residentia Group in writing;
 - (c) the Appliance's serial number or warranty seal has been removed or defaced;
 - (d) the Appliance was serviced or repaired by anyone other than Residentia Group, an authorised repairer or ASR.
8. This warranty, the contract to which it relates and the relationship between you and Residentia Group are governed by the law applicable where the Appliance was purchased.
9. To the extent permitted by law, Residentia Group excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Residentia Group in Australia, the Appliances come with a guarantee by Residentia Group that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Residentia Group shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. Missing parts are not covered by warranty. Residentia Group reserves the right to assess each request for missing parts in a case by case basis. Any parts that are not reported missing in the first week after purchase will not provide free of charge.
13. To enquire about claiming under this warranty, please follow these steps:
 - (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (e.g. an invoice) available;
 - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Residentia Group and its ASR may exchange information in relation to you to enable Residentia Group to meet its obligations under this warranty.

IMPORTANT

Before calling for service, please ensure that the steps in point 13 have been followed.

Telephone contacts

- Service: Please call 1300 11 HELP (4357)
- Spare Parts: Please call 1300 11 SPARE (7727)

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Elevate
your home,
for less.

WWW.INALTO.HOUSE



E2447