

USER MANUAL

INALTO?

INALTO.HOUSE

Circulation Fan

MODEL CODE

IFC108TGW



AUSTRALIAN OWNED

V1.0 | 0626

Welcome

Congratulations on purchasing your new Circulation Fan!

Residentia Group Pty Ltd

ACN. 600 546 656
165 Barkly Avenue
Burnley, Victoria 3121
Australia

—
Inalto

www.inalto.house

 /inalto.house

 /inalto.house

The Inalto brand is proudly distributed within Australia by Residentia Group Pty Ltd

Please refer to the warranty card at the rear of this manual for information regarding your product's parts and labour warranty, or visit online at:

→ www.residentia.group

→ www.inalto.house

Both Residentia Group are customer obsessed and our Support Teams are there to ensure you get the most out of your appliance. Should you want to learn more about recommended usage, the various features of your appliance, and importantly taking care of the unit when cleaning, our Support Teams are here to help.

Telephone Contacts:

→ AU: 1300 11 4357

→ NZ: 0800 763 448

It is important that you read through the following use and care manual thoroughly to familiarise yourself with the installation and operation requirements of your appliance to ensure optimum performance.

Again, thank you for choosing an Inalto appliance and we look forward to being of service to you.

SCAN ME



Scan to Register your Inalto Appliance or go to:

→ AU: inalto.house/en-au/registration

By registering your product, you will receive advanced support, stay updated with the latest from Inalto and find out about new products and promotions.

Contents

02 Welcome

04 Safety Information

05 Your Circulation Fan

06 Installation Instructions

07 Operating Instructions

09 Cleaning and Maintenance

10 Technical Specifications

11 Purchase Details

12 Warranty Information

Customer Care

Inalto recommends the use of original spare parts. When contacting our customer service team on 1300 11 4357, please ensure that you have the following information at hand (which can be found on your appliances' rating plate).

- Model Number
- Serial Number

Safety Information

GENERAL SAFETY INSTRUCTIONS

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as farm houses or by customers in serviced apartments, holiday apartments and other residential type of environments.

SAFETY INSTRUCTIONS

- Before using the appliance, carefully read the instructions in this manual.
 - The manufacturer is not responsible if an incorrect installation and use causes injuries and damages.
- Always keep the instructions with your appliance for future reference.

WARNING: To prevent any damages to your and others' life or property, you have to follow the safety notes.

CHILDREN & VULNERABLE PEOPLE SAFETY

WARNING: Risk of suffocation, injury or permanent disability.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children.

INSTRUCTIONS FOR SAFE OPERATION

- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window, rain may create electrical hazard.
- Household use only.

INSTALLATION

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Once the fan is assembled, the rotor blade guard shall not be taken off anymore

ELECTRICAL CONNECTION

WARNING: Caution, risk of fire and electrical shock!

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.

CARE & CLEANING

WARNING: Risk of injury or damage to the appliance.

 
- Prior cleaning unplug the fan.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- The rotor guard shall not be disassembled/opened to clean the rotor blades.

PRODUCT DISPOSAL

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.


Your Circulation Fan

YOUR CIRCULATION FAN

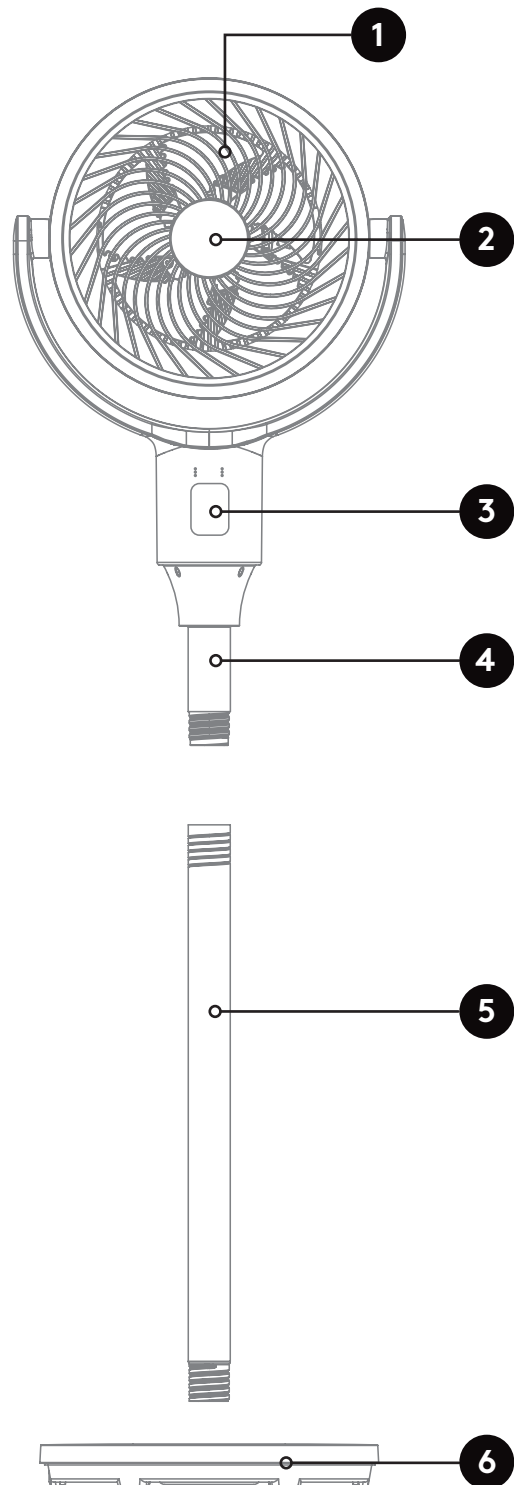

LEGEND

 1. Built-in PP Antibacterial Filter Rear Grille
2. Aromatherapy Cover
3. LED Digital Controls
4. Attaching Pole
5. Main Pole
6. Base
7. Adapter
8. Remote Control




Note: The images in this user manual are for explanatory purposes only. Your Circulation Fan may appear slightly different.

Installation Instructions

INSTALL THE BASE POLE

- Take the Main Pole and align it with the Base.
- Gently insert the threaded end of the Main Pole into the corresponding opening on the Base.
- Rotate the Main Pole clockwise until it is fully tightened and feels secure.

 
TIP: Make sure the Main Pole is upright and stable before proceeding.

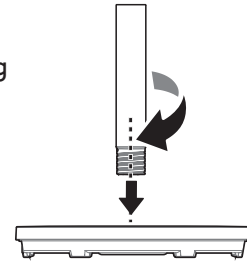

CONNECT THE ATTACHING POLE

- Take the Attaching Pole and align it with the top of the Main Pole you installed in the earlier steps.
- Insert the Attaching Pole into the Main Pole.
- Rotate the Attaching Pole clockwise until it is fully tightened and feels secure.

 TIP: If the pole does not insert smoothly, realign and try again —do not force it.



ADD AROMATHERAPY (OPTIONAL)

Enhance your environment by adding scent to the airflow.

To use the aromatherapy function:

- Locate the aromatherapy cover at the centre of the fan's front grille.
- Twist the cover counter-clockwise to open.
- You'll see a small cotton pad in the centre.
- Add 2–3 drops of your chosen essential oil or fragrance oil onto the cotton pad.
- Re-align the cover using the alignment mark.
- Press the cover back into place and rotate it clockwise to secure.

 
IMPORTANT:

Do not oversaturate the cotton pad.

Use only oils intended for diffusion (e.g., lavender, eucalyptus, citrus).


Essential oils are not included with this product and must be purchased separately.

Keep oils away from children and avoid skin contact. Clean up spills immediately.

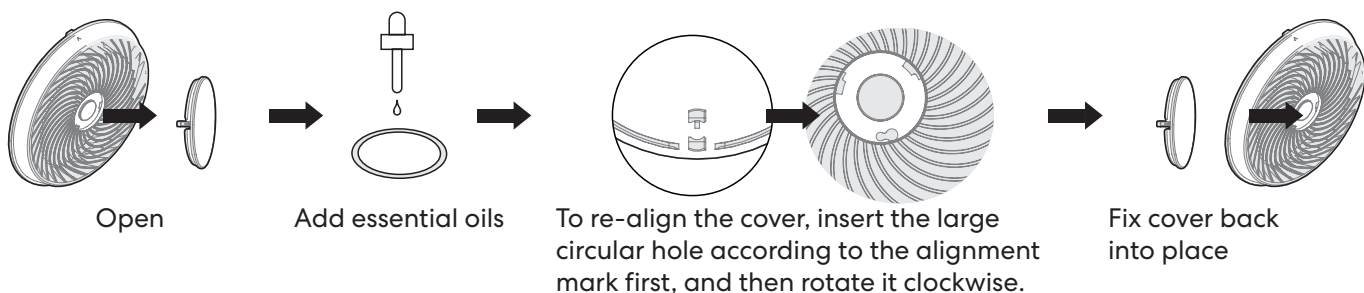

Operating Instructions

 LED DIGITAL CONTROLS

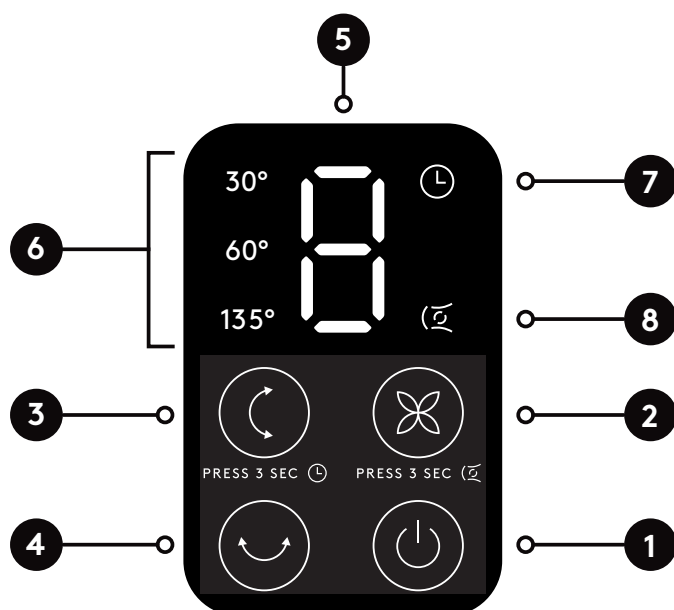

KEY	ICON	BUTTON / INDICATOR	FUNCTION
1		Power Button	Press once to turn the fan on or standby.
2		Wind Speed Button	Press to cycle through the wind speeds, 1 to 9. Press for 3 seconds to enter or exit Air Circulation Mode where the air is distributed more evenly.
3		Vertical Oscillation Tilt	Press to adjust tilt oscillation angle, 30°, 60°, 135° or off. Press for 3 seconds to set the Timer Function. Press repeatedly to cycle between 0h to 9h. Wait 3 seconds to confirm your setting.
4		Horizontal Oscillation	Press to enable or disable 85° side-to-side oscillation.
5		LED Display	The LED display will show the current wind speed level or timer setting.
6	30° 60° 135°	Vertical Tilt Angle Indicator	These will light up showing the selected tilt angle when the vertical oscillation tilt is active.
7		Timer Function Indicator	This will light up indicating the Timer Function is active.
8		Air Circulation Mode Indicator	This will light up indicating the Air Circulation Mode function is active.

 
Operating Instructions

REMOTE CONTROL

The remote control works effectively within a distance of 5 meters from the front of the product and within a 30° angle from the centreline.

BATTERY SAFETY & INSTALLATION

- Use only AAA size manganese or alkaline batteries.
- Do not use rechargeable batteries (e.g., Ni-Cd, Ni-MH).
- Do not mix old and new batteries, or different battery types (e.g., alkaline, standard carbon-zinc, or rechargeable).

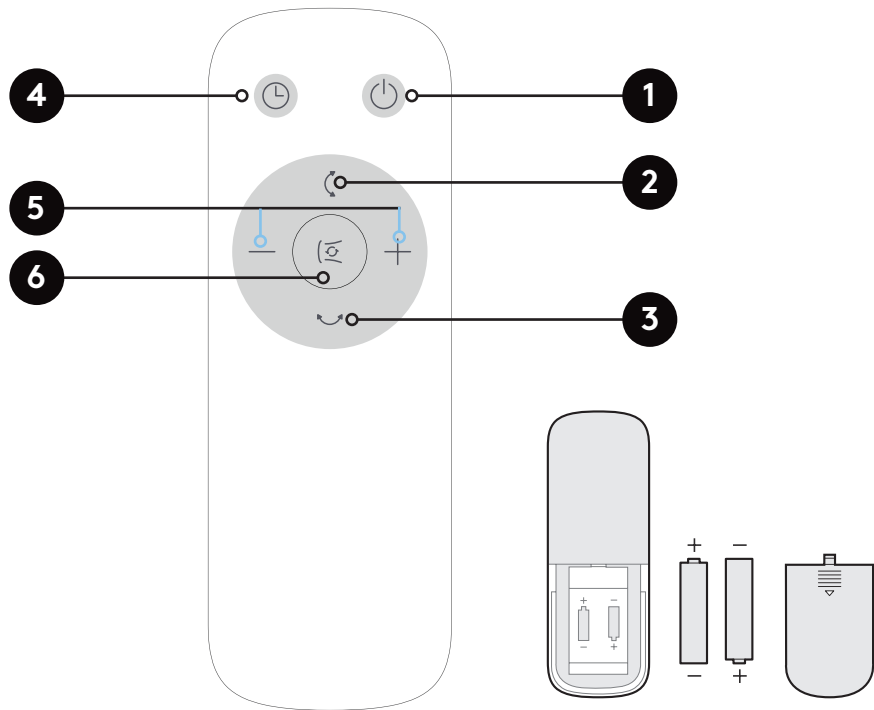

KEY	ICON	BUTTON	FUNCTION
1		Power Button	Press once to turn the fan on or standby.
2		Vertical Oscillation Tilt	Press to adjust tilt oscillation angle, 30°, 60°, 135° or off.
3		Horizontal Oscillation	Press to enable or disable 85° side-to-side oscillation.
4		Timer Function	Press to activate the Timer Function.
5		Increase/Decrease Adjustment Buttons	Press these buttons to adjust the wind speeds (1 to 9), air circulation speed, or the Timer Function (0h to 9h).
6		Air Circulation Mode	Press to activate the Air Circulation Mode function.

ENVIRONMENTAL NOTE

Batteries contain harmful substances such as heavy metals, acids, and alkalis, which can pose risks to human health and the environment.
Please dispose of used batteries properly by following local recycling regulations.

Note: The images in this user manual are for explanatory purposes only.
Your Circulation Fan may appear slightly different.

Cleaning and Maintenance

To ensure safe operation and prolong the life of your appliance, follow these cleaning and maintenance guidelines carefully:

BEFORE CLEANING

- Always unplug the power supply before beginning any cleaning or maintenance.
- After turning off the fan, wait at least 2 minutes to allow internal components to cool and discharge before cleaning.

CLEANING INSTRUCTIONS

- Never rinse the appliance directly with water. Water exposure may damage internal components and pose an electric shock hazard.
- Use a soft, lint-free cloth dampened with a small amount of mild, neutral detergent to gently clean the exterior surface.
- After cleaning, use a dry cloth to thoroughly wipe down all surfaces to remove any remaining moisture.
- Do not use abrasive cleaners, solvents, or chemicals such as gasoline, alcohol, or bleach, as these may damage the finish or internal parts.

AFTER CLEANING

- Ensure the appliance is completely dry before plugging it in or storing it.
- Do not operate the fan while wet.

IMPORTANT:

- Do not disassemble or modify the appliance under any circumstances. This may lead to malfunction, electrical hazards, or void your warranty.
- To maintain optimal performance, regularly inspect and clean the fan to prevent dust build-up and ensure efficient airflow.

Technical Specifications

Below outlines the technical specifications for your Circulation Fan.

Model/s	IFC108TGW
Dimensions (W × D × H mm)	300 × 360 × 1080 mm
Rated Voltage	24V $\approx$
Rated Power	24W
Max Noise Rating	59dB(A)

Below outlines the technical specifications for the Adapter.

Input	100-240V $\sim$ 50/60Hz 1.5A
Output	24V $\approx$ 1.5A

Purchase Details

For future reference, please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice.

STORE DETAILS

STORE NAME			
ADDRESS			
TELEPHONE		PURCHASE DATE	

PRODUCT DETAILS

MODEL NO.	
SERIAL NO.	

Warranty Information

WARRANTY TERMS AND CONDITIONS

CIRCULATION FANS

This document sets out the terms and conditions of the product warranties for Residentia Group Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
 - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
 - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
 - (c) 'Appliance' means any Residentia Group product purchased by you accompanied by this document;
 - (d) 'ASR' means Residentia Group authorised service representative;
 - (e) 'Residentia Group' means Residentia Group Pty Ltd of 165 Barkly Ave, Burnley VIC 3121, ACN 70 600 546 656 in respect of Appliances purchased in Australia;
 - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Residentia Group, at its discretion, to repair an Appliance during the Warranty Period;
 - (g) 'Warranty Period' means:
 - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects for 24 months (or 36 months where a valid extended warranty registration has occurred), following the date of original purchase of the Appliance;
 - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.
3. During the Warranty Period Residentia Group or its ASR will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Residentia Group or its ASR may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Residentia Group. This warranty does not apply to light globes, batteries, seals, filters or similar perishable parts.
4. Parts and Appliances not supplied by Residentia Group are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Residentia Group or its ASR. If you reside outside of the service area, you will bear the cost of:
 - (a) travel of an authorised representative;
 - (b) transportation and delivery of the Appliance to and from Residentia Group or its ASR, in all instances, unless the Appliance is transported by Residentia Group or its ASR, the Appliance is transported at the owner's cost and risk while in transit to and from Residentia Group or its ASR.
6. Proof of purchase is required before you can make a claim under this warranty.

SCAN ME



Scan to Register your Inalto Appliance or go to:
→ AU: inalto.house/en-au/registration

By registering your product, you will receive advanced support, stay updated with the latest from Inalto and find out about new products and promotions.

Warranty Information (Continued)

7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Residentia Group is not liable in the following situations (which are not exhaustive):
 - (a) the Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation
 - (viii) failure to comply with any additional instructions supplied with the Appliance;
 - (b) the Appliance is modified without authority from Residentia Group in writing;
 - (c) the Appliance's serial number or warranty seal has been removed or defaced;
 - (d) the Appliance was serviced or repaired by anyone other than Residentia Group, an authorised repairer or ASR.
8. This warranty, the contract to which it relates and the relationship between you and Residentia Group are governed by the law applicable where the Appliance was purchased.
9. To the extent permitted by law, Residentia Group excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Residentia Group in Australia, the Appliances come with a guarantee by Residentia Group that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Residentia Group shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. Missing parts are not covered by warranty. Residentia Group reserves the right to assess each request for missing parts in a case by case basis. Any parts that are not reported missing in the first week after purchase will not provide free of charge.
13. To enquire about claiming under this warranty, please follow these steps:
 - (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (e.g. an invoice) available;
 - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Residentia Group and its ASR may exchange information in relation to you, in order to enable Residentia Group to meet its obligations under this warranty.

IMPORTANT

Before calling for service, please ensure that the steps in point 13 have been followed.

Contact Service: Please call 1300 11 HELP (4357)

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

THIS PAGE IS INTENTIONALLY LEFT BLANK

THIS PAGE IS INTENTIONALLY LEFT BLANK

Elevate
your home,
for less.

INALTO?

WWW.INALTO.HOUSE



E2447