

CARE
— FOR YOU FIRST —

CARE
FOR YOU FIRST

CARE
— FOR YOU FIRST —



YT204X/1820014662

www.tefal.com


CARE

— FOR YOU FIRST —



Scan me
for a video
about
CARE FOR YOU FIRST

ENGLISH 4

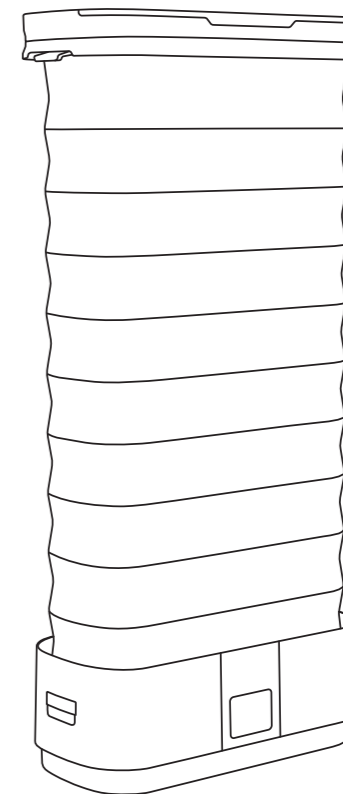

1. PRODUCT OVERVIEW

PRODUCT HANDLING

- 1 Top cover
- 2 Remote control storage
- 3 Shutter lock/unlock handles
- 4 Poles x2
- 5 Pole locks x4
- 6 Shutter

ACCESSORIES


- 7 Hangers x3
- 8 Large straighteners x4
- 9 Small straighteners x8
- 10 Built-in clasps x4

OTHERS

- 11 Pole locks x4 (2 upper and 2 lower)
- 12 Filter
- 13 Detachable water tank
- 14 Tank cap
- 15 Floor pads
- 16 Stabilisers




Scan me
for a video about
CARE FOR YOU FIRST

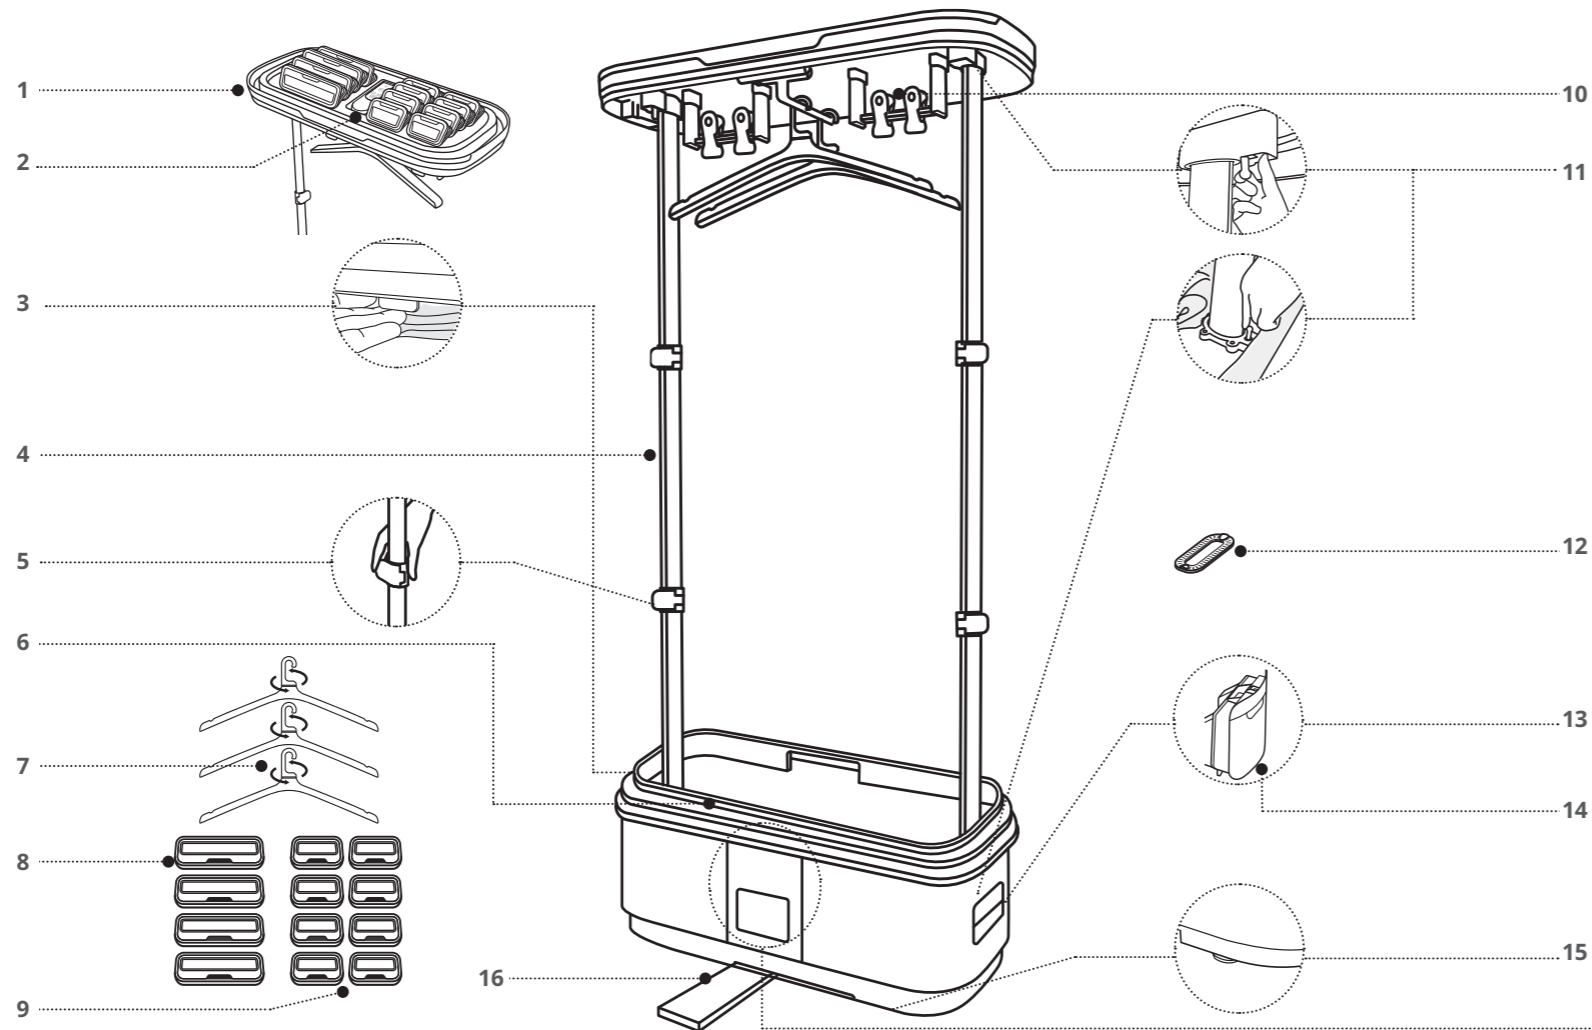

INTERACTIVE DISPLAY

- A Program indicators
- B Time remaining indicator
- C Pause indicator
- D Water tank empty or incorrectly positioned indicator
- E Infrared receiver
- F "On/Off button"
- G Programmes proposes (voir section "WHICH PROGRAM SHOULD I CHOOSE?")
- H Time adjustment
- I "Start/Stop" button for a program

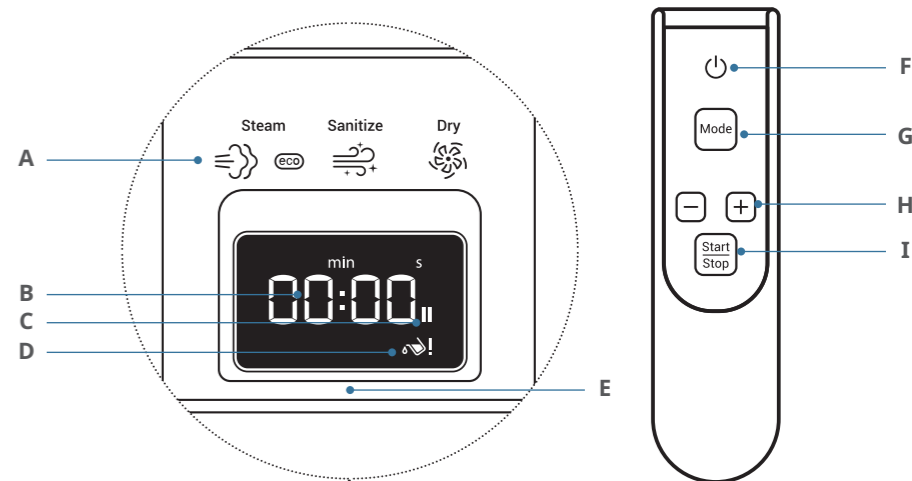


PLEASE READ THE SAFETY INSTRUCTIONS
BEFORE USING THE APPLIANCE.

2. INSTALLING THE PRODUCT




Do not install Care For You First in a bathroom or any other damp location.

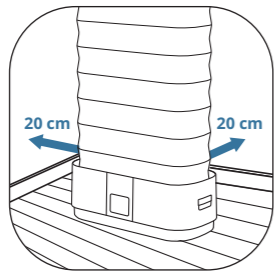

Leave 20 cm of clear space around the product.




Do not install Care For You First near a source of heat.

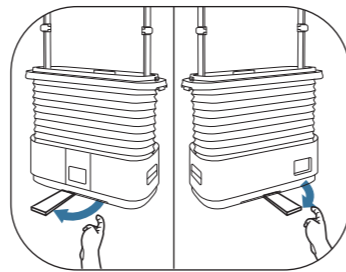

Pull out the two stabilisers at the front and back of Care For You First.

3. PRODUCT ASSEMBLY

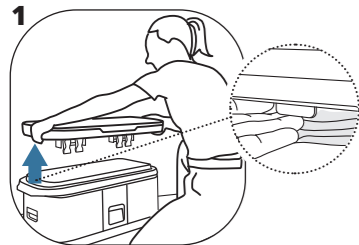

1-Raise the shutter slightly to access the handles. Press in the shutter lock/unlock handles, then remove the top cover from the base.

2-Insert the poles into the base (align the arrow at the bottom of the pole with the arrow inside the base).

2.1 Make sure that the pole locks are facing inwards.




2.2 Make sure that the two base locks are closed.

3-Extend the two poles to their middle position and shut the two lower locks.

4-Fully extend the two poles and shut the two upper locks.

5-Replace the top cover.

5.1 Make sure that the two top cover locks are closed.

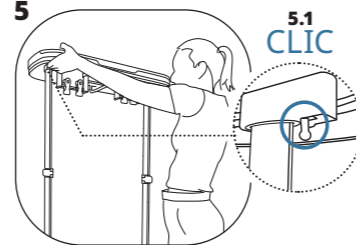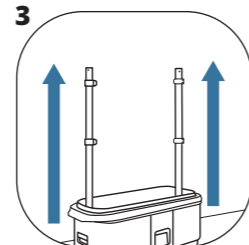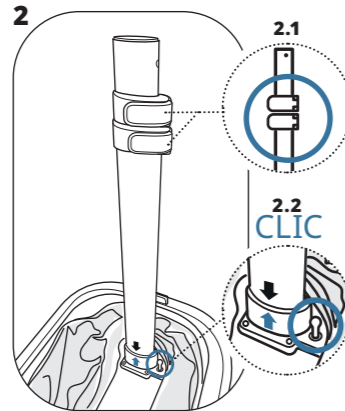

4. WHICH PROGRAM SHOULD I CHOOSE?



STEAM

You can adjust the steam time in five-minute increments. **The longer the cycle, the more crease-free your garment will be.**

10 min : Light and fast steaming.

20 min : Optimal crease removal for most garments.

30 min : Ideal for garments that are difficult to remove creases from.



STEAM ECO

30 min : Optimal crease removal that saves energy.



SANITIZE







20 min : Quick refresh of fabrics. Removes odours*. Ideal for less frequent washing.

40 min : Deep sanitizing. Kills up to 99.99% of viruses, bacteria and germs**, significantly reduces allergens*** and effectively eliminates odours.



DRY

5-90 min : Dry your clothes 5 times faster****. Suitable for all textiles, even the most delicates ones. No risk of damage or shrinkage.

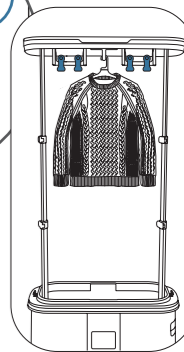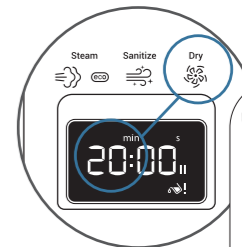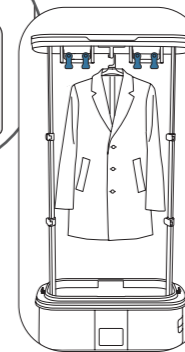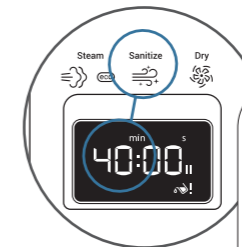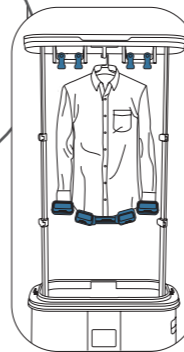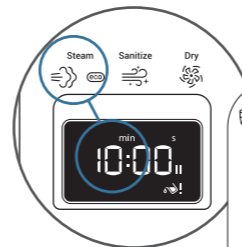

*Test performed by an external laboratory in 2023, on sanitize mode - 20 min.













**Test performed by an external laboratory on cotton, on sanitize mode - 40 min.

***Test performed by an external laboratory, on sanitize mode - 40 min, the YR/YT20 product reduces and denatures concentrations of dust mite allergens by up to 98%, cat allergens by up to 77% and birch pollen allergens by up to 63%.

****Compared to natural drying in ambient temperature. Test performed on dry mode - 45min, with 2 cotton shirt and 1 polo-shirt.


5. HOW DO I POSITION MY CLOTHES?

⚠ Using straighteners will help you achieve better crease-free results.
Depending on the results, you may need to reposition the straighteners on the clothes, or add or remove them.


	 STEAM 10-30 min*	 SANITIZE 20-40min	 DRY 5-90min
Common fabrics (cotton, linen, polyester etc.)	 With 2-5 straighteners depending on each garment	 Straighteners are not recommended	 Straighteners are not recommended
Delicate textiles or those that lose their shape (silk, cashmere, wool, light t-shirts etc.)	 Straighteners are not recommended	 Straighteners are not recommended	 Straighteners are not recommended
Excluded textiles (leather, fur, suede)			

*20 minutes is recommended for optimal results on most clothing.

SHIRTS

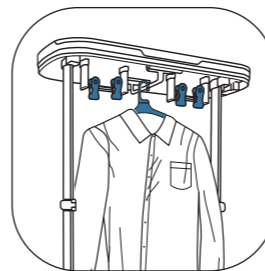


 Hang up to two shirts and hang on the rail.
If you want to remove creases from a shirt, button it up to the top.

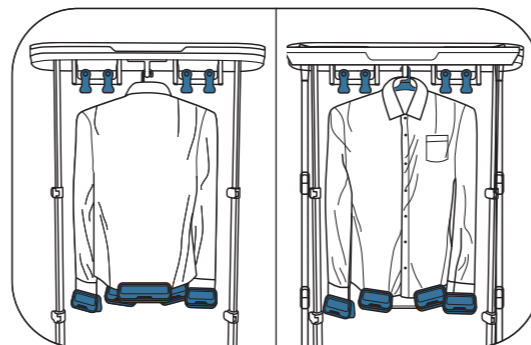

To remove creases, place a large straightener on the back of the shirt, two small straighteners on each sleeve and two small straighteners on the front of the shirt.

TROUSERS

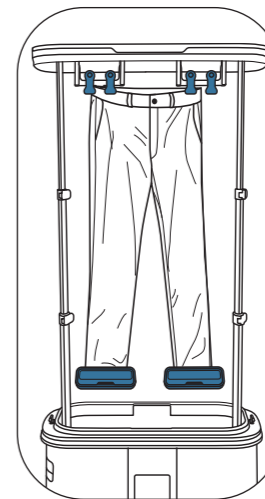


Use the built-in clasps to hang your trousers in Care For You First.

To remove creases, put a large straightener on the end of each trouser leg.

⚠ Remember to empty the pockets of your garments.

OTHERS

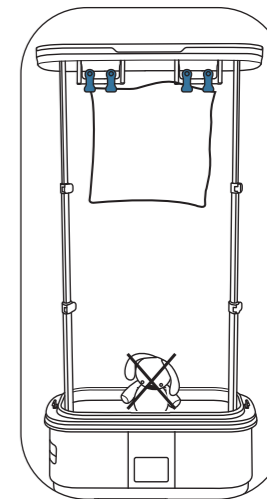


Use the built-in clasps for throws, pillows or comforters.

⚠ Do not block the filter in the base of the product.

UP TO THREE GARMENTS CAN BE TREATED AT A TIME.

6. USING THE PRODUCT

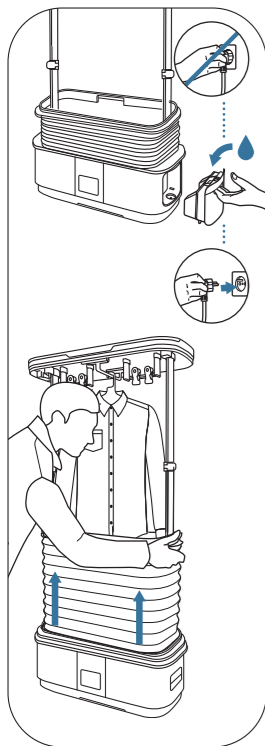

Make sure that the power cord is unplugged.

Remove the water tank and fill it with water.


Plug the appliance in.

To remove creases and sanitize, you can insert up to three garments.

(See the "How do I position my clothes?" section).

Close the shutter.

⚠ Always close the shutter before starting a cycle.

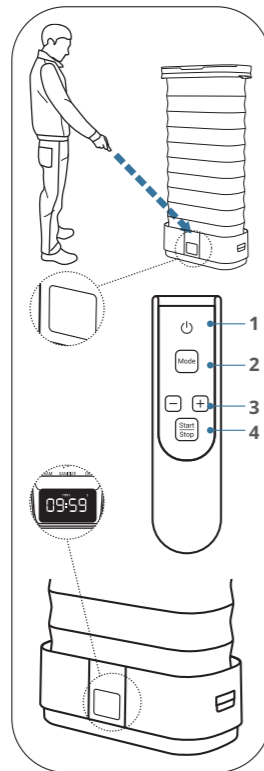

Point the remote control towards the infrared receiver.


1 Press the "On/Off" button on the remote control.

2 Choose your program by clicking on the "MODE" button.

An indicator at the bottom of Care For You First will light up to confirm the selected program.

3 Use the "+" and "-" buttons to adjust the time.

4 Start the selected program by pressing the "Start/Stop" button.

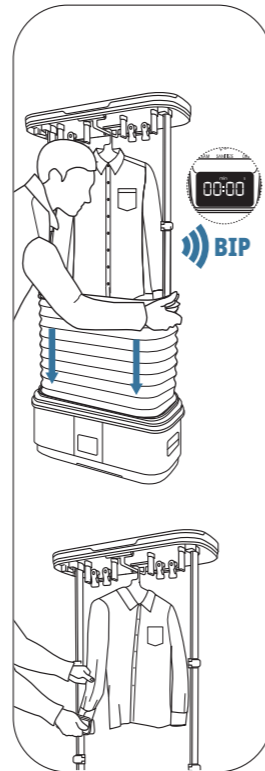


While your program is running, the screen will display the time remaining for the cycle.


⚠ Do not open the shutter while the program is running.

A beeping sound will indicate that the program has finished. Press the switch for locking/unlocking the shutter to lower it.

Remove the straighteners and then the garment(s).

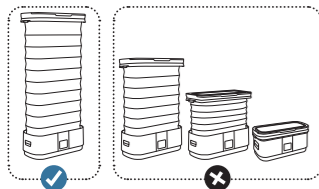

7. HOW TO STORE THE PRODUCT

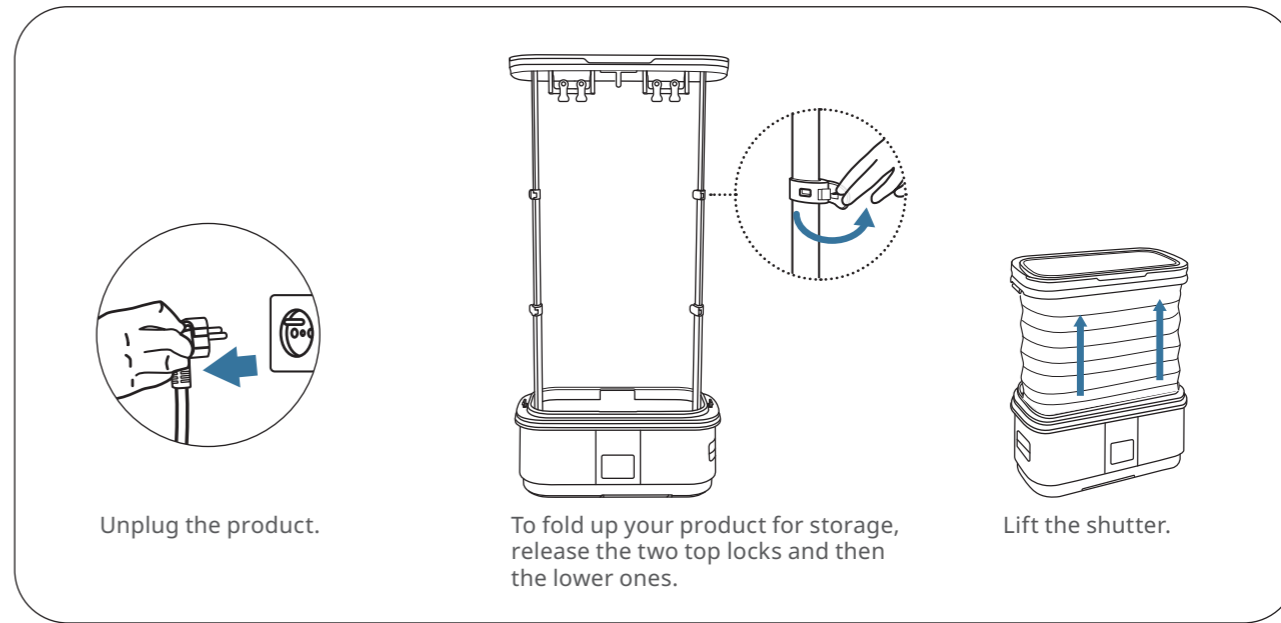


Unplug the product.

To fold up your product for storage, release the two top locks and then the lower ones.


Lift the shutter.

⚠ Keep hold of the top cover when releasing the pole locks. Take care when moving the product over uneven ground to avoid damaging the floor pads. To prevent water from escaping from the tank, do not tilt the product when moving it.


8. HOW TO DISASSEMBLE THE PRODUCT

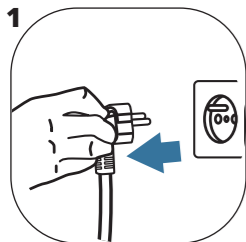


1 Unplug the product.

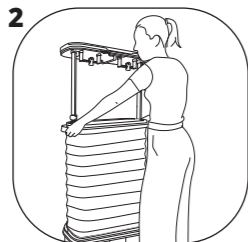


2 Press in the handles to open the shutter.

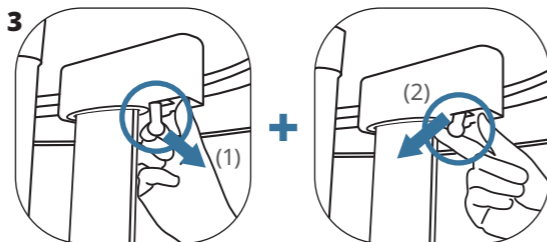


3 Release the top cover locks by pulling towards you (1) and then folding inwards (2). Remove the top cover.

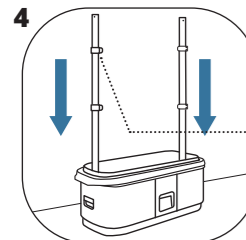


4 Collapse the poles back down.

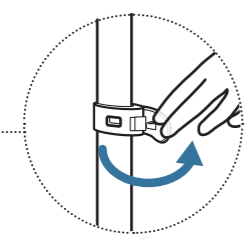

5.1 Release the locks while supporting the poles.

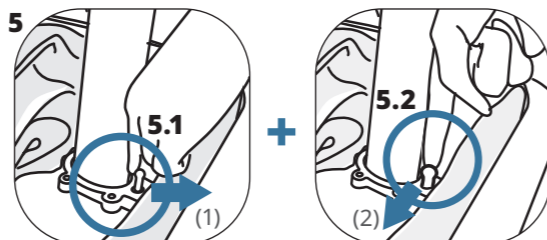

5.2 Release the base locks by pulling towards you (1) and then folding inwards (2). Remove the poles.

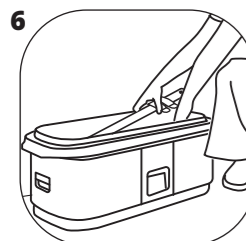

6 Store the two poles inside the base.



7 Put the top cover back on the base.


9. WHAT KIND OF GARMENTS SHOULD I USE WITH CARE FOR YOU FIRST?

All three Care For You First programs are suitable for use with most fabrics. If in doubt, refer to the symbols on your garment's care label.


⚠ Do not put shoes or gloves in Care For You First.

CATEGORY	SYMBOL	MEANING	CFY
WASHING		Hand wash only	✓
		Machine washable	✓
		Synthetics cycle	✓
		Gentle cycle	✓
		Do not wash	✓
TUMBLE DRYING		Machine washable	✓
		Synthetics cycle	✓
		Gentle cycle	✓
		Do not tumble dry	✓
		Do not dry	✗
		Hang to dry	✓
		Drip dry	✓
		Dry flat	✓
RECOMMENDED TUMBLE DRYER SETTINGS		Tumble dry, high heat	✓
		Tumble dry, medium heat	✓
		Tumble dry, low heat	✓
		Tumble dry, no heat	✗

10. CLEANING THE PRODUCT

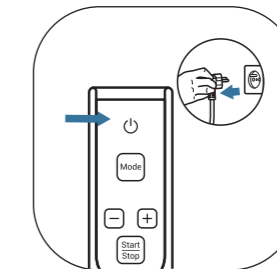

10.1 Turn off and unplug the appliance. Wait one hour for the appliance to cool down completely.

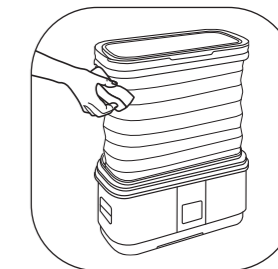

10.2 Clean the shutter using a damp cloth or well wrung-out sponge.




Never use abrasive products or agents for cleaning or descaling.
⚠ Do not scratch the infrared receiver or the transmitter on the remote control.

✓ : suitable for use with Care For You First.
✗ : do not use with Care For You First.

11. IN THE EVENT OF A PROBLEM

If you have any problems with your product, please do not hesitate to contact customer service.

PROBLEMS	CAUSES	SOLUTIONS
I am not satisfied with the steaming results.	The selected time and/or number of straighteners is not suitable for the garment(s).	Restart a 30-minute STEAM cycle. If the garment has buttons, fasten them all up and consider using straighteners if the garment allows (see the "How do I position my clothes?" section).
	The position or number of weights is not suitable for the garment.	Follow these steps: 1/ Reposition the weights 2/ Add or remove weights.
Using the straighteners has stretched my garment.	You used the straighteners on a garment that easily loses its shape.	Rewash your garment. In most cases, this is enough for it to regain its original shape. In future, use Care For You First without the straighteners for this garment.
At the end of the program, the shutter is wet on the inside/there is water in the bottom of the unit.	The drying cycle at the end of the program was not finished.	Use a cloth to dry the bottom of the unit. Leave your unit open so it dries naturally.
There is too much steam coming out of the top of my product.	The shutter is not properly closed.	Ensure that the shutter is clipped securely to the top of the product.
The product has stopped responding to the remote control.	The remote control is not pointed at the infrared receiver or has run out of battery.	Point the remote control at the infrared receiver at the bottom of the product and check its batteries.
My product will not stay in the raised position.	The poles are not being raised up high enough to activate the locking mechanism.	Lift the poles to maximum height to activate the locking mechanism.
I am seeing this symbol: 	The water tank is empty or incorrectly positioned.	Fill the tank and check that it is properly clipped into place.
My device turns itself off.	After a few minutes, the appliance switches off automatically to save energy.	You can turn your appliance back on using the remote control.
Damp patches are appearing on the walls or ceiling.	You have not moved Care For You First far enough away from the wall during use, the room is not sufficiently ventilated or you have not fully closed the shutter.	Move Care For You First at least 50 cm away from the wall during use or place the appliance in a larger room with better ventilation and more moderate temperature. Ensure that the shutter is properly closed.
My product is leaking.	The tank cap is not properly closed.	Screw in the tank cap correctly.
I am not satisfied with the drying results.	Your garments are too wet.	Spin your clothes before putting them into Care For You First.