

Sunbeam

Mixmaster® Combo Pro Hand & Stand Mixer

User Guide

MXP1000WH



Contents

Sunbeam's Safety Precautions	1
Features of your Mixmaster® Combo Pro	2
Using your Mixmaster® Combo Pro	4
Swivel Control	6
Mixing Guide	7
Care and Cleaning	7
Recipes	8

Important Instructions - retain for future use

تأكد من تفهم احتياطات السلامة المذكورة أعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Aségúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM MIXMASTER COMBO PRO.

- Never eject beaters, whisks or dough hooks when the appliance is in operation.
- Ensure fingers are kept well away from moving beaters and dough hooks.
- Any misuse of this product may lead to potential injury.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:


- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.

- Do not operate for longer than 5 minutes at a time. After 5 minutes rest for 2 minutes then continue mixing.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your Mixmaster® Combo Pro

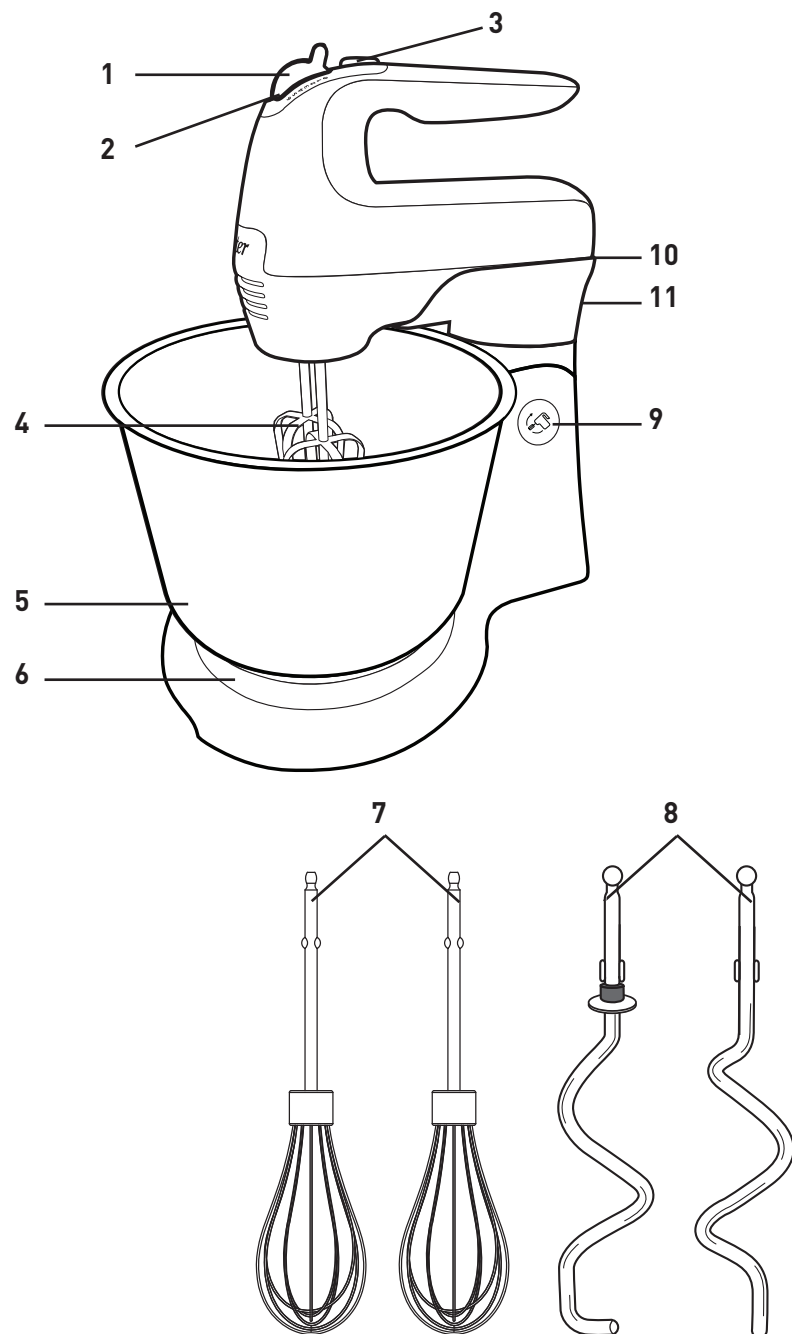

Features of your Mixmaster® Combo Pro

- 1. 6 speed control switch**
6 speeds that range from high speeds for whisking and low speeds for kneading.
- 2. Beater eject**
To effortlessly release the beaters, whisks or dough hooks for easy cleaning. Press the speed control button downwards to eject.
- 3. Burst of power**
Provides an extra speed boost and burst of power for those extra tough mixing tasks.
- 4. 'V-groove' beaters**
Specially designed for optimum mixing and aeration. The beaters are positioned off-centre for easy addition of ingredients during mixing.
- 5. 3.8 litre stainless steel mixing bowl**
Ideal for mixing delicate ingredients.
- 6. Turntable**
The mixing bowl sits here and is rotated by the attachments during mixing to allow all areas of the bowl to be mixed.
- 7. Balloon whisks**
Designed to add in maximum air in minimum time. Use for whipping and whisking tasks.
- 8. Dough hooks**
The heavy-duty steel dough hooks take the hard work out of kneading dough and other heavy mixtures.
- 9. Tilt button**
The head of the mixer tilts back and locks securely into position to allow for easy removal of the mixing bowl and attachments.
- 10. Hand mixer release tab**
Designed for maximum use the mixer transforms into a convenient hand mixer, as the head of the mixer simply detaches from the mixing stand.
- 11. Swivel control**
Choose between 2 different mixer head positions to ensure a thorough and even mixing action.


Using your Mixmaster® Combo Pro

Before use


Before assembling your mixer, be sure the power cord is unplugged from the power outlet and the speed control switch is in the '0' OFF position.

1. Press the tilt button and tilt the cradle back into OPEN position. Place the hand mixer into the cradle ensuring the base of the hand locks in correctly.

Note: When fitted correctly there will be no gap between the hand mixer and the cradle.

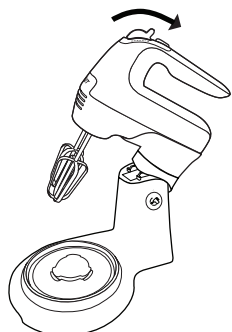

2. Select the desired attachments, depending on the mixing task to be performed: beaters for mixing and beating, whisks for whisking or dough hooks for kneading.

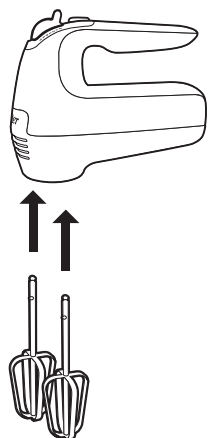

Inserting the beaters or whisks


- 3a. Beaters or whisks can be inserted in either socket, as they are identical.

Inserting the dough hooks

- 3b. To insert the dough hooks, place the dough hook with the small washer into the left socket. Place the other dough hook into the right socket.

Note: Ensure both beaters, whisks or dough hooks are fully inserted into the correct sockets or your mixing results may be affected.

4. Place the 3.8 litre mixing bowl onto the turntable.

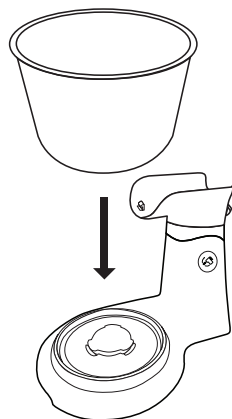

5. To lower the head of the mixer and beaters/whisks/dough hooks into the bowl, depress the 'tilt' button, hold the handle with the other hand and ease the head of the mixer down. A 'click' will indicate when the head has reached the correct position.

Using your Mixmaster® Combo Pro (continued)

Using your mixer

1. With the speed control switch in the '0' OFF position, plug the power cord into a 230- 240V AC power outlet.
2. Use the speed control switch to turn the mixer 'ON' and 'OFF' and to control the mixing speeds. Clearly marked instructions for correct mixing speeds for each type of mixture are shown in the Mixing Guide on page 7.

Tip: Always start mixing at slow speeds and increase the speed gradually to prevent ingredients splashing out of the mixing bowl.

Tip: When adding dry ingredients use the lowest speed to prevent the 'snow storm' effect.

Tip: When kneading yeast doughs, using Low speeds 1-2 (low) to achieve best results.

3. When mixing is complete, turn the speed control switch to the '0' OFF position and unplug the cord from the power outlet.
4. Hold down the 'tilt' button and ease the head of the mixer back until the mixer head is in the tilt position.
5. To remove the beaters/whisks/dough hooks, place fingers loosely around the spindles and press the speed control switch downwards.

Removing the hand mixer

1. With the speed control switch in the '0' OFF position, unplug the power cord.
2. Press the 'tilt' button with one hand and place the other hand on the hand mixer handle. Tilt the mixer head back to full position until 'click' into place.
3. With one hand pull down on the Hand Mixer Release Tab, releasing the hand mixer from the mixing base.
4. With the other hand, grip the hand mixer handle and pull away from the mixer base in a diagonally upwards movement.
5. The hand mixer is now ready to use for mixing tasks.

Swivel Control


At the back of the mixer stand is the Swivel Control switch. This controls the position of the mixer head in the mixing bowl.

Lock Position (switch in far right position)

The mixer head will be locked into position with the accessories close to the edge of the bowl.

Unlock Position (switch in far left position)

The mixer head will be free to move from side to side during mixing to reach all areas of the bowl.

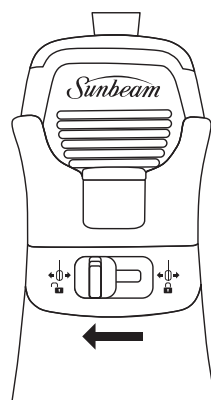

Mixing Guide

MIXING TASK	Recommended Speed(s)
Kneading, Folding & Blending	1 - 2 (low)
Light Mixing	2 - 3 (low/med)
Creaming & Beating	4 - 5 (med/high)
Whipping & Aerating	5 - 6 (high)

Care and Cleaning

CAUTION: Turn off and unplug appliance and eject any accessories before cleaning.

1. Before cleaning any part of the mixer, set the speed control switch to the "0 (OFF)" position to turn off. Then unplug the cord from the outlet and eject the beaters.
2. The beaters, whisks, dough hooks and bowl may be washed in hot, soapy water or in a dishwasher.

CAUTION: Do not immerse mixer or stand in water while cleaning. This may cause electric shock, injury, or damage to the product.

3. To remove stubborn spots on the hand mixer and base, wipe surfaces with a cloth, slightly dampened in soapy water or a mild, non-abrasive cleaner.
4. Do not use any abrasive cleaner or material to clean any part of the hand mixer or stand as it can scratch the product.

Recipes

Butter Cake

Serves: 8-10

Preparation: 15 minutes

Cooking: 1 hour

175g butter, softened
1 teaspoon vanilla extract
1 cup caster sugar
3 eggs
2 ¼ cups self-raising flour
¾ cup milk

1. Preheat oven to moderate (180°C/160°C fan-forced). Grease and line a 20cm round cake pan.
2. Place all ingredients in a large bowl. Using the beaters, beat on Low speed (1-2) until combined. Increase speed to Medium-High (4-5) and beat for about 1 minute or until smooth.
3. Pour mixture into prepared pan.
4. Bake for about 1 hour or until a skewer inserted into the centre comes out clean. Stand cake for 5 minutes then turn onto a wire rack to cool.

Serving suggestion: Ice and decorate your cake with fluffy butter frosting (recipe on page 12)

Variations:

Cupcakes

Line a 12-hole muffin pan with patty cases. Spoon ¼ cup mixture into each case. Bake for about 12-15 minutes or until skewer inserted into the centre comes out clean.

Lemon or Orange Cake

Replace the vanilla extract with the finely grated rind of 1 lemon or orange.

Marble Cake

Divide batter into 2 portions, leave one plain, and add pink food colour to the second portion. Drop spoonfuls of alternate colours into prepared pan. Use a skewer or knife to swirl slightly and create a marbled effect.

Berry Cake

Fold 1 cup of fresh or frozen mixed berries through the cake batter.

Recipes

Buttermilk Pikelets

Makes: 24

Preparation: 5 minutes

Cooking: 15 minutes

1 egg
¼ cup caster sugar
1 cup self-raising flour, sifted
pinch salt
½ teaspoon bicarbonate of soda
¾ cup buttermilk
30g butter, melted
Cooking oil spray
Lemon juice and sugar, to serve

1. Place egg and sugar in a small bowl. Using the beaters, beat on Medium/High (4-5) until light and creamy.
2. Add flour, salt, bicarbonate of soda, buttermilk and butter and beat on Medium/High speed (4-5) until smooth.
3. Heat a frypan over medium heat. Spray with cooking oil spray. Add tablespoons of mixture and cook for about 2-3 minutes each side or until golden.
4. Serve pikelets warm or cold with lemon juice and sprinkle with sugar.

Chocolate Chip Cookies

Makes: about 30

Preparation: 15 minutes

Cooking: 10-15 minutes per batch

125g butter, softened
½ cup firmly packed brown sugar
½ cup caster sugar
1 teaspoon vanilla extract
1 egg
1 ¾ cup self raising flour
1 cup choc chips

1. Preheat oven to moderate (180°C/160°C fan-forced). Grease and line baking trays with baking paper.
2. Place butter, sugars and vanilla in a bowl. Using the beaters, beat on Low speed (1-2) until combined. Increase speed to Medium/High (4-5) and beat until light and creamy.
3. Add egg and beat until combined. Reduce speed to Low (1-2). Add flour and chocolate chips. Beat until combined.
4. Roll tablespoons of mixture into balls and place onto prepared trays. Press lightly with the back of a fork. Ensure that the cookies are well spaced to allow for spreading.
5. Bake cookies in batches for about 10 -15 minutes or until golden. Cool on trays.

Recipes

Meringue kisses

Makes: about 24

Preparation: 30 minutes

Cooking: 30 minutes

1 egg white
 ¼ cup caster sugar
 ½ teaspoon white vinegar
 2 teaspoons icing sugar
 Whipped cream, to serve

1. Preheat oven to very slow (120°C/100°C fan-forced). Grease baking trays and dust with corn flour. Shake off excess.
2. Place egg white in a small bowl. Using the whisks, beat on High speed (5-6) until soft peaks form. Gradually add the caster sugar and vinegar. Continue beating until sugar dissolves. Fold in sifted icing sugar.
3. Spoon the mixture into a piping bag fitted with a small star shaped nozzle. Pipe small meringues (about 1.5cm) onto the prepared baking trays.
4. Bake for about 30 minutes or until crisp and dry. Cool meringues on trays.
5. Sandwich cooled meringues with chantilly cream or a basic buttercream (recipe on page 12).

Tip: If you do not have a piping bag, use two teaspoons to spoon rounds of meringue mixture onto prepared trays.

Classic Sponge Cake

Serves: 8

Preparation: 20 minutes

Cooking: 20 minutes

4 eggs
 ¾ cup caster sugar
 1 cup wheaten cornflour
 1 teaspoon cream of tartar
 ½ teaspoon bicarbonate of soda
 Whipped cream and jam, to serve

1. Preheat oven to moderate (180°C/160°C fan-forced). Grease and line two 22cm round cake pans.
2. Place eggs in a small bowl. Using the beaters, beat on High speed (5-6) until thick and creamy (about 5 minutes). Continue beating, gradually adding the sugar until dissolved.
3. Sift flour, cream of tartar and bicarbonate of soda twice onto baking paper. Sift into egg mixture and use a large metal spoon to fold until combined.
4. Divide mixture evenly among cake pans. Bake for about 20 minutes or until skewer inserted into the centre comes out clean.
5. Turn cakes immediately onto a baking paper lined wire rack.
6. Serve cool sponges sandwiched together with whipped cream and jam. Dust with icing sugar.

Recipes

White Chocolate cheesecake

Serves: 10

Preparation: 30 minutes (plus refrigeration time)

250g plain sweet biscuits
 125g butter, melted
 2 teaspoons gelatine
 ¼ cup water
 375g cream cheese, softened
 ½ cup caster sugar
 1 teaspoon vanilla extract
 300ml thickened cream
 150g white chocolate, melted
 Mixed berries and grated white chocolate, to garnish

1. Grease and line a 22cm spring form tin with baking paper.
2. Place biscuits in a food processor. Process until fine. Add melted butter. Process until combined. Press mixture onto the base of the prepared tin. Refrigerate for 30 minutes.
3. Sprinkle gelatine over water in a heatproof jug. Stand jug in a small saucepan of simmering water. Stir until gelatine dissolves. Cool slightly.
4. Place cream cheese, sugar and vanilla extract in a large bowl. Using the beaters, beat on Low speed (1-2) until just combined. Increase to Medium/High speed (4-5) and beat until smooth.
5. Add cream. Continue beating until just combined. Add chocolate and gelatine mixture. Beat until just combined. Pour mixture into prepared tin. Refrigerate overnight or until firm.
6. Serve garnished with mixed berries and grated chocolate.

Chocolate mousse

Serves: 8

Preparation: 20 minutes

300ml thickened cream
 3 eggs, separated
 2 tablespoons caster sugar
 200g dark chocolate, chopped
 30g unsalted butter, chopped
 Whipped cream and extra chocolate to garnish

1. Place cream in a bowl. Using the beaters, beat on High speed (5-6) until soft peaks form.
2. Place egg whites in a clean bowl. Using the whisk, beat on High speed (5-6) until soft peaks form. Add sugar and beat until sugar dissolves.
3. Place chocolate in a heatproof bowl. Place bowl over a saucepan of simmering water. Stir with a metal spoon until melted. Remove from heat, add butter and stir until melted.
4. Add egg yolks and stir until smooth.
5. Fold cream and egg whites into chocolate mixture in two batches.
6. Spoon mixture into 8 serving glasses. Cover and refrigerate overnight.
7. Serve with extra whipped cream and garnish with shaved chocolate.

Recipes

Pavlova

Serves: 8-10

Preparation time: 25 minutes

Cooking: 90 minutes plus 4 hours cooling

4 egg whites
1 cup castor sugar
2 teaspoons vinegar
3 teaspoons cornflour
½ teaspoon vanilla extract

1. Preheat oven to 120°C. Grease and flour 20cm round tray.
2. Using a clean, dry bowl whip the egg whites until stiff on 5-6 (high) speed.
3. Gradually add the sugar, a teaspoon at a time to start. Beat well between each addition. As the mixture thickens add the sugar more quickly. This should take approximately 5-8 minutes mixing time.
4. Reduce speed to 1 and fold through vinegar, cornflour and vanilla. Continue mixing until mixture is stiff and glossy, approximately 2-3 minutes.
5. Spread half pavlova onto prepared tray. Pipe the remaining mixture to form a border.
6. Bake for 1¼-1½ hours. If able, turn oven off and allow to cool in oven overnight or for a few hours.

Serving suggestion:

Decorate as desired. Fresh cream and lots of fresh berries is a favourite. Sprinkled with icing sugar to finish off.

Fluffy Butter Frosting

⅓ cup butter
4 cups pure icing sugar
Pinch salt
3-4 tablespoons milk
1½ teaspoon vanilla

1. Place all ingredients into the bowl and on speed 2-3 mix until all ingredients are well combined, creamy, light and fluffy in texture.

Glaze Icing

3 tablespoons sugar
¼ cup water
1 teaspoon gelatine

1. Place all ingredients into a small saucepan. Stir over medium heat until sugar has dissolved, approximately 2 minutes.
2. Brush warm on top of baked sweet goods.

Warranty



This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or

- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer care line for advice on: 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact Sunbeam Customer Care:

Australia
www.sunbeam.com.au
1300 881 861
Suite 1, Level 1,
13 Lord Street,
Botany NSW 2019
Australia

New Zealand
www.sunbeam.co.nz
0800 786 232
Level 6, Building 5,
Central Park,
660-670 Great South Road
Greenlane, Auckland
New Zealand



Need help with your appliance?

Contact our Customer Care Team or visit our website for information and tips on getting the most from your appliance.

AUSTRALIA

Visit: www.sunbeam.com.au
Phone: 1300 881 861
Mail: Suite 1, Level 1, 13 Lord Street,
Botany NSW 2019

NEW ZEALAND

Visit: www.sunbeam.co.nz
Phone: 0800 786 232
Mail: Level 6, Building 5, Central Park,
660–670 Great South Road,
Greenlane, Auckland



– APPROVED BY –



NEWELL AUSTRALIA PTY LTD ABN 68 075 071 233

Due to continued product improvements,
product illustrations and photographs in this User Guide
may differ slightly from the actual product.