nutribullet

CRISPLITE™ DUAL STACK

9L AIR FRYER



User guide

⚠ **WARNING! To reduce the risk of serious injury, read the User Guide before operating your nutribullet CrispLite™ Dual Stack 9L Air Fryer. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.**

IMPORTANT SAFEGUARDS

When operating your nutribullet CrispLite™ Dual Stack 9L Air Fryer, remember:
SAFETY COMES FIRST. WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

⚠ **WARNING! To avoid the risk of serious injury, death, property damage, or damage to your device, carefully read all instructions before operating your nutribullet® device. When using any electrical appliance, basic safety precautions should always be observed, including the important information in this User Guide.**

Ensure that anyone using this nutribullet® product understands the health and safety information included in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should carefully read the User Guide in its entirety to become familiar with the safe operation of the unit.

! SAVE THESE INSTRUCTIONS!
FOR HOUSEHOLD USE ONLY

PERSONAL SAFETY

- **DO NOT TOUCH HOT SURFACES. Never touch the sides of the baskets, crisper plates or inside of the appliance during or after operation. Always use insulated oven gloves or use the basket handles when using the appliance.**
- **During hot air frying, hot steam is released through air vents located on the sides and back of the unit. Keep your hands and face away from the steam and from the air vents. Use caution when removing the Cooking Baskets from the appliance as there may be hot steam.**
- Before moving or storing the unit, turn the unit **OFF, UNPLUG** the power cord, and wait for the appliance to cool.

⚠ **WARNING!** Always be cautious of any residue oil or liquids at the bottom of the Cooking Baskets that still may be hot.

⚠ **WARNING!** Never touch or clean the heating element while the appliance is connected to power or while it is hot.

- Always turn the appliance **OFF** and **UNPLUG** from the outlet when not in use and before cleaning. Allow to cool down before assembling or disassembling parts, and before cleaning the appliance.
- **DO NOT** leave the appliance unattended when in use.
- **DO NOT** attempt to remove the Cooking Baskets while the unit is in operation. Pause or turn the appliance off and ensure that the cooking action has completely stopped before removing the Cooking Baskets from the Base.
- Removing the Cooking Basket too quickly or forcefully may result in splattering of hot contents and may cause serious burns and injuries.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they **DO NOT** play with the appliance.
- The use of attachments not recommended or sold by nutribullet® may cause personal injury or property damage.

⚠ **WARNING! NEVER overfill ingredients. Leave at least 50mm of space between your food and the top of the Cooking Baskets. Overfilling prevents the hot air from circulating or can cause the food to come into contact with the heating element causing smoke or possible fire.**

- **Do not use the appliance for any other purpose than described in this manual. Misuse may cause injury.**
- **Always use caution when operating the appliance with hot food. Improper use not in accordance with the safeguards contained in the user manual may result in serious personal injury or property damage.**
- **Never store anything on top of the appliance.**
- **DO NOT** immerse the appliance, or power cord in water or any other liquid. To prevent electric shock and short-circuit, avoid any liquid from entering the appliance.
- **NEVER** pour oil into the Cooking Baskets as this could result in fire or personal injury.

PRODUCT SAFETY

- **FOR COUNTERTOP USE ONLY**. Make sure the surface is level, heat-resistant, stable, clean and dry. **DO NOT** place the unit near the edge of the countertop during use. Never use a power outlet below counter which can make the cord accessible to children.
- **BEFORE USE:** Make sure to install the wall spacer (if CrispLite Dual Stack) by clipping to the receiver on the back of the unit.
- We recommend placing a heat proof mat underneath your appliance when in use, to protect your benchtop from the risk of heat damage.
- Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.
- Always ensure that the Cooking Basket is thoroughly dried after cleaning and is positioned correctly before use.

- **DO NOT** put any **NON**-food items into the Cooking Basket for the purpose of frying or heating.
- **DO NOT** use the appliance for deep frying with oil.
- When using this appliance, provide adequate air space (at least 200mm) above, below, and on all sides for circulation.
- **DO NOT** cover the air outlet vent, located on the back of the unit, while the unit is operating.
- **DO NOT** place on or near a hot gas or electric burner, in a heated oven, or on a stovetop.
- **DO NOT** place the appliance close to flammable materials such as curtains, and **DO NOT** place anything above or on top of the appliance when in use.
- **DO NOT** use this appliance if any parts appear to be damaged. If you have any questions or concerns, please contact customer service (**AU: 1300 285538 / NZ: 0800 232 633**).
- This product is not intended for use outside of Australia and New Zealand.

⚠ **WARNING! DO NOT** use this product in locations with different electrical specifications or plug types. **DO NOT** operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage.

- **DO NOT** modify the plug in any way.
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- **DO NOT** let the power supply cord hang over the edge of a table or countertop.
- **DO NOT** let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.
- Regularly inspect the power cord, plug, and appliance for any damage. **DO NOT** operate any appliance with a damaged cord or plug or if the appliance malfunctions, or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service. You may purchase new nutribullet® attachments or other parts at bulletbrands.com.au/ bulletbrands.co.nz or by contacting customer service (**AU: 1300 285538 / NZ: 0800 232 633**).
- Any maintenance other than cleaning should be performed by a qualified electrician. **DO NOT** attempt to repair or service this appliance yourself.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicle or boats. Do not use outdoors.
- This appliance is intended to be used in household and similar applications such as:
  – staff kitchen areas in shops, offices and other working environments;
  – farm houses;
  – by clients in hotels, motels and other residential type environments;
  – bed and breakfast type environments

⚠ **WARNING! CLEAN THE COOKING BASKET AFTER EACH USE TO PREVENT ACCUMULATION OF OIL AND FOOD DEBRIS THAT CAN CREATE SMOKE AND A POTENTIAL FIRE HAZARD.** Oil should be directly placed on the food before placing in the cooking basket.

- If you have any questions or comments or if some aspect of this user guide is not clear, please contact customer service for assistance at **bulletbrands.com.au / bulletbrands.co.nz**.
- Plug the appliance directly into a suitable wall outlet. **DO NOT** use with an extension lead, power board or double adaptor.

! SAVE THESE INSTRUCTIONS!



Contents

8 **What's included**

9 **Assembly guide**

10 **Control panel**

12 **Usage instructions**


- 12 Before first use
- 13 Assembly
- 14 Using the Air Fryer

18 **Care & maintenance**


- 19 Replacement parts

Thank you for purchasing the nutribullet CrispLite™ Dual Stack 9L Air Fryer.


What's included

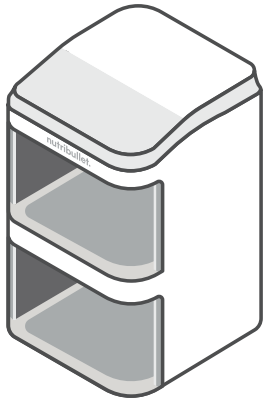


2300 watt air fryer base

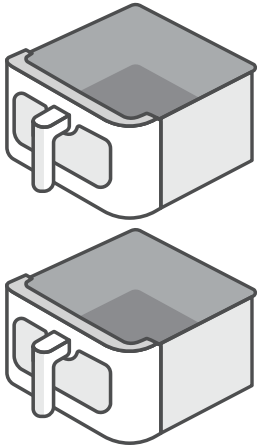


2 4.5L cooking baskets

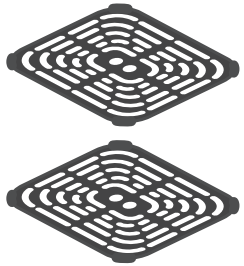

2 crisping trays

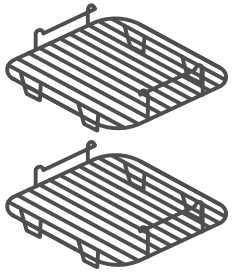


2 wire racks

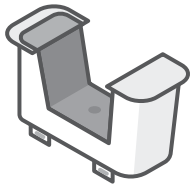


cord wrap/ wall spacer

Assembly guide

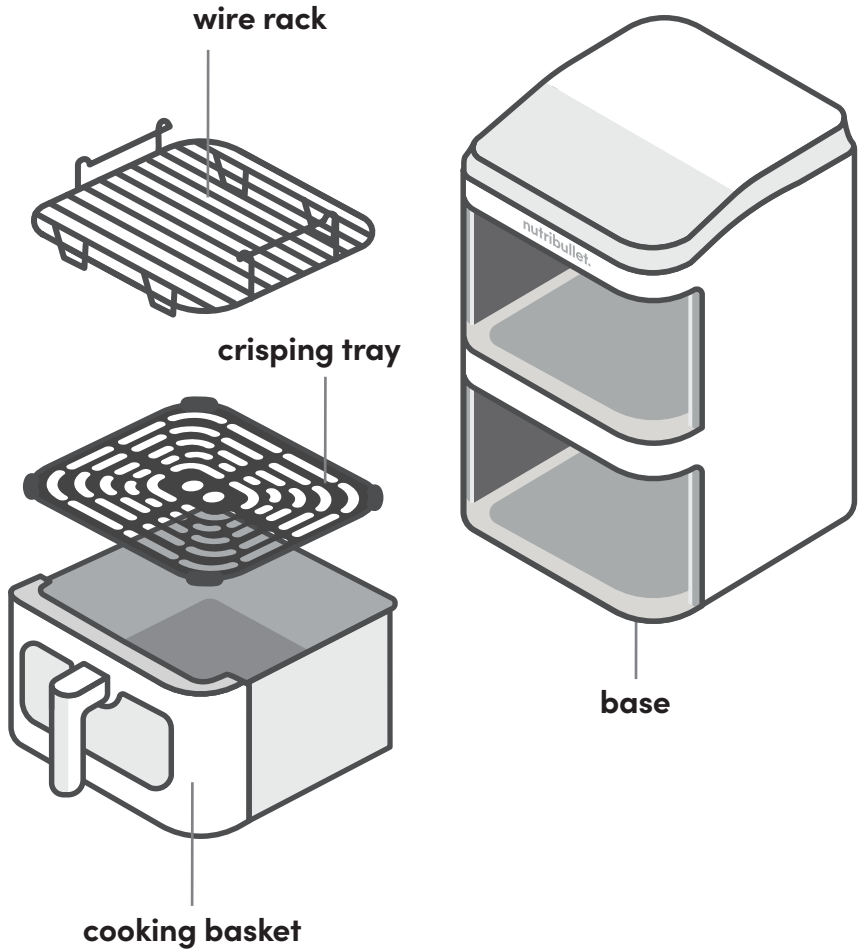

Control panel

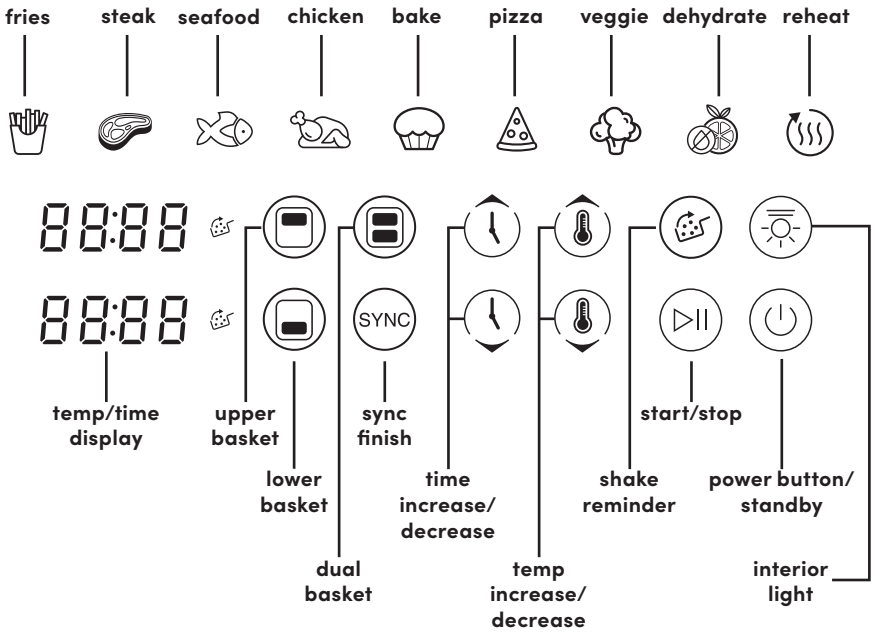

To select a cooking program, press the icon of your desired cooking program. The program will load its default time and temperature, as noted in the below table. To begin cooking, press the start/pause button.

Mode	Default Temp.	Range Temperature	Default Cooking Time	Range Cooking Time
	200°C	80°C - 200°C	20 minutes	1-60 minutes
	200°C	80°C - 200°C	15 minutes	
	180°C	80°C - 200°C	15 minutes	
	180°C	80°C - 200°C	30 minutes	
	160°C	80°C - 170°C	15 minutes	
	160°C	80°C- 200°C	20 minutes	
	180°C	80°C - 200°C	15 minutes	
	50°C	40°C - 70°C	5 hours	1 minute - 24 hours
	160°C	80°C - 200°C	10 minutes	1-60 minutes

- To change a program's cooking temperature or time after it has been selected, press the **Temp increase/ decrease** buttons to first adjust the temperature. Once desired temperature is reached, use the **Time increase/decrease** buttons to adjust your cooking time.

  When desired temperature and time are set, press the **Start/Pause** button to start cooking.

- The air fryer will enter standby mode after 10 minutes of inactivity or by pressing the **Power** button.
- Press **Start/Pause** when cooking to pause Air Fryer activity. Press **Start/Pause** again to resume.

Usage instructions

Before first use

Before using your nutribullet CrispLite™ Dual Stack 9L Air Fryer for the first time, please take a moment to perform the steps below.

1. UNPACK
Open the box and remove the Air Fryer Base, placing on a flat level, and dry surface. Open both Cooking Baskets and remove the Crisping Trays and Wire racks.

2. CLEAN
Rinse **Cooking Baskets, Trays, and Wire Racks** with hot soapy water. Wipe exterior of **Air Fryer Base** with a clean, damp cloth.

3. PREPARE COOKING AREA, ENSURE PROPER VENTILATION
Ensure the **Air Fryer** is used on a clean, dry, flat surface. Do not use the unit outdoors. The **Air Fryer** should be at least 200mm away from the wall when in operation, to ensure proper air ventilation behind the unit.

NOTE: To eliminate any new-machine odors that may be present or to thoroughly clean the inside of the Air Fryer, you can run the Air Fryer at its highest temperature about 5 minutes without putting any food inside.


NOTE: We suggest placing the unit on top of a heat proof mat to prevent risks of heat damage to surface of benchtop.

⚠ **NEVER** overfill the Cooking Basket. Leave at least 50mm of space between at the top of the Cooking Basket. Overfilling the Cooking Basket prevents the hot air from circulating, which may cause smoke and possible fire hazard. Overfilling may also cause the food to come into contact with the heating element, which may cause smoke and or possible fire. To prevent possible injury or damage, it is recommend to break up the food into smaller portions.


⚠ **CAUTION.** Thoroughly clean the Cooking Basket after each use to prevent the accumulation of oil and food debris that can create smoke and a potential fire hazard. For optimal results, apply oil directly onto the food before placing in the Cooking Basket.

Assembly


Review all warning and caution statements in the Important Safeguards section (pages 2-5) and in the section above before proceeding to Step 1.

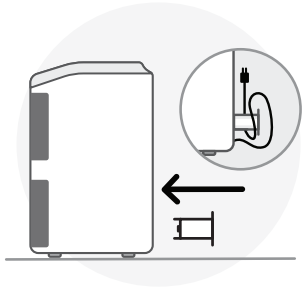

1 Install the **Cord Wrap/Wall Spacer** by snapping into place on the back of the **Air Fryer Base**. This is important to allow proper space from your wall to reduce fire risk.

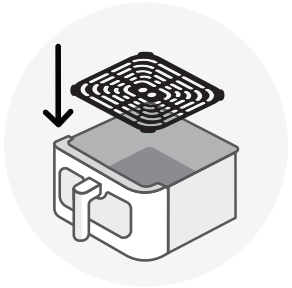


2 Insert the **Crisping Tray** into the bottom of the **Cooking Basket**. Make sure the **Crisping Tray** is seated securely and is level with the bottom of the **Cooking Basket**.

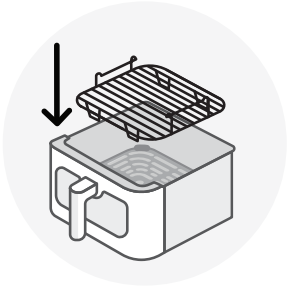


3 If using the **Wire Rack** for multi-layer cooking, first insert the **Crisping Tray** then place the **Wire Rack** inside the **Cooking Basket**, with the handles facing up.

Using the Air Fryer

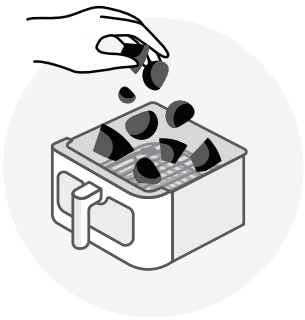


1 **Place food into the Cooking Basket, being careful not to overfill.** For best cooking results, leave at least 50mm of space between your food and the top of the **Cooking Basket**.

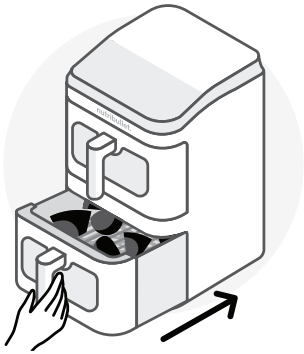

2 **Holding the Cooking Basket by the handle, place it into the Base.** Ensure the Air Fryer is properly assembled with the **Cooking Basket** fully seated inside of the **Base**.


NOTE: The Air Fryer will not operate unless the **Cooking Basket** is installed correctly.

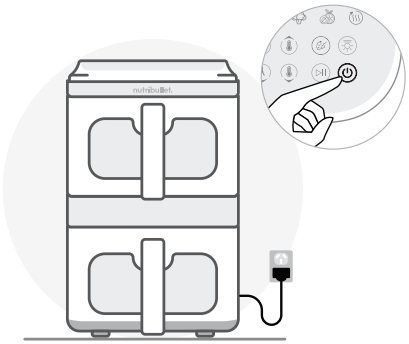

3 Plug the unit in. The display will light up for 1 second, then enter standby mode. Press the **Power** button to turn on the air fryer.



4 **Selecting a Cooking Basket:** Press the **Upper Basket** or **Lower Basket** button to select which basket to use. The selected basket indicator will flash. To cancel selection, press and hold the **Basket** button for 2 seconds.

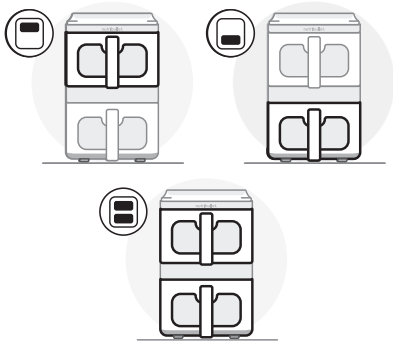

5 **Cooking with Two Baskets:**

A. Independent Cooking: Select each basket separately and set different times/temperatures. Each basket operates independently.

B. SYNC Finish: Press the **SYNC** button. The basket with the shorter cooking time will begin later so both baskets finish cooking at the same time.

C. Dual Basket Mode: Press the **Dual Basket** button. Set parameters for both baskets. Press **Start** to cook simultaneously.

NOTE: If a basket is removed during operation, cooking will pause until basket is reinserted.




6 Select a cooking program (e.g., **Fries**, **Chicken**, **Steak**, **Vegetables**, etc.). The selected program will flash, then remain solid once cooking begins.

NOTE: If both baskets use the same preset, only one icon may display.

To Change Temperature/Time Setting: To change a setting or to adjust a program's cooking temperature or time after it has been selected, press the **Temp increase/decrease** buttons to first adjust the temperature. Once desired temperature is reached, use the **Time increase/decrease** buttons to adjust your cooking time.

When desired temperature and time are set, press the **Start/Pause** button to start cooking.

NOTE: To turn on the interior light, press the **Light** icon. Press the **Light** icon again to turn the light off.
NOTE: The light automatically turns off after 15 seconds.

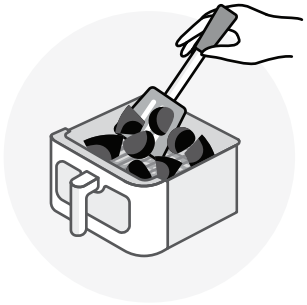




7 **TURNING FOOD DURING COOKING:** Some recipes call for taking the **Cooking Basket** out during cooking and turning food. If so, first press the **Start/Stop** button to pause the Air Fryer. When the cooking has paused, remove the **Cooking Basket** from the **Base** using the handle. Turn your food using a utensil, and place the **Cooking Basket** securely back in the **Base**. Press the **Start/Pause** button to resume cooking.

Using the Shake Reminder: When it's time to shake food: The indicator flashes and the unit beeps. Cooking continues during the reminder. Pull out the **Cooking Basket**, shake food, then reinsert the **Cooking Basket** to clear the alert. To disable/enable the shake reminder, press the **Shake** button.


⚠ **WARNING! CONTENTS MAY BE VERY HOT**. Use caution when removing the **Cooking Basket** as there may be hot steam. Keep your hands and face away from the steam and from the air vents.

⚠ **WARNING!** Food, **Cooking Basket**, **Crisping Tray**, and **Wire Rack** are hot. Always use oven gloves when handling.

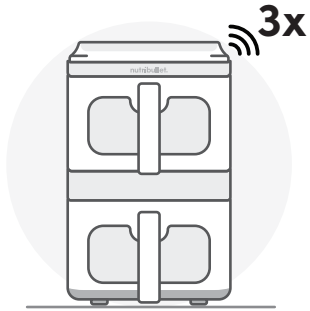

8 **Once the Air Fryer has reached the end of its cooking time, you will hear 3 beeps to alert you that the cooking has completed**. Wait a few seconds so the cooking action comes to a stop.


⚠ **WARNING!** Removing the **Cooking Basket** too quickly may result in splattering and could potentially be dangerous.

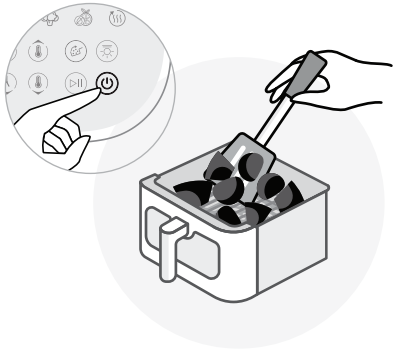


9 Remove the food from the **Cooking Basket** using a utensil – **NEVER USE YOUR HANDS**. Turn off Air Fryer by pressing and holding **Power** button until the unit powers off. Enjoy!

Care & maintenance

Cleaning the nutribullet CrispLite™ Dual Stack 9L Air Fryer is quick and easy. We recommend cleaning all removable parts after each use to reduce the buildup of residue.

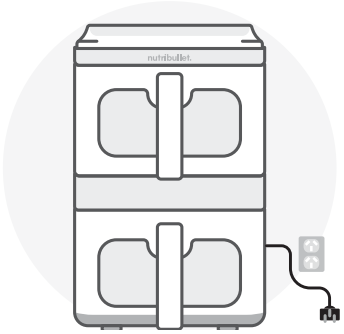


STEP 1:
Turn the Air Fryer **OFF**, unplug the unit, and allow it to cool down thoroughly after use.

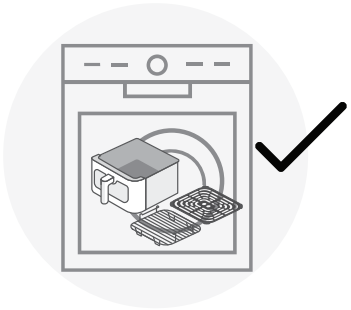

STEP 2:
Remove the **Crisping Tray** and **Wire Rack**. The **Cooking Basket, Crisping Tray,** and **Wire Rack** are **TOP RACK** dishwasher safe, or can be cleaned by rinsing in warm soapy water. **DO NOT** place the **Air Fryer Base** in the dishwasher.

⚠ **WARNING: NEVER use the sanitise cycle – heat this high can warp the plastic.**

⚠ **CAUTION: DO NOT use an abrasive or metal cleaning tool to clean the Cooking Basket, Crisping Tray, or Wire Rack. Doing so can damage the ceramic non-stick coating on the surface of these items.**

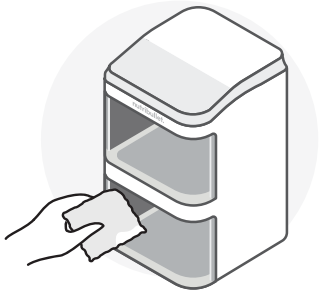

STEP 3:
Clean the inner wall of the **Air Fryer Base** by gently wiping off any residue with a warm cotton cloth, then dry it with a dry cloth. The interior and exterior of the **Base** should only be cleaned by wiping it with a damp cloth.

⚠ **CAUTION: NEVER submerge the Base in water or any other liquid.**

If required, brush the heating element with a soft-medium bristle brush to remove food particles.

STEP 4:
Once all parts have been cleaned and thoroughly dried, store the Air Fryer fully assembled in a safe, dry location.

Replacement parts

To order additional parts and accessories, please visit our website at: **bulletbrands.com.au / bulletbrands.co.nz** or feel free to contact Customer Service. Use only genuine nutribullet® attachments/ accessories specifically designed for your nutribullet® device. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.

CDB GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

CDB GROUP

NEW ZEALAND
PO Box 100-707
NSMC
Auckland 0745
0800 232 633
bulletbrands.co.nz

AUSTRALIA
PO Box 574
South Morang
Victoria 3752
1300 285538
bulletbrands.com.au

220-240V 50-60Hz 2300W

Capital Brands Distribution, LLC | nutribullet.com | All rights reserved.

nutribullet® and the nutribullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

260730_NBA07400 (NBA-400)