

Uniden®

UH610/UH615/UH620 Max Series, UHF-CB Radio

For more exciting new products please visit our website:
Australia: www.uniden.com.au

OWNER'S MANUAL

Contents

Introduction	
Features	3
Included in your Package	4
Optional Accessories	4
Controls and Indicators	5
Getting Started	
Battery Installation	6
Charging Rechargeable battery	7
Low Battery Alert	7
Power Save	7
Operation	
Power On/Off	8
Volume	8
Torch Light	8
Monitor Function	8
Selecting a channel/To Transmit and Receive	9
Keypad Lock	10
Automatic Squelch Feature	10
Scanning	10
Group Scan Mode	11
Priority Channel	12
CTCSS	13
DCS	13
Duplex Mode	14
To Operate in Duplex Mode	15
Busy Channel Lockout (BCL)	16
Call Tone	17
VOX	17
Roger Beep	18
Key Beep	18
Voice Announcements	19
Scramble Function	19
Factory Reset Procedure	20
CTCSS Codes and Frequencies	21
DCS Codes and Frequencies	22
UHF-CB Channel Guidelines, Channels & Frequencies	23-25
Warranty	26-27

Introduction

The new UH610/UH615/UH620 Max series are two-way portable UHF-CB radio. These hand held UHF-CB radios are designed to give consistent, outstanding performance in many conditions and situations. To ensure that you get the most from their features, please read this operating guide carefully before using the unit.

Key Features

- 80 Channel UHF-CB Radio¹
- 1w/1.5w/2w Max TX Power²
- Bright LCD Display
- Flash Light Torch
- USB-Type C charging
- 38/104 Built-in CTCSS/DCS codes respectively
- Duplex Mode for Repeater Access¹
- 10 Call Tones
- Open Scan/Group Scan with Priority Channel
- Add/Remove Channels from Memory
- Monitor Function
- Busy Channel Lockout Function
- VOX Function
- Key Beep
- Roger Beep
- Keypad Lock
- Voice Announcement
- Earpiece MiC Slot
- Scramble Function
- Low Battery Alert
- Power Saving
- Battery strength Indicator

¹ Refer to page 23-25 pages for channel information

² UH610Max has 1w, UH615Max has 1.5w,
UH620Max has 2w of Tx Power.

Included in your Package

Items	UH610 Max	UH610-2 Max	UH615-2 Max	UH620 Max
UH610 Radio	1	2	-	-
UH615 Radio	-	-	2	-
UH620 Radio	-	-	-	2
3 x 1000 mAh NiMH AA batteries	1	2	2	-
3 x 1200mAh NiMH AA batteries	-	-	-	2
USB Type C Cable	1	2	2	2
Belt Clip	1	2	2	2
Carabiner Clip	1	2	2	2
AC adaptor	1	1	1	1
Owners Manual	1	1	1	1



NOTE


If any of these items are missing from the box, contact your place of purchase, immediately.

Optional Accessories




- Speaker Mic
- Earpiece Mic

Visit the UH610/UH615/UH620 Max Series page on the website for more information on the availability & range of optional accessories; www.uniden.com.au

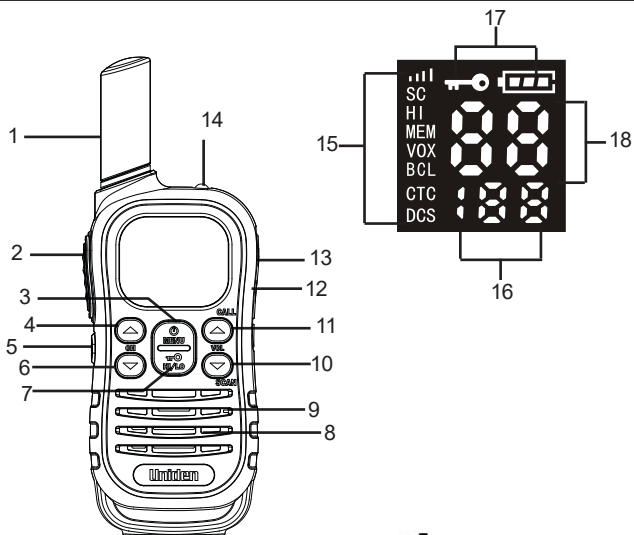Controls and Indicators



1. Antenna
2. PTT
3. Menu/Power On,OFF
4. Channel Up/Add,remove Channel Memory
5. Torch/Monitor Function
6. Channel Down/Fastforward channels
7. Power Hi,Low/Keypad Lock
8. Speaker
9. MiC
10. Volume Down/Scan
11. Volume Up/CALL
12. USB Type C Power Slot
13. Earpiece MiC slot
14. Torch Light

15.  - Tx/RX indicator
- SC**- Scramble Function
- HI** - Power High
- MEM** - Channel Memory
- VOX** - VOX enabled
- BCL** - Busy CH enabled
- CTC**- CTC code enabled
- DCS** - DCS code enabled
16. CTCSS/DCS code number
17.  - Keypad Lock
-  - Battery Indicator
18. CH number/ MENU item list

Getting Started

Battery Installation

Your UH610/UH615/UH620 Max series radios use 3 AA batteries for power. Use only good quality batteries for maximum life and range.



NOTE

BATTERY WARNING

To prevent the batteries from running down, remove them from the radio if it will not be used for long periods.



NOTE

The units can also be powered with optional 3 AA Alkaline batteries.



To avoid damage to the unit, do not mix the old and new batteries.

1. Make sure your radio is switched off
2. Remove the battery cover.
3. Insert 3 AA batteries according to the polarity symbols inside the battery compartment.
4. Replace the battery cover.



NOTE

WATER WARNING

Uniden does not represent this product to be waterproof. Do not expose this product to rain or moisture.

Getting Started

Charging Rechargeable Battery



NOTE

Do not charge alkaline or non rechargeable batteries.

Plug one end of the USB Type - C cable into the UH610/615/620 Max radios and the other end to the AC adaptor. Plug the AC adaptor into the wall outlet.

Before operating the radio, charge the rechargeable batteries for 6-7 hours without interruption.

Do not transmit when the radio is charging.

Low Battery Alert



If the battery level becomes low, the radio will give a low battery beep sound when key beep is enabled or will announce to recharge when the Voice announcement is activated. Replace the Alkaline batteries or recharge the Ni-MH rechargeable batteries immediately to continue using the radio.

Power Save

The new UH610/615/620 Max series have a unique feature of screen sleep which dramatically extend the life of the batteries. If there is no activity within 5 seconds, your radio will switch to the power saving mode by turn off the screen. The radio still able to receive transmissions in this mode.



Operation


Power On/OFF

Press and hold  to turn the Radio ON.
The channel number will appear on the display.
Press and hold  to turn the radio OFF.




Volume

The volume level can be adjusted from **V0 (min)** volume to **V7 (max)** volume. Press the volume up () and down () keys to increase or decrease the level.

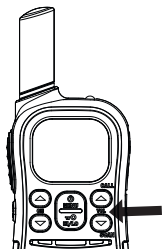


Torch Light

Press  key on the side to turn ON/OFF the torch light.
Torch light also works by the pressing the same key when the radio is powered off.

Monitor Function


This function allows the radio to quickly check the channels for any weak signals. This function acts as a disabled squelch. This can be activated/deactivated by long press the side button of the radio below PTT.

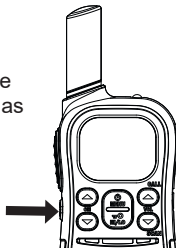

Operations

Selecting a Channel

Channels can be selected by pressing the Channel up and down key. The default channel is CH - 80 when the radio is first powered on.

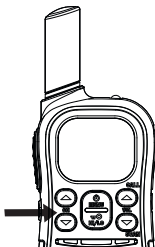

To Transmit and Receive

The new UH610/615/620 Max series uses the UHF-CB channels. Please refer to page 23-25 for UHF channel usage. (CH 22 and 23 are used for telemetry and telecommand application. Transmission is inhibited on these channels.


The transmit power for the new UH610/UH615/UH620 Max series have different levels with Tx-High and Tx-low. These levels can be selected by Pressing the Hi/Lo button.

Model	Tx-High	Tx-Low
UH610 Max	1w	0.5w
UH615 Max	1.5w	0.5w
UH620 Max	2w	0.5w



“HI” icon will appear on the screen when Tx-High level is selected. The disabled icon represent the Tx-Low.

Before you transmit, please listen for any activity on the selected channel.

When the channel is clear, press and hold **PTT** to transmit.  icon will appear on the LCD during transmission.

When you have finished with conversation, release the PTT button. TX icon will disappear from the LCD screen.

Operation

Hold the radio with microphone approximately 5cm in front of your mouth with the antenna at approximately 45° angle away from your head. Speak in a clear, normal conversational voice.




NOTE


For maximum range and extended life of the batteries, avoid touching the antenna with your hand when transmitting.

Keypad Lock

To prevent accidental entries, you can lock the keypad by long press the Hi/Lo button for 3 seconds until it beeps to activate the Key lock.

The  icon will appear on the LCD.

To unlock the keypad, press and hold Hi/Lo key again for 3 seconds.

The  icon will disappear.

Automatic Squelch Feature

The UH610/UH615/UH620Max series are equipped with an automatic squelch system which mutes the audio in the presence of a weak transmission and unwanted noise.

Scanning


The UH610/UH615/UH620Max series offer Open Scan (OS) and Group Scan (GS) functions in the radio. The Open Scan covers all the 80 Channels included in its memory during the scan whereas Group Scan covers only those channels which are stored in the memory along with Priority Channel.

The scan function scans all channels in the memory and stops on an active channel.

To initiate the Open Scan function:

Getting Started

1. Long Press the Volume Down (▼) button to start the scan function in sequential order.
2. You can change the scan direction (increasing or decreasing channel number) by pressing [▲] or [▼].
3. When SCAN finds a busy channel it pauses the scan to receive the signal and the busy channel starts flashing. When the received signal stops, the radio waits for 3 seconds to respond back, otherwise, the radio resumes scanning. When responded to the busy channel (flashing) during scan, the radio will automatically exit the scan mode and the channel will stop flashing.
4. Scan function can be disabled by Long press the volume down (▼) button again. .

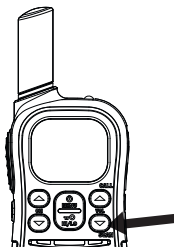

NOTE

1. To skip a busy channel, press Channel up (▲) or Channel down (▼), the scan will resume.
2. When PTT is pressed during scanning process without stopping on any busy channel, the radio will jump back to the starting channel and exit the scan mode.

Group Scan Mode

The Group Scan mode scans a group of channels stored in the memory along with the priority channel. By default, the Group Scan memory is empty.

To access the Group Scan following are the Steps.


1. Press [MENU] button three times, **GS** will start flashing.
2. Press (▲) or (▼) of either CH or VOL to select “ON”.

Getting Started

3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

To Store a channel in the Memory, Long Press the CH Up (▲) button. "MEM" icon will appear on that channel indicating that the channel has been added in the memory to scan.

To initiate the group Scan, follow the same steps as described in the scanning mode section.

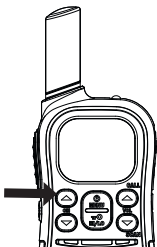

For Group Scan to work, minimum of two channels must be added to the memory.

Priority Channel

The UH610/UH615/UH620 Max series has a provision of storing a priority channel that can be scanned after every 1.5 seconds along with other memory channels during group scan.

To select the channel as a priority Channel.

1. Press **[MENU]** button Four times, "Pr" will start flashing with the default CH 05 stored.
2. Press (▲) or (▼) of either CH or VOL to select the desired channel.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Operation

Continuous Tone Coded Squelch System (CTCSS)

The CTCSS squelch codes allows a group to talk to each other without hearing other users on the same channel. The group needs to use the same code. As there are 38 CTCSS codes available, the chances of nearby users using the same code is unlikely.

Following steps are used to enable the CTCSS code.

1. Select the desired Channel.
2. Press **[MENU]** button once. "OF" and "CTC" icon will start Flashing.
3. Press (▲) or (▼) of either CH or VOL to select the desired code from 1 to 38.
4. Press **PTT** to save and exit or Press Menu again to move on to the next menu item. "CTC" icon will be enabled.

Digital Coded Squelch (DCS)

The UH610/UH615/UH620 also offers DCS codes which are the digital extension of CTCSS, providing additional 104 digitally coded squelch codes that follows after the 38 CTCSS codes.

To enable DCS:

1. Select the desired Channel.
2. Press **[MENU]** button once. "OF" and "CTC" icon will start Flashing.
3. Press (▲) or (▼) of either CH or VOL to select the desired code in such a way that if forward sequence is followed, DCS codes will start after the CTCSS (1-38) codes and if backward sequence is followed, DCS 104 code will appear with DCS icon appearing on the screen.
4. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

To disable the CTCSS/DCS codes, following steps are performed:

1. Press the **[MENU]** again, CTCSS/DCS code will start flashing.

Operation

2. Press (▲) or (▼) of either CH or VOL to select the “OF” option in the code list.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item. “**CTC/DCS**” icon will be disabled.



Channels 5 and 35 are used for emergency channels. CTCSS/DCS will not operate on these channels.

DUPLEX MODE (Repeaters)


UHF-CB Repeaters are used to retransmit or relay your signal. Repeaters will extend the range of your radio and overcome the shielding effect caused by solid obstructions.

In normal Simplex operation, your radio transmits on one particular frequency and receives on that same frequency. If there is a barrier (i.e. a Tall Building) that partially blocks your transmitted signal, the possibility of the other radio receiving the signal is very slim. Valleys, metallic structures, etc., tend to act as a screen between radios.

Standard Operation without the aid of a Repeater Station



Operation with the aid of a Repeater



Operation

With Duplex operation, the signal coming from your radio is received by the Repeater station and then re-transmitted at the same time on another channel.

For example:

1. CH01 is on Duplex Mode - will receive on CH01 but Transmit on CH31
2. CH41 is on Duplex Mode - will receive on CH41 but Transmit on CH71, etc... Refer to UHF-CB Channel & Frequencies table on p.24- p.25.



Contact your retailer for a list of repeaters available in your area.

To Operate in Duplex Mode (using a Repeater)

The duplex mode can only be activated from CH01-CH08 and CH41-CH48.

Following steps are used to activate the duplex mode.

1. Select the desired channel for the duplex function.
2. Press **MENU** button twice. “**dP**” will start flashing.
3. Press (▲) or (▼) of either CH or VOL to enable the duplex mode. If the channel range is from CH01-CH08, the duplex mode will be shown as “**r1-r8**” whereas for CH41-CH48, the duplex mode will be shown as “**n1-n8**”.
4. Press **PTT** to exit the menu mode.

Operation

To disable the duplex mode,

1. Press the Menu button twice again. “**dP**” will start flashing.
2. Press (▲) or (▼) of either CH or VOL to disable the duplex mode. The channel number will appear again instead of duplex code.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Busy Channel Lockout (BCL)

This feature prevents accidental transmission on a busy channel. This is recommended on channels where CTCSS is being used. If you hear sound from the speaker, the BCL feature will prevent you from transmitting.

To enable the feature:

1. Press **MENU** button five time. “**BCL**” icon will start flashing.
2. Press (▲) or (▼) of either CH or VOL to enable the feature from “**OF**” to “**on**”.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Operation

Call Tone Function

The Call function transmits a short “wake up” tone to notify other users of impending communication. The UH610/UH615/UH620 Max series offer 10 selectable call tones that will be transmitted when Volume Up (▲) button is long pressed.

To select different call tone:

1. Press **MENU** button six times. “**CL**” will start flashing.
2. Press (▲) or (▼) of either CH or VOL to select the desired tone.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.



NOTE

Selecting “OF” as a call tone option will disable the call tone feature from the radio.



NOTE

Current regulations require calling tones to be restricted to one transmission per minute. If a second transmission is attempted within one minute then an error tone will sound.

VOX (Built-in Voice Activated Circuit)

VOX is Voice activated transmission, where you can transmit without pressing the PTT key.

For optimum performance, use VOX when the accessory earpiece is connected.

To enable this feature:

1. Press **MENU** button seven times. “**VOX**” will start flashing on the LCD.

Operation

2. Press (▲) or (▼) of either CH or VOL to enable the feature from “OF” to “on”.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Roger Beep

Roger Beep is a beep sound that is sent to notify the end of transmission. When enabled, the radio generates a beep sound at both sender and receiver side thus notifying the end of transmission.

To activate:

1. Press **MENU** button eight times. “rb” will start flashing on the LCD.
2. Press (▲) or (▼) of either CH or VOL to enable the feature from “OF” to “on”.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Key Beep

This feature ensures the user that the keypad has been properly pressed by emitting a beep tone.

To activate:

1. Press **MENU** button nine times. “bP” will start flashing on the LCD.
2. Press (▲) or (▼) of either CH or VOL to enable the feature from “OF” to “on”.
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Operation

Voice Announcements

The UH610/UH615/UH620 Max series offer a unique feature which allows the user to listen every option they choose to operate the radio.

To activate this feature:

1. Press **MENU** button ten times. "An" will start flashing on the LCD.
2. Press (▲) or (▼) of either CH or VOL to enable the feature from "OF" to "on".
3. Press **PTT** to save and exit or Press Menu again to move on to the next menu item.

Scramble Function

The scramble feature is a voice inversion function that provides additional privacy to your communication by scrambling the transmitting frequencies which can be unscrambled successfully by tuning to the same scramble frequency at the receiver end to which it was set on the transmitting end.

The UH610/UH615/UH620 Max series offer 5 different scramble frequencies to choose from;

Scramble 1 (3300Hz), Scramble 2 (2952Hz), Scramble 3 (3039Hz), Scramble 4 (3200Hz), Scramble 5 (3400Hz).



NOTE

Scramble cannot be enabled on emergency channels 05 & 35.

Operation

To activate this feature:

1. Press **MENU** button eleven times. "Sr" will start flashing on the LCD.
2. Press (▲) or (▼) of either CH or VOL to select the desired scramble Frequency.
3. Press **MENU** key again to directly exit from the menu.

Factory Reset Procedure

Following Steps are performed to factory reset the radio.

1. Power Off the Radio
2. Press PTT and Volume Up (▲) together and Power On the radio.

The Firmware version date will appear on the screen indicating that the radio has been reset.

CTCSS Codes and Frequencies

Code No.	Frequency (Hz)	Code No.	Frequency (Hz)
"oF"	OFF	26	162.2
1	67.0	27	167.9
2	71.9	28	173.8
3	74.4	29	179.9
4	77.0	30	186.2
5	79.7	31	192.8
6	82.5	32	203.5
7	85.4	33	210.7
8	88.5	34	218.1
9	91.5	35	225.7
10	94.8	36	233.6
11	97.4	37	241.8
12	100.0	38	250.3
13	103.5		
14	107.2		
15	110.9		
16	114.8		
17	118.8		
18	123.0		
19	127.3		
20	131.8		
21	136.5		
22	141.3		
23	146.2		
24	151.4		
25	156.7		

DCS Codes and Frequencies

Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)
1	023	36	223	71	445
2	025	37	225	72	446
3	026	38	226	73	452
4	031	39	243	74	454
5	032	40	244	75	455
6	036	41	245	76	462
7	043	42	246	77	464
8	047	43	251	78	465
9	051	44	252	79	466
10	053	45	255	80	503
11	054	46	261	81	506
12	065	47	263	82	516
13	071	48	265	83	523
14	072	49	266	84	526
15	073	50	271	85	532
16	074	51	274	86	546
17	114	52	306	87	565
18	115	53	311	88	606
19	116	54	315	89	612
20	122	55	325	90	624
21	125	56	331	91	627
22	131	57	332	92	631
23	132	58	343	93	632
24	134	59	346	94	654
25	143	60	351	95	662
26	145	61	356	96	664
27	152	62	364	97	703
28	155	63	365	98	712
29	156	64	371	99	723
30	162	65	411	100	731
31	165	66	412	101	732
32	172	67	413	102	734
33	174	68	423	103	743
34	205	69	431	104	754
35	212	70	432		

UHF-CB Channel Guidelines



NOTE

Always listen on a channel (or observe the receive signal level meter) to ensure it is not already being used before transmitting.

Channels 5 and 35 are used for emergency channels.
CTCSS will not operate on these channels.

Please follow these guidelines for channel use in Australia:

- Channels 05 and 35 are Emergency Channels.
- Channel 11 is a Calling Channel.
- Channels 22 and 23 are for telemetry and telecommand applications and TX is inhibited on these channels.

General communication is accepted on all other channels with these guidelines:

- Channel 40 - road channel (Australia).
- Channels 01-08 (and 31-38), and Channels 41-48 (and 71-78) are repeater channels.

Important information - 80 Channel UHF-CB channel expansion

To provide all users additional channel capacity within the UHF-CB Band. The ACMA will change the majority of the current wideband 40 channel use to narrowband channel use. This allows for additional channels to be added, up to 80 Channels.

This simply means that the new narrowband radio you have purchased will have more channels than older radios. Please refer to the guidelines above and the channel chart for further channel information.

A list of currently authorised channels can also be obtained from the ACMA website in Australia and the MED website in New Zealand.



NOTE

Interference / Poor Audio

When a new narrowband radio receives a signal from an older wideband radio the speech may sound loud.

Narrowband radios operating on CH41 - CH80 may encounter interference from a nearby wideband radios transmitting on high power on an adjacent channel (frequency).

When an older wideband radio receives a signal from a new narrowband radio the speech may sound quiet - the wideband radio user simply adjusts their radio volume for best performance.

The above situations are not a fault of the radio but a symptom of mixed wideband and narrowband radios in current use. It is expected that as older wideband radios are phased out this issue will be eliminated.

UHF-CB Channels and Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
1	476.425	477.175 (CH31)	21	476.925
2	476.450	477.200 (CH32)	22	476.950 (RX only)
3	476.475	477.225 (CH33)	23	476.975 (RX only)
4	476.500	477.250 (CH34)	24	477.000
5	476.525	477.275 (CH35)	25	477.025
6	476.550	477.300 (CH36)	26	477.050
7	476.575	477.325 (CH37)	27	477.075
8	476.600	477.350 (CH38)	28	477.100
9	476.625		29	477.125
10	476.650		30	477.150
11	476.675		31	477.175
12	476.700		32	477.200
13	476.725		33	477.225
14	476.750		34	477.250
15	476.775		35	477.275
16	476.800		36	477.300
17	476.825		37	477.325
18	476.850		38	477.350
19	476.875		39	477.375
20	476.900		40	477.400

UHF-CB Channels and Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
41	476.4375	477.1875 (CH 71)	61	476.9375 (RX only)
42	476.4625	477.2125 (CH 72)	62	476.9625 (RX only)
43	476.4875	477.2375 (CH 73)	63	476.9875 (RX only)
44	476.5125	477.2625 (CH 74)	64	477.0125
45	476.5375	477.2875 (CH 75)	65	477.0375
46	476.5625	477.3125 (CH 76)	66	477.0625
47	476.5875	477.3375 (CH 77)	67	477.0875
48	476.6125	477.3625 (CH 78)	68	477.1125
49	476.6375		69	477.1375
50	476.6625		70	477.1625
51	476.6875		71	477.1875
52	476.7125		72	477.2125
53	476.7375		73	477.2375
54	476.7625		74	477.2625
55	476.7875		75	477.2875
56	476.8125		76	477.3125
57	476.8375		77	477.3375
58	476.8625		78	477.3625
59	476.8875		79	477.3875
60	476.9125		80	477.4125

Warranty

UNIDEN UH610/UH615/UH620 Max Series UHF CB Transceiver

IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor: The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden”).

Terms of Warranty: Uniden Aust warrants to the original retail purchaser only that the UH610/UH615/UH620 Max Series (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand.

Product	1 Year
Battery Pack & Accessories	1 Year

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Warranty

Parts Covered: This warranty covers the Product and included accessories.

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Phone: 1300 366 895

Email: custservice@uniden.com.au

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden[®]

© 2025 Uniden Australia Pty Limited. Printed in PRC.